

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KEMEI](#) /
- › [KEMEI 2242 Professional Hair Clipper User Manual](#)

KEMEI 2242

KEMEI 2242 Professional Hair Clipper User Manual

Model: KM-2242

PRODUCT OVERVIEW

The KEMEI 2242 Professional Hair Clipper is designed for precise hair cutting and beard trimming. This cordless barber clipper features an LED display, a powerful 9000 RPM motor, and a convenient charging base, providing a professional grooming experience.

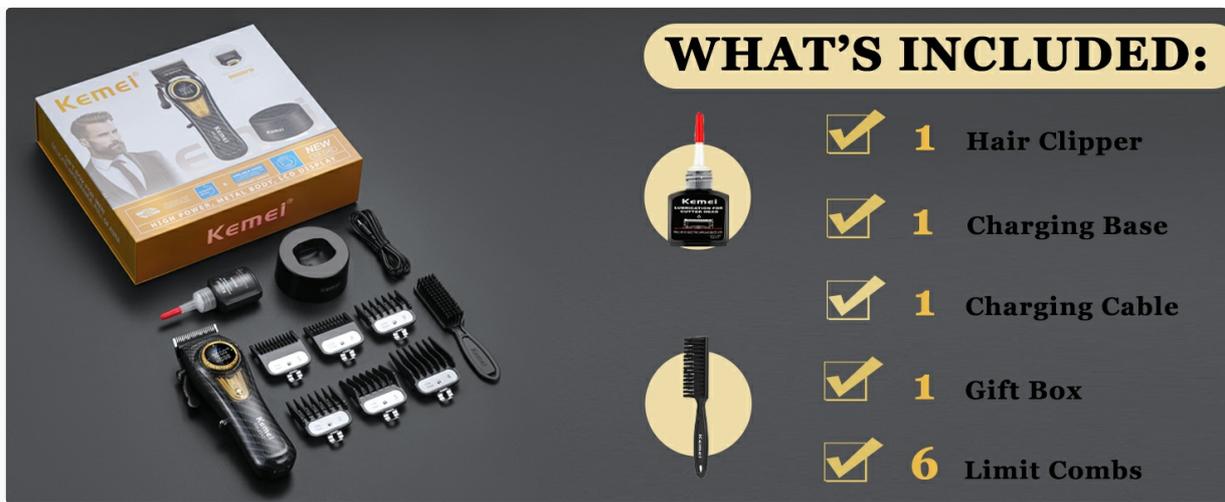


Image: KEMEI 2242 Professional Hair Clipper, showcasing its sleek design.

INCLUDED COMPONENTS

Your KEMEI 2242 Hair Clipper package includes the following items:

- 1 x Hair Clipper
- 1 x Charging Base
- 1 x USB Cable
- 6 x Limit Combs (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)
- 1 x Clean Brush
- 1 x Lubricating Oil (for blade maintenance)
- 1 x User Manual



WHAT'S INCLUDED:

- ✓ **1** Hair Clipper
- ✓ **1** Charging Base
- ✓ **1** Charging Cable
- ✓ **1** Gift Box
- ✓ **6** Limit Combs

Image: All items included in the KEMEI 2242 Hair Clipper package.

SETUP AND CHARGING

1. **Initial Charge:** Before first use, fully charge the clipper. Place the clipper on the charging base and connect the USB cable to the base and a suitable power adapter (not included). The LED display will indicate charging status. A full charge takes approximately 3.5 hours.
2. **Battery Life:** A full charge provides up to 220 minutes of cordless operation. The LED display shows the remaining battery percentage.
3. **Attaching Limit Combs:** Select the desired limit comb (1.5mm, 3mm, 4.5mm, 6mm, 9mm, or 12mm). Align the comb with the clipper blade and push firmly until it clicks into place. To remove, gently pull the comb away from the blade.



Image: The KEMEI 2242 clipper on its charging base, illustrating USB charging capability.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power switch to turn the clipper on or off.
2. **Adjusting Motor Speed:** The KEMEI 2242 features an adjustable motor speed from 5000 RPM to 9000 RPM. Use the dedicated buttons near the LED display to increase or decrease the speed. The LED display will show the current RPM.
3. **Adjusting Cutterhead:** Use the cutterhead adjustment lever on the side of the clipper to fine-tune the cutting length without a comb. This allows for precise fading and blending.

4. Hair Cutting:

- Ensure hair is clean and dry.
- Attach the appropriate limit comb for the desired length.
- Hold the clipper with the blade teeth pointing upwards and move against the direction of hair growth.
- For best results, use smooth, overlapping strokes.



Image: Close-up of the KEMEI 2242 LED display showing motor speed and remaining usage time.

Salon Grade PRO Hair Clipper



Image: Diagram highlighting the cutterhead adjustment lever, DLC coated anti-scratch blade, power switch, and high-definition LED display.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your clipper.

- Cleaning the Blades:** After each use, turn off the clipper and remove any attached comb. Use the provided clean brush to remove loose hairs from the blades.
- Oiling the Blades:** Apply a few drops of the included lubricating oil to the blades after every few uses or when the clipper feels sluggish. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain cutting efficiency and prevents rust.
- Storage:** Store the clipper in a dry, cool place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery or no charge.	Charge the clipper fully using the charging base and USB cable.
Clipper pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled.	Clean the blades thoroughly and apply lubricating oil. If the problem persists, consider professional sharpening or blade replacement.
Clipper makes unusual noise.	Blades are misaligned or debris is caught.	Turn off and clean the blades. Check for any visible obstructions. Ensure blades are properly aligned.
LED display not working.	Malfunction or low battery.	Charge the clipper. If the issue continues, contact customer support.

SPECIFICATIONS

- **Model:** KM-2242
- **Power Source:** Battery Powered (Cordless)
- **Battery Type:** 4500 mAh rechargeable battery
- **Charging Time:** Approximately 3.5 hours
- **Operating Time:** Up to 220 minutes
- **Motor Speed:** Adjustable 5000-9000 RPM (High-speed brushless motor)
- **Blade Material:** Stainless Steel (DLC Coated Anti-scratch Blade)
- **Included Combs:** 1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm
- **Display:** High-definition LED Display (shows battery, RPM)
- **Material:** Carbon Steel, Metal body
- **Dimensions:** 7.48 x 8.46 x 3.07 inches
- **Weight:** 2.18 Pounds
- **Input:** 5V --- 1A 10W

SAFETY INFORMATION

Please read and understand all safety instructions before using the KEMEI 2242 Hair Clipper.

- Always unplug the charging base before use or cleaning.
- Do not use the appliance near water or while bathing/showering.
- Keep out of reach of children.
- Do not use on other body parts not intended for hair trimming.
- Do not ingest any parts of the appliance or accessories.
- Avoid dropping the clipper, as this may damage the internal components or blades.
- If the clipper or charging cable is damaged, do not use it. Contact customer support for assistance.

WARRANTY AND SUPPORT

KEMEI products are manufactured with quality and performance in mind. For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided on the

product packaging or visit the official KEMEI website.

For further assistance, you may also contact the seller directly through your purchase platform.

© 2026 KEMEI. All rights reserved.