

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [coprisin](#) /

> [coprisin Anti Barking Devices User Manual](#)

### coprisin PU86

# coprisin Anti Barking Devices User Manual

Model: PU86



## 1. INTRODUCTION

---

Thank you for choosing the coprisin Anti Barking Device. This device is designed to help control excessive dog barking using advanced ultrasonic technology. It provides a safe and effective solution for both indoor and outdoor use, promoting a quieter environment for you and your neighbors. Please read this manual thoroughly before operating the device to ensure proper use and optimal performance.

## 2. PRODUCT OVERVIEW

---



This image displays the coprisin Anti Barking Device. It is a compact, black rectangular unit designed for dog bark deterrence. The front features a prominent speaker grille at the top, an orange LED indicator light, and a rotary knob at the bottom. The knob is labeled with 'OFF', '15khz 30khz', '20khz', and '30khz', indicating different ultrasonic frequency modes. The device appears durable and suitable for outdoor use.

### Key Features:

- **Rechargeable Battery:** Built-in 1500 mAh battery, providing up to 30 days of use on a 5-hour charge.
- **Durable & Waterproof:** IPX4 waterproof casing for outdoor resilience in various weather conditions.
- **Safe & Effective:** Utilizes advanced ultrasonic technology harmless to pets, teaching them to control barking.
- **Automatic Operation:** Automatically detects and responds to excessive barking.
- **Adjustable Modes:** Three frequency modes (15-30kHz, 20kHz, 30kHz) for different dog sizes and temperaments.
- **Wide Coverage:** Effective range of up to 33 feet.

### 3. SETUP

---

1. **Initial Charge:** Before first use, fully charge the device using the provided charging cable. The built-in 1500 mAh rechargeable battery requires approximately 5 hours for a full charge, which can last up to 30 days.
2. **Placement:** Choose an appropriate location for the device. It can be easily hung on a tree, garden fence, table, or dog house. Ensure the device is positioned to face the area where barking typically occurs, within the 33-foot effective range.
3. **Orientation:** For optimal performance, ensure there are no significant obstructions between the device and the dog.

## 4. OPERATING INSTRUCTIONS

---

The coprisin Anti Barking Device features a rotary knob to select different operating modes based on your dog's specific needs.

1. **Power On/Off:** Rotate the knob to the 'OFF' position to turn the device off. Rotate it to any of the frequency settings to turn it on.
2. **Mode Selection:** The device offers three adjustable ultrasonic frequency modes:
  - **Mode 1 (15kHz~30kHz):** This mode is generally more suitable for larger dogs or highly active dogs.
  - **Mode 2 (20kHz):** This mode is recommended for docile dogs.
  - **Mode 3 (30kHz):** This mode is best suited for small dogs.

Select the mode that corresponds to your dog's size and temperament for the most effective results.

3. **Automatic Operation:** Once a mode is selected, the device will automatically detect excessive barking within its 33-foot range and emit a harmless ultrasonic sound to deter the barking. There is no need for constant monitoring.

## 5. MAINTENANCE

---

- **Cleaning:** Wipe the device periodically with a soft, dry cloth to remove dust and debris. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The device has an IPX4 waterproof rating, meaning it is resistant to splashing water from any direction. While it can withstand rain and snow, avoid submerging it in water.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place. Ensure it is fully charged before storing to preserve battery life.

## 6. TROUBLESHOOTING

---

- **Device Not Turning On:**
  - Ensure the device is fully charged. Connect it to a power source and allow it to charge for 5 hours.
  - Verify the rotary knob is set to one of the frequency modes (15-30kHz, 20kHz, or 30kHz) and not 'OFF'.
- **Dog Not Responding to Device:**
  - **Check Placement:** Ensure the device is within 33 feet of the dog and there are no significant obstructions blocking the ultrasonic signal.
  - **Adjust Mode:** Experiment with different frequency modes (Mode 1, 2, or 3) to find the most effective setting for your specific dog. Dogs may respond differently to various frequencies.
  - **Consistency:** It may take time for your dog to associate the ultrasonic sound with their barking. Use the device consistently.
  - **Hearing Issues:** If your dog has hearing problems, the device may not be effective.

- **Short Battery Life:**

- Ensure the device is fully charged for the recommended 5 hours.
- Extreme temperatures can affect battery performance. Operate the device within recommended temperature ranges.

## 7. SPECIFICATIONS

---

<b>Brand</b>	coprisin
<b>Model Number</b>	PU86
<b>Item Weight</b>	1.6 ounces
<b>Item Package Dimensions</b>	8.35 x 6.3 x 2.32 inches
<b>Color</b>	Black
<b>Battery Capacity</b>	1500 mAh (Rechargeable)
<b>Charging Time</b>	Approx. 5 hours
<b>Usage Time (Full Charge)</b>	Up to 30 days
<b>Waterproof Rating</b>	IPX4
<b>Effective Range</b>	Up to 33 feet
<b>Ultrasonic Frequencies</b>	15-30kHz, 20kHz, 30kHz

## 8. SAFETY INFORMATION

---

- The ultrasonic sound emitted by this device is designed to be harmless to dogs and humans.
- Do not aim the device directly at human ears for extended periods.
- Keep out of reach of children.
- Do not modify or disassemble the device. This may void the warranty and pose safety risks.
- Use only the provided charging cable or a compatible charger.

