



[Manuals.plus](#) /

> [Aheadlink](#) /

> Aheadlink Android Tablet 10 inch 2-in-1 with Keyboard (Model ALYQ10SMAX) User Manual

Aheadlink ALYQ10SMAX

Aheadlink Android Tablet 10 inch 2-in-1 with Keyboard (Model ALYQ10SMAX) User Manual

Brand: Aheadlink | Model: ALYQ10SMAX

INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Aheadlink Android Tablet 10 inch 2-in-1 with Keyboard, Model ALYQ10SMAX. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.

PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- 1 x Aheadlink Android Tablet
- 1 x Bluetooth Keyboard
- 1 x Protective Leather Case
- 1 x Wireless Mouse
- 1 x Stylus Pen
- 1 x Type-C Charging Cable



Image: The Aheadlink Android Tablet displayed with its full set of accessories, including the detachable keyboard, wireless mouse, stylus pen, protective case, and charging cable.

DEVICE LAYOUT

Familiarize yourself with the physical components of your tablet:

- **Front Camera:** Located at the top center of the screen when held vertically.
- **Rear Camera:** Located on the back panel, typically in a corner.
- **Power Button:** Usually on the side edge. Press and hold to power on/off or restart.
- **Volume Buttons:** Adjacent to the power button, for adjusting audio levels.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expanding storage capacity.
- **Speakers:** Typically located on the sides or bottom for audio output.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the provided Type-C charging cable to the tablet's

charging port and plug the other end into a power adapter (not always included) or a USB power source.



Image: The back of the tablet connected to a Type-C charging cable, illustrating the charging process and the device's 6000mAh battery capacity.

2. Powering On/Off

To power on, press and hold the Power button until the screen illuminates. To power off, press and hold the Power button, then select 'Power off' from the on-screen options.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through the Android 13 setup process. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring basic security settings.



Image: The tablet screen showcasing the Android 13 operating system, featuring a clean interface and the Android mascot, indicating the latest system version.

4. Connecting Accessories (Keyboard, Mouse, Stylus)

The included keyboard, mouse, and stylus connect via Bluetooth. Ensure Bluetooth is enabled on your tablet (Settings > Connected devices > Bluetooth). Put the accessory into pairing mode (refer to the accessory's specific instructions if needed), then select it from the list of available devices on your tablet to pair.

Latest Android 13 Tablet

- Free GMS App Download
- Split Screen Function-Enhances Productivity
- UI Customization -Personalize Your Interface

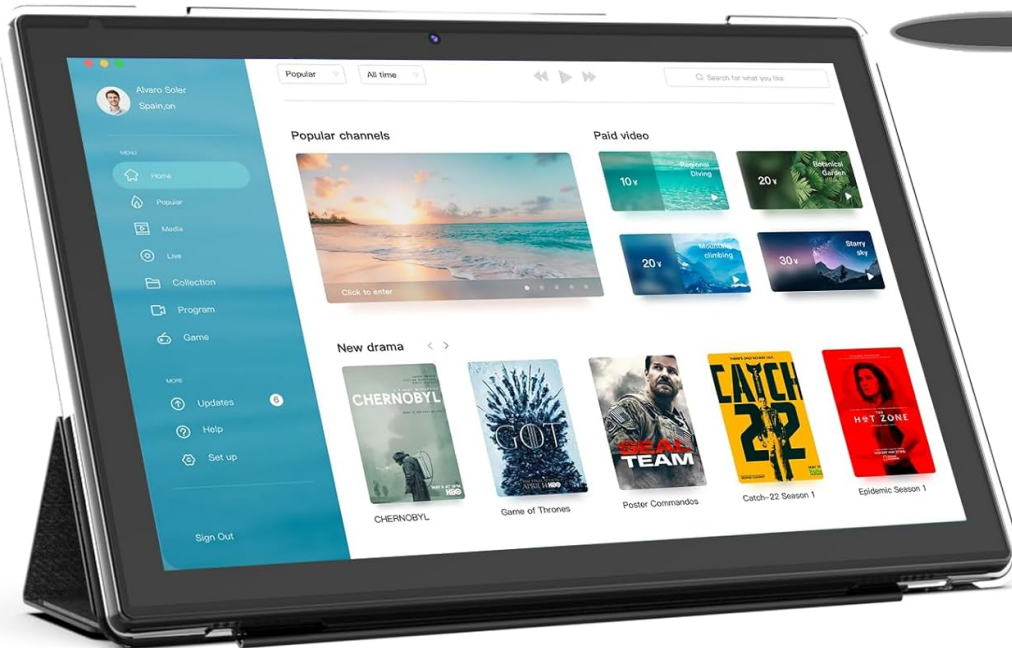


Image: The tablet positioned with its Bluetooth keyboard and wireless mouse, demonstrating the 2-in-1 functionality for enhanced productivity.

OPERATING INSTRUCTIONS

1. Navigating the Android 13 Interface

Use touch gestures to interact with the tablet: tap to select, swipe to scroll, pinch to zoom. The home screen provides quick access to apps and widgets. Swipe up from the bottom to access the app drawer, which lists all installed applications.

2. Wi-Fi Connection

To connect to a Wi-Fi network, go to **Settings > Network & internet > Internet**. Select your desired network from the list, enter the password if prompted, and tap 'Connect'. The tablet supports 2.4GHz and 5GHz Wi-Fi 6 for stable connections.



Image: A tablet with a prominent Wi-Fi signal icon, illustrating its capability for fast and stable dual-band Wi-Fi 6 connectivity.

3. Installing Applications

Your tablet is GMS certified, allowing you to download applications from the Google Play Store. Open the 'Play Store' app, search for your desired application, and tap 'Install'.



Image: The tablet screen displaying popular application icons, alongside indicators for 12GB RAM, 128GB ROM, and 1TB expandable storage, emphasizing ample space for apps and data.

4. Using the Cameras

The tablet features a 2MP front camera and an 8MP rear camera. Open the 'Camera' app to capture photos or record videos. You can switch between front and rear cameras within the app interface.



Image: The tablet screen highlighting its dual camera capabilities, specifying a 2.0MP front camera and an 8.0MP rear camera for various photography and video conferencing needs.

5. Expanding Storage

The tablet supports microSD card expansion up to 1TB. Locate the microSD card slot on the side of the tablet, insert your card gently until it clicks into place. You can then use this additional storage for photos, videos, and documents.

MAINTENANCE

1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.

2. Battery Care

To prolong battery life, avoid fully discharging the tablet frequently. Charge the device when the battery level is low, and avoid exposing it to extreme temperatures. The 6000mAh battery provides approximately 8 hours of usage.

3. Software Updates

Regularly check for software updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for and install available updates.

TROUBLESHOOTING

- **Device not powering on:** Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes, then attempt to power on again.
- **Wi-Fi connection issues:** Restart your Wi-Fi router. On the tablet, forget the network (Settings > Network & internet > Internet, tap the gear icon next to the network, then 'Forget') and try reconnecting.
- **Slow performance:** Close unnecessary background applications. Clear the cache of frequently used apps (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restarting the device can also resolve temporary slowdowns.
- **Keyboard/Mouse not connecting:** Ensure Bluetooth is enabled on the tablet and the accessories are charged and in pairing mode. Remove previous pairings from the tablet's Bluetooth settings and attempt to re-pair.
- **Screen unresponsive:** If the screen is completely unresponsive, perform a forced restart by holding down the Power button for approximately 10-15 seconds until the device powers off and restarts.

SPECIFICATIONS

Key technical specifications for the Aheadlink Android Tablet Model ALYQ10SMAX:



Image: The tablet screen emphasizing its 10.1-inch HD display with a resolution of 1280x800 pixels, providing clear visuals.



Image: The tablet with its keyboard accessory, featuring an overlay diagram illustrating the Quad-Core CPU, indicating high-speed processing capabilities.

Feature	Specification
Model Name	YQ10SMAX
Item Model Number	ALYQ10SMAX
Operating System	Android 13
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels
Processor	2.0 GHz Quad-Core
RAM	12GB (6GB + 6GB)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via MicroSD card
Wireless Connectivity	5G WiFi 6 (802.11b/g/n), Bluetooth 5.0
Battery Capacity	6000mAh
Average Battery Life	Approximately 8 Hours
Front Camera	2.0 MP
Rear Camera	8.0 MP
Dimensions (LxWxH)	10 x 7 x 1.5 inches
Item Weight	2.7 pounds

WARRANTY AND SUPPORT

Your Aheadlink Android Tablet is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty duration and coverage details. For technical support, troubleshooting assistance, or warranty claims, please contact Aheadlink customer service through the contact information provided on the product packaging or the official Aheadlink website. Keep your purchase receipt as proof of purchase for warranty purposes.

