

tokemisc S7

tokemisc S7 MP3 Player with Bluetooth User Manual

Model: S7

1. INTRODUCTION

Thank you for purchasing the tokemisc S7 MP3 Player. This device is designed to provide a portable music experience with a full touchscreen, Bluetooth connectivity, built-in speaker, and FM radio functionality. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and user satisfaction.

2. IMPORTANT SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep the device away from water and other liquids.
- Use only the provided or recommended charging accessories.
- Prolonged listening at high volume levels may cause hearing damage.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x tokemisc S7 MP3 Player with Bluetooth
- 1 x Wired Earphones
- 1 x Micro USB Cable (for charging and data transfer)
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your tokemisc S7 MP3 Player.

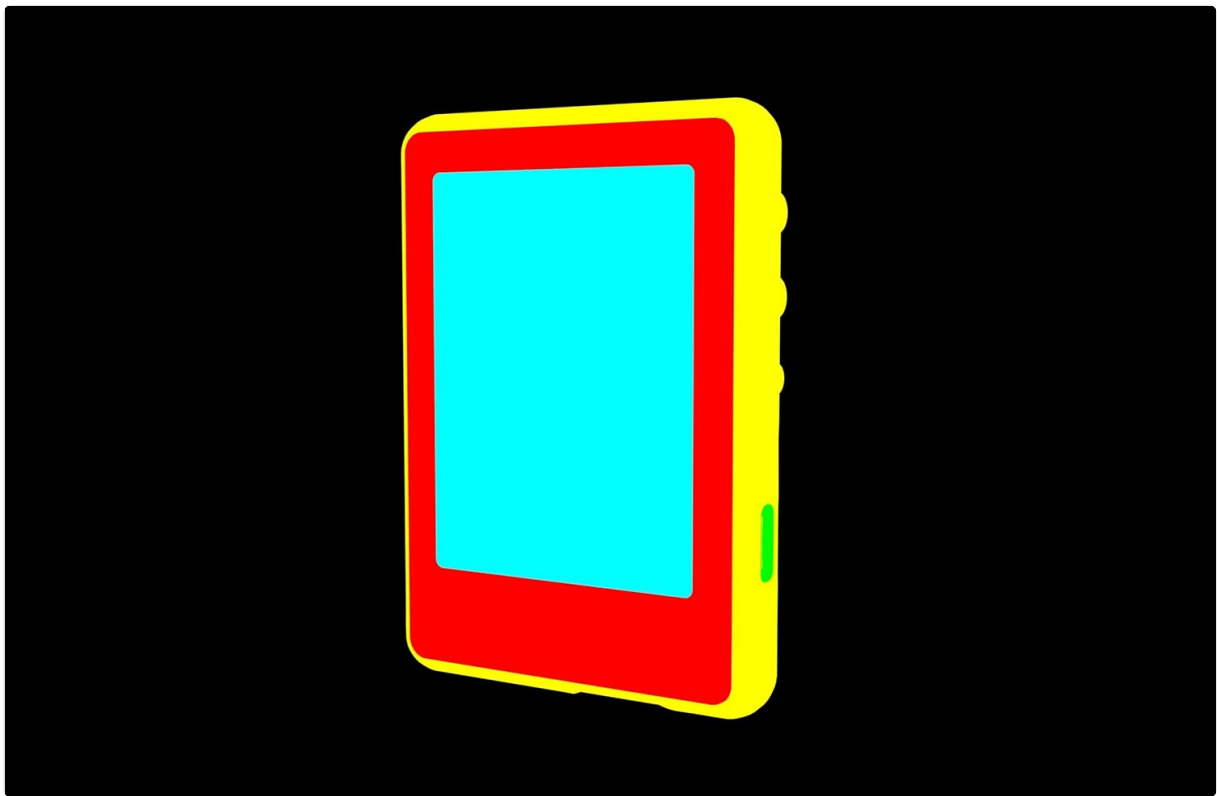


Image 4.1: Front view of the tokemisc S7 MP3 Player, showing the full touchscreen display.

This image displays the tokemisc S7 MP3 Player from the front, highlighting its large, rectangular touchscreen. The device has a sleek, dark gray casing with rounded corners, and the screen occupies most of the front surface. This is the primary interface for interacting with the device.

4.1. Device Layout (General)

- **Full Touchscreen Display:** Main interface for navigation and operation.
- **Power Button:** Typically located on the side, used to turn the device on/off and lock/unlock the screen.
- **Volume Buttons:** Usually on the side, for adjusting audio output.
- **Micro USB Port:** For charging and connecting to a computer.
- **3.5mm Headphone Jack:** For connecting wired earphones.
- **Micro SD Card Slot:** For expanding storage capacity (up to 256GB).
- **Built-in Speaker:** For audio playback without earphones.

5. SETUP

5.1. Initial Charging

1. Connect the Micro USB cable to the MP3 player's Micro USB port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. Allow the device to charge fully before first use. The battery indicator on the screen will show charging status.

5.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off option appears on the screen. Tap to confirm.
- **Screen Lock/Unlock:** Briefly press the Power button to lock or unlock the screen during operation.

5.3. Inserting a Micro SD Card (Optional)

The device supports external memory expansion up to 256GB.

1. Locate the Micro SD card slot on the side of the player.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card in until it clicks, then release, and it will spring out.

6. OPERATING INSTRUCTIONS

6.1. Basic Navigation and Gesture Operation

The tokemisc S7 features a full touchscreen with gesture-based navigation.



Image 6.1: Illustration of gesture operations on the tokemisc S7 MP3 Player.

This image shows two screens of the MP3 player demonstrating gesture controls. The left screen illustrates "Operation 1: Left side of the screen, Swipe from left to right to return." The right screen illustrates "Operation 2: Bottom of screen, Swipe from bottom to top to exit (Enter the main screen)." These gestures are crucial for navigating the device's interface.

- **Swipe Left to Right (from left edge):** Return to the previous screen or menu.
- **Swipe Up from Bottom (from bottom edge):** Exit the current application and return to the main home screen.
- **Tap:** Select an icon or option.
- **Swipe Up/Down:** Scroll through lists or content.

6.2. Music Playback

1. From the main menu, tap the "Music" icon.
2. Browse your music by Artist, Album, Songs, or Playlists.
3. Tap a song to begin playback.
4. On the playback screen, you can control volume, skip tracks, pause/play, and access playback settings (repeat, shuffle).

6.3. Bluetooth Connectivity

The device features Bluetooth 5.3 for connecting to Bluetooth headphones or speakers.

1. From the main menu, tap the "Bluetooth" icon or navigate to "Settings" > "Bluetooth".
2. Turn on Bluetooth. The player will scan for available devices.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. Select your device from the list to pair.
5. Once paired, audio will be routed through the Bluetooth device.

Note: This MP3 player cannot be paired with mobile phones or personal computers via Bluetooth.

6.4. FM Radio

To use the FM radio, ensure wired earphones are connected, as they act as the antenna.

1. Connect the wired earphones to the 3.5mm jack.
2. From the main menu, tap the "FM Radio" icon.
3. Perform an automatic search for stations or manually tune to a frequency.
4. You can save favorite stations for quick access.

6.5. Video Playback

The player supports AMV and AVI video formats.

1. From the main menu, tap the "Video" icon.
2. Browse and select a video file to play.

6.6. E-book Reader

The device supports TXT format e-books.

1. From the main menu, tap the "E-book" icon.
2. Select a TXT file to open and read.

6.7. Voice Recording

The player can record audio in MP3 and WAV formats.

1. From the main menu, tap the "Recordings" icon.
2. Tap the record button to start recording.
3. Tap again to stop and save the recording.

6.8. Settings

Access the "Settings" icon from the main menu to customize your device.

- **Language:** Select from 28 supported languages.
- **Display:** Adjust brightness, backlight timer.
- **Sound:** Adjust volume, equalizer settings, enable/disable built-in speaker.
- **Date & Time:** Set current date and time.
- **Storage:** View internal and external memory usage.
- **Factory Reset:** Reset all settings to default (this will erase user data).

7. CONNECTING TO A COMPUTER

You can connect your MP3 player to a computer to transfer music, videos, photos, and e-books.

1. Connect the MP3 player to your computer using the provided Micro USB cable.
2. The player will appear as a removable disk drive on your computer (e.g., "My Computer" on Windows, or on the desktop/Finder on Mac).
3. Drag and drop files into the appropriate folders on the player (e.g., "Music" for audio files, "Video" for video files).
4. Once file transfer is complete, safely eject the removable disk from your computer before disconnecting the cable.

Supported Systems: XP (Home Pro with SP1 SP2 SP3) 32bit / Windows 7 – 10 64bit.

8. MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

9. TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect to a charger for at least 10 minutes, then try powering on again.
Cannot connect to Bluetooth device.	Ensure Bluetooth is enabled on both devices and they are in pairing mode. Make sure the MP3 player is not trying to pair with a phone or PC. Move devices closer.
No sound from earphones/speaker.	Check volume level. Ensure earphones are properly plugged in. If using speaker, check if it's enabled in settings.
Computer does not recognize the player.	Try a different USB port or cable. Ensure the player is powered on. Restart the computer.



 


Problem	Solution
Screen is unresponsive.	Perform a soft reset by pressing and holding the power button until the device restarts. If issue persists, ensure the screen is clean and dry.

10. SPECIFICATIONS

Model	S7
Brand	tokemisc
Dimensions	2.76 x 1.9 x 0.35 inches (51.5 x 71.5 x 9.6 mm)
Weight	6.7 ounces (70g)
Screen	2.4 inch TFT LCD Touchscreen
Internal Memory	8GB (Built-in)
External Memory	Supports Micro SD up to 256GB
Bluetooth Version	Bluetooth 5.3
Battery	3.7V 500mAh Lithium Polymer
Audio Formats	MP3, WMA, APE, FLAC, WAV, OGG, ACELP
Video Formats	AMV, AVI
Picture Formats	BMP, JPG
E-book Format	TXT
Record Format	MP3, WAV
Special Features	FM Radio, Built-in Speaker, Full Touchscreen, Gesture Operation, Alarm Clock, Stopwatch, Calendar
Supported Languages	28 kinds
USB Port	Micro USB 2.0

11. WARRANTY AND SUPPORT

tokemisc products are designed and manufactured to the highest quality standards. For specific warranty information and customer support, please refer to the warranty card included in your package or visit the official tokemisc website. If you encounter any issues not covered in this manual, please contact tokemisc customer service for assistance.

	<p>Tokemisc S7 MP3 Player User Manual</p> <p>User manual for the Tokemisc S7 MP3 Player, covering getting started, basic functions, audio playback, FM radio, Bluetooth, recording, e-book reader, settings, and specifications.</p>
	<p>Tokemisc S7 Music Player User Manual</p> <p>Comprehensive user manual for the Tokemisc S7 Music Player, detailing its features, operation, and specifications. Covers introduction, getting started, charging, audio functions, music control, FM radio, Bluetooth, recording, e-book functionality, settings, and technical specifications.</p>
	<p>AI Camera Glasses User Manual</p> <p>Comprehensive user manual for the S7 AI Camera Glasses, detailing setup, pairing with the companion app, charging procedures, battery life, product features like photo and video capture, audio recording, real-time translation, maintenance, and safety guidelines.</p>
	<p>S7 Portable Dual-Screen Laptop Monitor User's Guide</p> <p>User's guide for the S7 Portable Dual-Screen Laptop Monitor, detailing product introduction, connection methods, display settings, OSD settings, and FAQs.</p>
	<p>S7 MIG-200 Operation Guide: Stick, MIG, and TIG Welding</p> <p>Comprehensive operation guide for the S7 MIG-200 welder, covering Stick (ARC) mode, MIG welding (0.8mm solid wire with CO2 gas, 0.8mm flux-cored wire, and 1.0mm flux-cored wire), and TIG welding. Learn how to set up and operate the machine for various welding tasks.</p>