

## Sonata 87058PP05

# Sonata SF Vigour 87058PP05 Quartz Digital Analog Watch User Manual

Model: 87058PP05 | Brand: Sonata

## 1. INTRODUCTION

Thank you for choosing the Sonata SF Vigour 87058PP05 Quartz Digital Analog Watch. This timepiece combines classic analog display with modern digital functionalities, offering versatility and precision. This manual will guide you through the features and operations to ensure optimal use and longevity of your watch. Key features include: LCD Display (Hour, Minute, Second, Month, Day, Week), Daily Alarm, Hourly Chime, 60-minute Countdown Timer, Dual Time, EL Backlight, 12/24 Hour Format, and Stopwatch function.

## 2. WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's components and button functions:

- **LIGHT Button:** Activates the EL backlight for illumination.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch, Timer, Dual Time).
- **START-STOP Button:** Used to start/stop functions in Stopwatch and Timer modes, and to adjust settings.
- **RESET Button:** Used to reset values in Stopwatch and Timer modes, and to adjust settings.
- **Crown:** Used for setting the analog time.



Image 1: Front view of the Sonata SF Vigour 87058PP05 watch, showing the digital and analog displays, and the four control buttons on the sides.

### 3. SETUP AND INITIAL CONFIGURATION

---

#### 3.1. Analog Time Setting

1. Pull the crown out to the first position.
2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog timekeeping.

#### 3.2. Digital Time and Date Setting

1. In normal time mode, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hour → Minute → Year → Month → Day → 12/24 Hour Format.
3. Use the **START-STOP** button to adjust the flashing value.
4. Once all settings are complete, press the **MODE** button to exit the setting mode and return to normal

time display.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Alarm Setting

1. From normal time mode, press the **MODE** button once to enter Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button to select the hour or minute digit to be set (the selected digit will flash).
3. Press the **START-STOP** button to adjust the flashing digit.
4. Press the **MODE** button to confirm and exit Alarm setting mode.
5. To activate/deactivate the alarm, press the **START-STOP** button while in Alarm mode (without flashing digits). An alarm icon will appear/disappear.

### 4.2. Hourly Chime

To activate/deactivate the hourly chime, press the **RESET** button while in Alarm mode (without flashing digits). A chime icon will appear/disappear.

### 4.3. Stopwatch Function

1. From normal time mode, press the **MODE** button twice to enter Stopwatch mode. The display will show 00:00:00.
2. Press the **START-STOP** button to start the stopwatch.
3. Press the **START-STOP** button again to stop the stopwatch.
4. Press the **RESET** button to reset the stopwatch to 00:00:00.

### 4.4. Countdown Timer

1. From normal time mode, press the **MODE** button three times to enter Timer mode.
2. To set the timer, press and hold the **RESET** button until the digits flash.
3. Press the **RESET** button to select the hour or minute digit.
4. Press the **START-STOP** button to adjust the flashing digit.
5. Press the **MODE** button to confirm the setting.
6. Press the **START-STOP** button to start the countdown.
7. Press the **START-STOP** button again to pause/resume the countdown.
8. When the timer reaches zero, an alarm will sound. Press any button to stop the alarm.

### 4.5. Dual Time

1. From normal time mode, press the **MODE** button four times to enter Dual Time mode.
2. Press and hold the **RESET** button until the hour digit flashes.
3. Press the **RESET** button to select the hour or minute digit.
4. Press the **START-STOP** button to adjust the flashing digit.
5. Press the **MODE** button to confirm and exit Dual Time setting mode.

### 4.6. EL Backlight

Press the **LIGHT** button to illuminate the digital display for a few seconds, making it visible in low-light conditions.

## 5. MAINTENANCE

### 5.1. Cleaning

Wipe the watch regularly with a soft, dry cloth to remove dust and dirt. For stubborn stains, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or solvents, as these can damage the watch's finish and seals.

### 5.2. Water Resistance

This watch is water resistant up to 50 meters (WR 50M). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating buttons while the watch is wet or submerged to prevent water ingress.



Image 2: Back view of the Sonata SF Vigour 87058PP05 watch, showing the stainless steel back case with water resistance marking (WR 50M).

### 5.3. Battery Replacement

The watch is powered by a Lithium Polymer battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified

watch technician to ensure proper sealing and water resistance.

## 6. TROUBLESHOOTING

---

- **Digital Display is Blank or Dim:** The battery may be low. Replace the battery.
- **Analog Hands Not Moving:** Check if the crown is pushed in completely. If it is, the battery for the analog movement might be depleted, or there could be a mechanical issue.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature one). If the issue persists, a battery replacement or professional inspection may be needed.
- **Time Inaccuracy:** If both analog and digital times are inaccurate, the battery may be low. If only one is inaccurate, reset the time for that specific display.

For persistent issues, please contact customer support.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	87058PP05
Watch Movement Type	Quartz
Band Material Type	Thermoplastic Polyurethane (TPU)
Band Colour	Black
Case Diameter	50 Millimetres
Item Weight	130 Grams
Product Dimensions	13 x 9 x 6 cm
Batteries	1 Lithium Polymer battery (included)
Water Resistance	50 Meters (WR 50M)
Department	Unisex
Country of Origin	India

## 8. WARRANTY INFORMATION

---

This Sonata SF Vigour watch comes with a Limited Warranty. For specific terms and conditions, please refer to the warranty card included with your purchase or visit the official Sonata website. Keep your proof of purchase for warranty claims.

## 9. SUPPORT

---

For further assistance, product inquiries, or service requests, please visit the official Sonata website or contact their customer support. You can find more information at the [Sonata Store on Amazon](#).

© 2024 Sonata. All rights reserved.