

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Sonata](#) /

> [Sonata SF Vigour Quartz Digital Analog Watch Model 87058PP04 User Manual](#)

Sonata 87058PP04

Sonata SF Vigour Quartz Digital Analog Watch User Manual

Model: 87058PP04

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Sonata SF Vigour Quartz Digital Analog Watch, Model 87058PP04. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Sonata SF Vigour watch combines classic analog timekeeping with modern digital functionalities, offering features such as alarm, chime, stopwatch, countdown timer, world time, and an EL backlight for enhanced visibility.

SAFETY INFORMATION

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Do not operate the watch buttons underwater to maintain water resistance.
- Clean the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- Keep the watch away from strong magnetic fields, as this can affect accuracy.
- The watch contains a lithium polymer battery. Do not attempt to open the watch case or replace the battery yourself. Contact authorized service personnel.

WATCH COMPONENTS

Familiarize yourself with the main components and buttons of your watch:



Image 1: Front View of the Watch. This image displays the watch face, showing both the analog hands and the digital display. The buttons for 'LIGHT', 'MODE', 'START', and 'RESET' are visible on the sides of the watch case.

- **Light Button (Top Left):** Activates the EL backlight.
- **Mode Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Timer, World Time).
- **Start Button (Top Right):** Used to start/stop functions or adjust settings.
- **Reset Button (Bottom Right):** Used to reset functions or confirm settings.
- **Analog Hands:** Display the current hour and minute.
- **Digital Display:** Shows time, date, day, and other mode-specific information.

SETUP

Initial Time Setting (Digital)

1. In Timekeeping Mode, press the **Mode** button repeatedly until the digital time display starts flashing, indicating setting mode.
2. Press the **Start** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day → 12/24 Hour Format.
3. Use the **Reset** button to adjust the flashing value. Hold the **Reset** button to change values quickly.

4. Once all settings are correct, press the **Mode** button to exit the setting mode.

Synchronizing Analog and Digital Time

The watch features synchronized movement. After setting the digital time, the analog hands should automatically adjust. If they do not, or if they are misaligned:

1. In Timekeeping Mode, press and hold the **Reset** button for approximately 3 seconds until the analog hands start moving rapidly.
2. Use the **Start** button to advance the analog hands. Press and hold to move them quickly.
3. Align the analog hands with the digital time.
4. Press the **Reset** button to confirm and exit the analog hand setting mode.

OPERATING INSTRUCTIONS

Timekeeping Mode

This is the default mode, displaying the current time (hour, minute, second), month, day, and week. Press the **Light** button to activate the EL backlight for visibility in low light conditions.

Alarm Function

1. From Timekeeping Mode, press the **Mode** button once to enter Alarm Mode. The alarm time will be displayed.
2. Press the **Start** button to toggle the alarm ON/OFF. An alarm icon will appear when ON.
3. To set the alarm time, press and hold the **Reset** button until the alarm hour flashes.
4. Use the **Start** button to adjust the hour. Press **Mode** to switch to minutes, then use **Start** to adjust minutes.
5. Press **Reset** to confirm and exit alarm setting.

Hourly Chime

In Alarm Mode, press the **Reset** button to toggle the hourly chime ON/OFF. A chime icon will appear when ON. When activated, the watch will beep every hour on the hour.

Stopwatch Function

1. From Timekeeping Mode, press the **Mode** button twice to enter Stopwatch Mode. The display will show "00:00:00".
2. Press the **Start** button to begin timing.
3. Press the **Start** button again to pause timing.
4. Press the **Reset** button to reset the stopwatch to "00:00:00".
5. To record split times, press **Reset** while the stopwatch is running. The split time will freeze while the stopwatch continues to run in the background. Press **Reset** again to return to the running stopwatch display.

Countdown Timer (60 minutes)

1. From Timekeeping Mode, press the **Mode** button three times to enter Timer Mode. The display will show the set countdown time (default 60:00).
2. To set the timer, press and hold the **Reset** button until the minutes flash.
3. Use the **Start** button to adjust the minutes (up to 60 minutes).
4. Press **Reset** to confirm the setting.
5. Press the **Start** button to begin the countdown.

6. Press **Start** again to pause the countdown. Press **Start** again to resume.
7. When the countdown reaches zero, an alarm will sound. Press any button to stop the alarm.

World Time

1. From Timekeeping Mode, press the **Mode** button four times to enter World Time Mode. The display will show a city code and its current time.
2. Use the **Start** button to cycle through different city codes (time zones).
3. The watch will display the current time for the selected city.

12/24 Hour Format

This setting can be changed during the initial time setting process. Alternatively, in Timekeeping Mode, press the **Start** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

Dual Time

The watch supports a dual time display. This feature allows you to view a second time zone simultaneously. To set the dual time:

1. From Timekeeping Mode, press the **Mode** button five times to enter Dual Time Mode.
2. Press and hold the **Reset** button until the hour flashes.
3. Use the **Start** button to adjust the hour. Press **Mode** to switch to minutes, then use **Start** to adjust minutes.
4. Press **Reset** to confirm and exit dual time setting.

MAINTENANCE

Cleaning Your Watch

Regular cleaning helps maintain the appearance and hygiene of your watch. Use a soft, lint-free cloth to wipe the watch case and strap. For the plastic strap, a mild soap solution and a soft brush can be used, followed by thorough rinsing and drying.



Image 2: Side View of the Watch. This image shows the profile of the watch, highlighting the robust plastic casing and the texture of the strap. The side buttons are also visible.

Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use, showering, and swimming in shallow water. However, it is **not** suitable for diving or snorkeling. **Do not operate any buttons while the watch is wet or submerged.**

Battery Replacement

The watch is powered by a Lithium Polymer battery. When the display becomes dim or functions become erratic, it may indicate a low battery. Battery replacement should only be performed by authorized service centers to ensure proper sealing and water resistance. Attempting to replace the battery yourself may void the warranty.



Image 3: Back View of the Watch. This image shows the stainless steel case back of the watch, engraved with "STAINLESS STEEL BACK", "WATER RESIST 50M", and the model number "87058PP04". The strap buckle is also visible.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---|--|
| Digital display is blank or dim. | Low battery. | Replace battery at an authorized service center. |
| Analog hands do not match digital time. | Analog hands require synchronization. | Refer to "Synchronizing Analog and Digital Time" in the Setup section. |
| Buttons are unresponsive. | Watch may be wet, or a temporary glitch. | Ensure watch is dry. If issue persists, try a soft reset (if applicable, or consult service center). |
| Alarm does not sound. | Alarm is turned OFF or volume is too low (if adjustable). | Ensure alarm is set to ON in Alarm Mode. |

SPECIFICATIONS

Model Number: 87058PP04

Movement: Quartz (Digital and Analog)

Case Diameter: 50 Millimeters

Band Material: Thermoplastic Polyurethane (TPU)

Band Color: Black

Water Resistance: 50 Meters (5 ATM)

Battery Type: 1 Lithium Polymer battery (included)

Product Dimensions: 13 x 9 x 6 cm

Item Weight: 130 g

Functions: LCD Display, Hour, Minute, Second, Month, Day, Week, Daily Alarm, Hourly Chime, 60-minute Countdown Timer, Dual Time, World Time, 12/24 Hr Format, Stopwatch, EL Backlight.

WARRANTY AND SUPPORT

Warranty Information

Your Sonata SF Vigour watch comes with a **6-month limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from accidents, improper use, unauthorized repairs, or normal wear and tear.

For warranty claims, please retain your proof of purchase and contact an authorized Sonata service center.

Customer Support

For further assistance or inquiries regarding your watch, please visit the official Sonata website or contact their customer service department. Contact details can typically be found on the manufacturer's website or your purchase documentation.

Manufacturer: Titan Company Limited

Address: #3, SIPCOT Industrial Complex, Hosur - 635126, Tamil Nadu, India