

[manuals.plus](#) /› [Norwii](#) /› **Norwii N76 Rechargeable Wireless Presentation Remote User Manual**

Norwii N76

Norwii N76 Rechargeable Wireless Presentation Remote User Manual

Model: N76 | Brand: Norwii

1. INTRODUCTION

Thank you for choosing the Norwii N76 Rechargeable Wireless Presentation Remote. This device is designed to enhance your presentations with seamless slide control and a powerful green laser pointer. It offers broad compatibility across various operating systems and presentation software, ensuring a smooth and engaging experience for your audience.

Please read this manual carefully to understand the features and proper operation of your new presentation remote. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Norwii N76 Wireless Presenter
- USB-A Receiver
- USB Charging Cable
- Premium Portable Case
- User Manual



Image: Norwii N76 Wireless Presenter, USB receiver, charging cable, and portable case.

3. PRODUCT OVERVIEW

The Norwii N76 features an ergonomic design with clearly labeled, tactile buttons for intuitive control during presentations. The device includes a built-in USB-A receiver for convenient storage and connectivity.



Image: Front view of the Norwii N76 presentation remote.

Key Functions:

- **Laser Pointer Button:** Activates the green laser.
- **Page Up/Down Buttons:** Navigates through presentation slides.
- **Full Screen/Black Screen Button:** Toggles full screen mode or blacks out the screen.
- **Hyperlink/Switch Window Button:** Allows opening hyperlinks or switching between active windows.
- **Volume Control:** Adjusts system volume.
- **ON/OFF Switch:** Located on the side for power management.



Image: The bumped design of the buttons on the Norwii N76 helps prevent accidental presses and allows for easy tactile identification.

4. SETUP

4.1. Connecting the USB-A Receiver

1. Locate the USB-A receiver stored inside the tail cap of the Norwii N76 presenter. Gently pull it out.
2. Insert the USB-A receiver into an available USB-A port on your computer.
3. The computer will automatically detect and install the necessary drivers. This is a plug-and-play device, so no manual driver installation is typically required.
4. Turn on the Norwii N76 presenter using the ON/OFF switch on its side.



Image: The USB-A receiver is conveniently stored within the presenter.

4.2. Charging the Device

The Norwii N76 is equipped with a built-in 360mAh rechargeable Li-ion battery. To charge the device:

1. Connect the provided USB charging cable to the charging port on the presenter.
2. Connect the other end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light will illuminate during charging and turn off once fully charged.
4. A full charge typically takes 1.5-2 hours.

360mAh

Large Capacity Battery for Durability



Image: The Norwii N76 connected to a laptop for charging, highlighting its rechargeable battery feature.



Image: The presenter indicates a low battery state, prompting for recharge.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Slide the ON/OFF switch located on the side of the presenter to the 'ON' position to power on the device. Slide it to 'OFF' when not in use to conserve battery life.

5.2. Basic Slide Control

- Press the **Page Up (▲)** button to move to the previous slide.
- Press the **Page Down (▼)** button to move to the next slide.

5.3. Laser Pointer Function

Press and hold the **Laser Pointer** button (often marked with a sun or star icon) to activate the green laser. Release the button to turn off the laser. The green laser is 8 times brighter than a red laser, providing clear visibility on most screens. *Note: The laser is not intended for use on TV screens.*



Image: The Norwii N76 in use, demonstrating its green laser pointer on a presentation screen.

5.4. Advanced Functions

- **Full Screen/Black Screen:** Press the dedicated button (often a square icon) to toggle between full screen mode and a black screen.
- **Hyperlink/Switch Window:** Use the designated button (often a chain link or window icon) to activate hyperlinks within your presentation or switch between open applications.
- **Volume Control:** Use the volume up (+) and volume down (-) buttons on the side of the presenter

to adjust the audio output of your computer.



Image: The Norwii N76 offers wide compatibility with major operating systems and presentation software.

5.5. Customizable Buttons

The Norwii N76 allows for button reprogramming via the Norwii Presenter software. This software enables you to assign custom functions to buttons for a personalized workflow. Refer to the Norwii website for software download and detailed instructions.

Key-functions Customizable

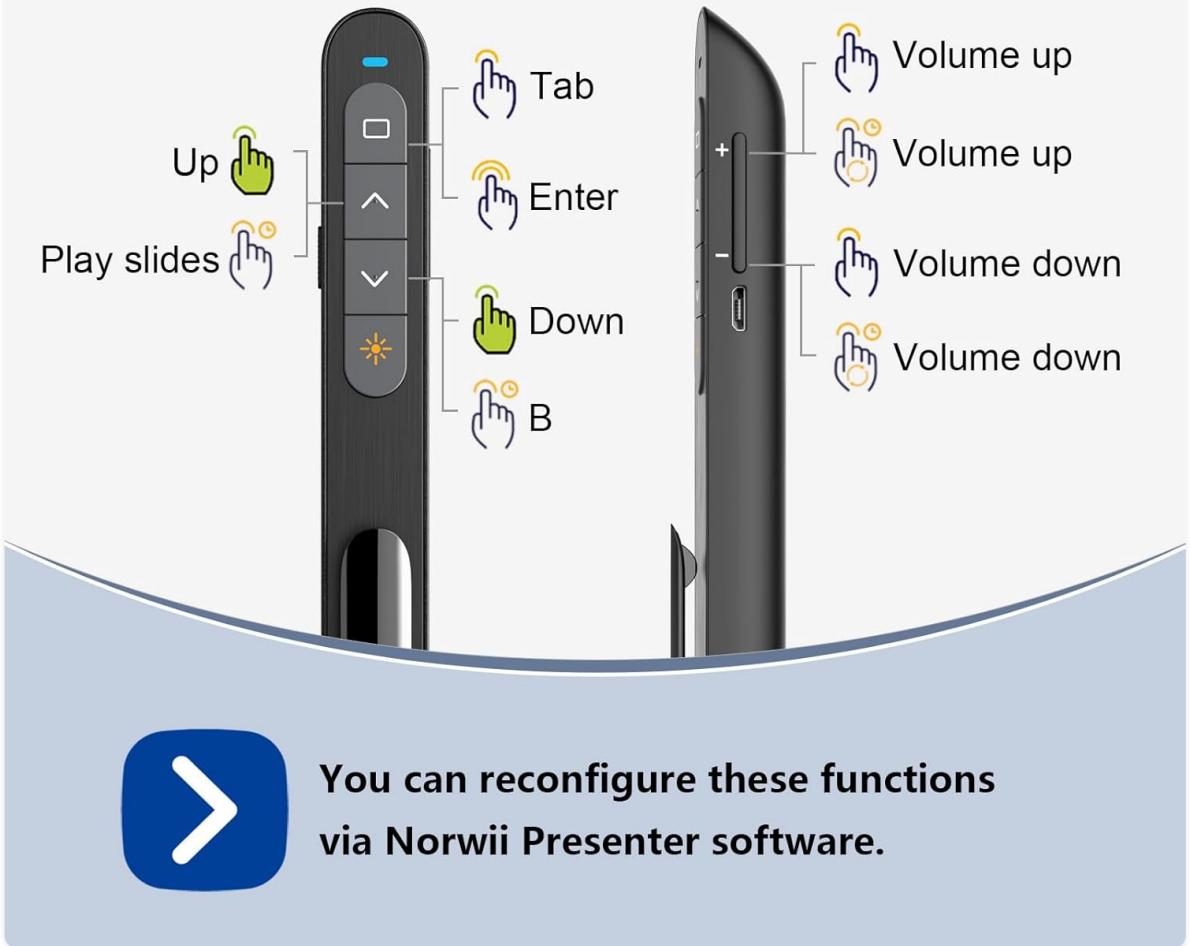


Image: Customizable key functions of the Norwii N76 via Norwii Presenter software.

6. MAINTENANCE

6.1. Battery Care

- Charge the device fully before first use.
- Avoid completely draining the battery regularly to prolong its lifespan.
- If storing the device for an extended period, charge it to approximately 50% every few months.

6.2. Cleaning

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no liquid enters the device openings.

7. TROUBLESHOOTING

If you encounter issues with your Norwii N76, refer to the following common problems and solutions:

Problem	Solution
Presenter not responding	<ul style="list-style-type: none">• Ensure the presenter is powered on.• Check if the USB receiver is securely plugged into the computer.• Verify the presenter's battery level and charge if necessary.• Try plugging the USB receiver into a different USB port.
Laser pointer not working	<ul style="list-style-type: none">• Ensure the presenter is powered on.• Check battery level.• Ensure the laser button is pressed and held.
Limited wireless range	<ul style="list-style-type: none">• Ensure there are no major obstructions (e.g., thick walls, metal objects) between the presenter and the receiver.• Avoid strong electromagnetic interference.• The effective range can be reduced in crowded environments.

8. SPECIFICATIONS

Feature	Detail
Model Number	N76
Connectivity	2.4GHz Wireless (USB-A Receiver)
Wireless Range	Up to 100 meters (328 feet)
Laser Type	Green Light (656 feet laser range)
Battery	360mAh Rechargeable Lithium Polymer
Charging Time	1.5-2 hours
Product Dimensions	5.5 x 0.7 x 0.8 inches
Item Weight	1.05 ounces
Compatible OS	Windows, macOS, Android, Linux

Feature	Detail
Compatible Software	PowerPoint, Google Slides, WPS Office, Prezi, Keynote

9. SAFETY INFORMATION

- **Laser Safety:** Do not point the laser beam directly at people or animals. Avoid direct eye exposure to the laser beam. Do not point the laser beam at highly reflective surfaces.
- **Children:** Keep the device out of reach of children.
- **Battery:** Do not attempt to replace the internal battery. Do not expose the device to extreme temperatures or direct sunlight.
- **Disposal:** Dispose of the device and its battery according to local regulations.

10. WARRANTY AND SUPPORT

Norwii products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit the official Norwii website. Please have your product model number (N76) and purchase details ready when contacting support.