



[Manuals.plus](#) /

> [HOOBRO](#) /

> HOOBRO WG76XY01 3-Section Rolling Laundry Sorter Instruction Manual

HOOBRO WG76XY01

HOOBRO WG76XY01 3-Section Rolling Laundry Sorter Instruction Manual

Model: WG76XY01 | Brand: HOOBRO

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your HOOBRO WG76XY01 3-Section Rolling Laundry Sorter. Please read this manual thoroughly before use to ensure proper functionality and longevity of the product.

PRODUCT OVERVIEW

The HOOBRO WG76XY01 is a versatile 3-section laundry sorter designed to streamline your laundry organization. It features three spacious, removable Oxford fabric bags, a sturdy frame with a top shelf, and lockable wheels for easy mobility. This unit is suitable for use in laundry rooms, bathrooms, bedrooms, dorms, or apartments.



Image: Front view of the HOOBRO WG76XY01 3-Section Rolling Laundry Sorter in white and gray.


SETUP INSTRUCTIONS

Follow these steps for proper assembly and initial setup of your laundry sorter:

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts listed in the included assembly guide are present.
2. **Frame Assembly:** Assemble the metal frame according to the provided diagrams. Ensure all screws are tightened securely.
3. **Caster Installation:** Attach the four casters to the bottom of the frame. Two of these wheels are lockable. Ensure they are securely fastened.
4. **Top Shelf Placement:** Secure the engineered wood top shelf onto the assembled frame.
5. **Bag Insertion:** Insert the three Oxford fabric bags into their designated compartments. Each bag is equipped with a bottom panel to prevent sagging and hook-and-loop fasteners for secure attachment to the frame.



Image: Diagram showing the dimensions of the HOOBRO WG76XY01 Laundry Sorter and its individual bags.

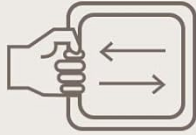

Easy to Carry

Making it convenient to transport them to the washing machine.



Image: Close-up of the lockable casters, indicating their function for stability and mobility.

OPERATING INSTRUCTIONS

Maximize the efficiency of your laundry routine with these operational guidelines:

- **Sorting Laundry:** Utilize the three distinct compartments to sort laundry by type (e.g., lights, darks, delicates). Each compartment has a capacity of 11.5 gallons (43.4L), totaling 34.5 gallons (130L).
- **Accessing Laundry Bags:** The Oxford fabric bags are designed to pull out easily from the frame. Simply grasp the handle and slide the bag forward. A stopper mechanism prevents the bags from detaching completely unless intentionally removed.
- **Removing Bags for Transport:** To transport laundry to the washing machine, unfasten the hook-and-loop tape securing the bag to the frame and lift the bag using its handles.
- **Using Side Pockets:** The laundry hamper includes three side pockets, providing additional storage for small items such as dryer sheets, stain removers, or other laundry essentials.
- **Mobility:** When moving the sorter, unlock the casters. The wheels allow for smooth movement between rooms. Lock the casters once the sorter is in its desired position to ensure stability.



Image: A hand demonstrating the pull-out and removable feature of the laundry bags.



Image: Close-up of the side pockets, highlighting their utility for storing small items.

MAINTENANCE

Regular maintenance ensures the longevity and appearance of your laundry sorter:

- **Cleaning Fabric Bags:** The Oxford fabric bags can be wiped clean with a damp cloth and mild detergent. Allow them to air dry completely before reinserting into the frame. Avoid machine washing to preserve their shape and integrity.
- **Cleaning Frame and Shelf:** Wipe the engineered wood top shelf and iron frame with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Caster Care:** Periodically check the casters for lint or debris that may hinder smooth rolling. Clean as needed. Ensure the locking mechanism functions correctly.

TROUBLESHOOTING

If you encounter any issues with your HOOBRO WG76XY01, refer to the following common solutions:

- **Bags are difficult to pull out or reinsert:** Ensure the bags are not overfilled. Check that the hook-and-loop fasteners are properly aligned and not snagging. Verify that the frame rails are clear of obstructions.
- **Squeaky or stiff wheels:** Clean any accumulated dust or hair from the caster wheels. A small amount of silicone-based lubricant can be applied to the wheel axles if necessary.
- **Product instability:** Ensure all assembly screws are tightened. Confirm that the lockable casters are engaged when the sorter is stationary. Avoid placing excessively heavy items on the top shelf or in the bags beyond the recommended weight limits.
- **Damaged or missing parts:** If any parts were damaged during shipping or are missing, please contact HOOBRO customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	31.5"L x 11.8"W x 30.3"H (80cm L x 30cm W x 77cm H)
Brand	HOOBRO
Color	White + Gray
Material	Engineered Wood, Iron
Style	Modern
Special Feature	Wheeled
Shape	Rectangular
Included Components	Handle, Lid, Wheel
Number of Pieces	3 (bags)
Theme	Modern
Number of Compartments	3
Pattern	Solid
Item Weight	14.3 pounds (6.5 Kilograms)
Capacity	34.5 Gallons (130L)
Specific Uses For Product	Laundry Room, Bedroom, Bathroom, Dorm, Apartment
Recommended Uses For Product	Storing dirty laundry, sorting clothes by type, transporting laundry to and from the laundry room
Room Type	Bathroom, Bedroom, Cloakroom, Laundry Room
Manufacturer Part Number	WG76XY01

WARRANTY AND SUPPORT

Specific warranty information for the HOOBRO WG76XY01 3-Section Rolling Laundry Sorter is not provided in the product details. For warranty claims, technical support, or inquiries regarding parts, please contact HOOBRO

customer service directly through their official website or the retailer where the product was purchased.

© 2025 HOOBRO. All rights reserved.