

DEERTIME E15

DEERTIME E15 10-inch Android 14 Tablet User Manual

MODEL: E15

1. Introduction

Welcome to the user manual for your new DEERTIME E15 10-inch Android 14 Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. The DEERTIME E15 tablet features the latest Android 14 operating system, a powerful 8-core processor, 20GB RAM, 128GB internal storage expandable up to 1TB, Wi-Fi 6, Bluetooth 5.0, and Widevine L1 support for high-quality streaming. Please read this manual carefully to ensure optimal performance and longevity of your tablet.

2. Package Contents

Verify that all items listed below are included in your package:

- 1 x DEERTIME E15 10.1-inch Tablet
- 1 x Bluetooth Keyboard
- 1 x Bluetooth Mouse
- 1 x Foldable Protective Case
- 1 x Screen Protector
- 1 x Charging Head (Power Adapter)
- 1 x USB-C Data Cable
- 1 x OTG Data Cable
- 1 x User Manual



The image above illustrates the complete contents of the DEERTIME E15 tablet package.

3. Product Overview and Key Features

The DEERTIME E15 tablet is designed for versatile use, offering a blend of performance and functionality. Below are its primary features:



An overview of the DEERTIME E15 tablet's main specifications and features.

3.1. Android 14 Operating System

The DEERTIME E15 tablet runs on the latest Android 14 system, offering enhanced privacy controls, improved system performance, and broad application compatibility. This ensures a smoother and more secure user experience.

Newest Android 14

The DEERTIME E15 tablet comes with the latest Android 14 system. The system has been improved and upgraded in terms of user interface, privacy protection, system performance and application compatibility. It makes the E15 Tablet PC have a smoother running efficiency. Provide users with a better operating experience.



Android 14

The tablet features the latest Android 14 operating system for improved performance and security.

3.2. High Performance Memory and Storage

Equipped with 20GB RAM (6GB physical + 14GB virtual expansion) and 128GB of internal ROM, the E15 tablet provides ample space and speed for multitasking and storing your files. Storage can be further expanded up to 1TB using a MicroSD/TF card.



Details on the tablet's 20GB RAM and 128GB ROM, with support for 1TB MicroSD expansion.

3.3. Advanced Connectivity

The tablet supports Wi-Fi 6 (5G+2.4G dual-band) and Bluetooth 5.0, ensuring stable and fast wireless connections for browsing, streaming, and connecting peripherals like the included keyboard and mouse.

WiFi 6 & 5G WiFi

This E15 tablet supports 5G/2.4G dual-band Wi-Fi network. It also supports WiFi6, which ensures that the network connection of the tablet can be faster and more stable. Have a better file transfer efficiency.



The tablet supports fast and stable Wi-Fi 6 connectivity.

3.4. Long-lasting Battery and Cameras

A 6000mAh battery provides extended usage times for work, study, or entertainment. Capture moments with the 8MP rear camera and enjoy video calls with the 5MP front camera.

6000mAh Large Battery



5V2A Charger




**3.5mm
Headphone Jack**



Type-C Cable



The tablet is equipped with a 6000mAh battery for prolonged use.

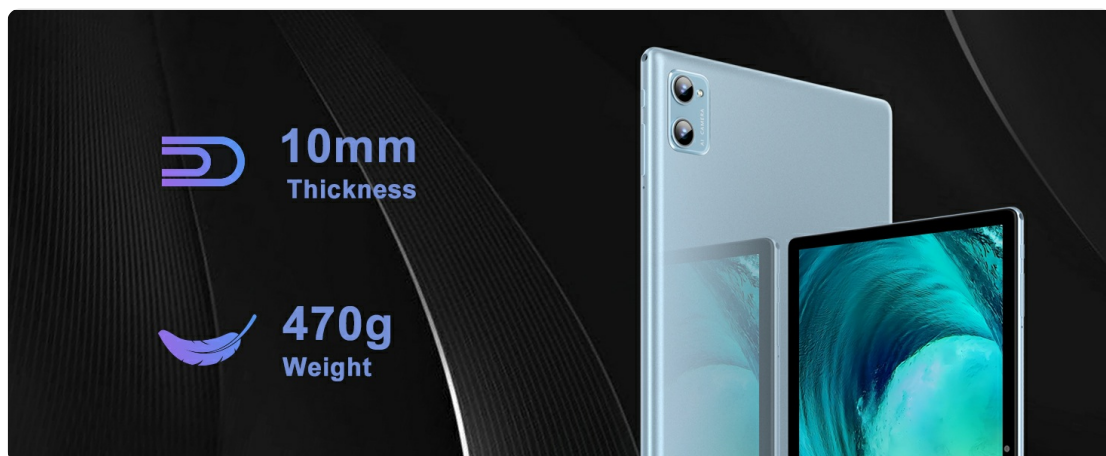

The tablet features an 8MP rear camera and a 5MP front camera for photography and video calls.

3.5. Widevine L1 Support

With Widevine L1 certification, the DEERTIME E15 tablet supports high-definition streaming from popular platforms, providing a superior viewing experience for movies and TV shows.

4. Setup

4.1. Initial Charging

1. Connect the USB-C data cable to the tablet's charging port.
2. Plug the charging head into a power outlet.
3. Allow the tablet to charge fully before first use. The battery indicator on the screen will show charging status.

4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the DEERTIME logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear, then select "Power off".
- **To Restart:** Press and hold the Power button, then select "Restart".

4.3. Initial Android Setup

Follow the on-screen prompts to complete the initial setup, including selecting your language, connecting to Wi-Fi, and signing in with your Google account.

4.4. Connecting Bluetooth Keyboard and Mouse

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth. The tablet will scan for available devices.
4. Select the keyboard and mouse from the list of available devices to pair them. Follow any on-screen pairing instructions.

4.5. Inserting a MicroSD Card

To expand storage, locate the MicroSD card slot on the side of the tablet. Gently insert a compatible MicroSD/TF card (up to 1TB) until it clicks into place. You may need to format the card via tablet settings for optimal use.

5. Operating Instructions

5.1. Basic Navigation

- **Touchscreen:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.

5.2. Wi-Fi Connection

1. Go to **Settings > Network & internet > Internet**
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if required.

5.3. Camera Usage

Open the Camera app from your home screen or app drawer. You can switch between the 5MP front camera and the 8MP rear camera. Tap the shutter button to take photos or switch to video mode to record.

5.4. Memory Management

To optimize performance, regularly check your storage usage in **Settings > Storage**. You can move files to the MicroSD card or delete unnecessary apps and data to free up space. The tablet's Memory Manager can provide cleaning suggestions.

6. Maintenance

- **Screen Cleaning:** Use a soft, lint-free cloth specifically designed for electronics. Do not use harsh chemicals or abrasive materials.
- **Battery Care:** Avoid extreme temperatures. Do not let the battery drain completely regularly, and avoid overcharging. Use the provided charger for optimal battery health.
- **Software Updates:** Keep your tablet's software updated to ensure the latest features, security patches, and performance improvements. Check for updates in **Settings > System > System update**
- **Storage Management:** Periodically review and delete unused apps, large files, and cached data to maintain optimal performance.

7. Troubleshooting

Issue	Possible Solution
Tablet does not power on	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again. If it still doesn't work, perform a hard reset by holding the power button for 10-15 seconds.
Cannot connect to Wi-Fi	Check if Wi-Fi is enabled in Settings. Restart your Wi-Fi router. Forget the network and try reconnecting. Ensure you are entering the correct password.
Bluetooth device not pairing	Ensure Bluetooth is enabled on both the tablet and the device. Make sure the device is in pairing mode. Restart both devices and try again. Check if the device is already paired with another tablet.
Tablet is slow or unresponsive	Close unnecessary background apps. Clear cache for frequently used apps. Free up storage space. Restart the tablet. If issues persist, consider a factory reset (back up your data first).
Screen is unresponsive	Restart the tablet. If the issue continues, ensure the screen is clean and free of debris. If a screen protector is installed, ensure it is properly applied and not interfering with touch sensitivity.

8. Specifications

Feature	Detail
Brand	DEERTIME
Model Number	E15
Operating System	Android 14
Processor	Octa Core 1.8 GHz
RAM Size	20 GB (6GB + 14GB Virtual)
Storage Capacity	128 GB
Expandable Memory	Up to 1 TB (MicroSD/TF)
Screen Size	10.1 Inches

Feature	Detail
Max Display Resolution	1280x800 pixels
Screen Type	IPS LCD
Screen Aspect Ratio	16:10
Rear Camera	8 MP
Front Camera	5 MP
Video Capture Resolution	HD 720p (Rear), HD 540p (Front)
Battery Capacity	6000 mAh
Average Battery Life	7 Days (Standby)
Wireless Technology	Wi-Fi 6 (802.11ax, 5G+2.4G), Bluetooth 5.0
Hardware Interface	USB-C
Special Features	Widevine L1, 2-in-1 with Keyboard and Mouse
Color	Blue-AC

9. Warranty and Support

9.1. Limited Warranty

The DEERTiME E15 tablet comes with a limited warranty. Please refer to the warranty card included in your package or contact the seller for specific terms and conditions regarding warranty coverage.

9.2. Customer Support

For any technical assistance, troubleshooting beyond this manual, or warranty claims, please contact DEERTiME customer support through the retailer where you purchased the product. Keep your purchase receipt and product model number (E15) handy when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question