

Qaba 350-184V80GN

Qaba Corner Pretend Play Kitchen (Model 350-184V80GN) Instruction Manual

Your guide to assembly, operation, and care for an engaging play experience.

INTRODUCTION

Thank you for choosing the Qaba Corner Pretend Play Kitchen. This playset is designed to provide children aged 3+ years with an immersive and interactive cooking experience. Featuring realistic lights, sounds, and various appliances, this manual will guide you through the setup, operation, and maintenance to ensure safe and enjoyable play.

SAFETY INFORMATION

No specific safety warnings are applicable beyond general toy safety guidelines. Always supervise children during play. Ensure all parts are securely assembled before use. Keep small parts away from children under 3 years old to prevent choking hazards. Regularly inspect the playset for any loose or damaged components.

PRODUCT FEATURES

The Qaba Corner Pretend Play Kitchen is equipped with a variety of interactive and realistic features:

- **Interactive Range Hood and Stove:** Features realistic lights and sounds for an engaging cooking experience.
- **Chalkboard:** A functional chalkboard for writing menus or drawing.
- **Ice Maker:** Dispenses pretend ice cubes for added realism.
- **Appliances:** Includes a microwave, refrigerator, oven, and washing machine with opening doors.
- **Functional Faucet and Sink:** Teaches children about cleanliness during play.
- **Ample Storage:** Shelves and cabinets provide space for organizing play accessories.



Image: Full view of the Qaba Corner Pretend Play Kitchen, showcasing its L-shaped design with refrigerator, stove, sink, and various compartments.



Image: Close-up of the play kitchen's range hood and stove, highlighting the interactive lights and sound functions.



Image: A detailed view of the chalkboard integrated into the side of the play kitchen, showing a child's drawing.



Image: A composite image showing the various realistic appliances of the play kitchen, including the refrigerator, microwave, oven, washing machine, and ice maker.



Image: Close-up of the play kitchen's sink and faucet area, demonstrating the wash area feature.

Your browser does not support the video tag.

Video: An overview of the Qaba Kids Kitchen Playset, demonstrating its various features and interactive elements in use.

PACKAGE CONTENTS

Upon opening the package, please ensure all the following components are present:

- Chalkboard
- Range Hood
- Ice Maker
- Stove
- Refrigerator
- 4-piece accessory set (pots, pans, utensils)



Image: The 4-piece kitchen accessory set, including a pot, pan, and two utensils, designed for use with the play kitchen.

ASSEMBLY INSTRUCTIONS

Assembly of the Qaba Corner Pretend Play Kitchen is required. Please follow the detailed instructions provided in the separate assembly manual included with your product. Ensure all screws are tightened securely but do not overtighten. It is recommended to assemble the playset on a soft, clean surface to prevent scratches.

OPERATING YOUR PLAY KITCHEN

This play kitchen offers various interactive elements for an enhanced play experience:

- **Stove:** Press the buttons on the stove burners to activate realistic cooking sounds and lights.
- **Range Hood:** Press the buttons on the range hood to turn on the light and fan sound.
- **Ice Maker:** Place a cup under the dispenser and press the lever to dispense pretend ice cubes.
- **Sink and Faucet:** The faucet can be moved, and the sink basin can be used for pretend washing.
- **Chalkboard:** Use chalk (not included) to write or draw on the chalkboard surface.
- **Appliances:** Open and close the doors of the refrigerator, microwave, oven, and washing machine for imaginative play.

Maintenance and Care

To ensure the longevity and cleanliness of your Qaba Corner Pretend Play Kitchen, follow these guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** Store the playset in a dry environment, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** The interactive features require 6 LR44 batteries (included). Replace batteries when lights dim or sounds become faint. Ensure correct polarity when inserting new batteries.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight.

Troubleshooting

If you encounter any issues with your play kitchen, please refer to the following common solutions:

- **Lights/Sounds Not Working:** Check if the batteries are correctly installed and not depleted. Replace batteries if necessary. Ensure the power switch (if applicable) is in the 'ON' position.
- **Loose Parts:** Re-tighten any loose screws or connections. Do not overtighten.
- **Missing Components:** Refer to the 'Package Contents' section. If any parts are missing, contact customer support.

Product Specifications

Feature	Detail
Model Number	350-184V80GN
Product Dimensions	39.4 x 42.9 x 43.3 inches (L x W x H)
Item Weight	76 pounds
Recommended Age	36 months - 8 years
Batteries Required	6 LR44 batteries (included)
Manufacturer	Aosom LLC






Image: Diagram illustrating the overall dimensions of the Qaba Corner Pretend Play Kitchen.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the contact details provided in your purchase documentation or visit the official Qaba website. Keep your proof of purchase for any warranty claims.

Related Documents - 350-184V80GN

 <p>The cover of the assembly instructions for the Qaba Play Kitchen Set 350-079. It features the Qaba logo at the top left, the model number 350-079 in the top right, and a line drawing of the kitchen set. Below the drawing are two warning icons: a triangle with an exclamation mark and a circle with a slash. The text 'ATTENTION' is visible next to the first warning icon.</p>	<p>Qaba Play Kitchen Set 350-079 Assembly Instructions</p> <p>Comprehensive assembly instructions for the Qaba 350-079 Play Kitchen Set. Includes parts list, hardware details, and step-by-step guidance for adult assembly.</p>
 <p>The cover of the assembly instructions for the Qaba 350-141V00 Kids Play Kitchen Set. It features the Qaba logo at the top left, the model number 350-141V00 in the top right, and a line drawing of the kitchen set. Below the drawing are two warning icons: a triangle with an exclamation mark and a circle with a slash. The text 'ATTENTION' is visible next to the first warning icon.</p>	<p>Qaba 350-141V00 Kids Play Kitchen Set Assembly Instructions</p> <p>Comprehensive assembly guide for the Qaba 350-141V00 Kids Play Kitchen Set. This manual provides a detailed parts list, hardware inventory, and step-by-step instructions for adult assembly, ensuring a safe and fun play experience for children aged 3-6 years. Includes contact information for Aosom customer care.</p>
 <p>The cover of the assembly instructions and safety guide for the Qaba 350-142V00_350-142V01 Play Kitchen. It features the Qaba logo at the top left, the model number 350-142V00_350-142V01 in the top right, and a line drawing of the kitchen set. Below the drawing are two warning icons: a triangle with an exclamation mark and a circle with a slash. The text 'ATTENTION' is visible next to the first warning icon.</p>	<p>Qaba 350-142V00_350-142V01 Play Kitchen Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions, safety warnings, and care information for the Qaba 350-142V00_350-142V01 wooden play kitchen. Includes parts list, hardware details, and step-by-step assembly guidance.</p>
 <p>The cover of the owner's manual for the Qaba 370-414V80 Children's Electronic Toy Car. It features the Qaba logo at the top left, the model number 370-414V80 in the top right, and a line drawing of the toy car. Below the drawing are two warning icons: a triangle with an exclamation mark and a circle with a slash. The text 'ATTENTION' is visible next to the first warning icon. The title 'CHILDREN'S ELECTRONIC TOY CAR' is prominently displayed.</p>	<p>Qaba 370-414V80 Children's Electronic Toy Car - Owner's Manual</p> <p>This owner's manual provides essential information for the Qaba 370-414V80 Children's Electronic Toy Car, including assembly instructions, safe operation guidelines, charging procedures, maintenance tips, and troubleshooting advice.</p>



[Qaba 311-034 Toy Box Kids Seat Bench Storage Chest Assembly Instructions](#)

Assembly instructions and safety information for the Qaba 311-034 wooden toy box and kids seat bench storage chest. Includes part lists, hardware details, and maintenance care.



[Qaba Kids Dressing Table and Chair Set Assembly Instructions and Safety Information](#)

Detailed assembly instructions, safety warnings, and care guide for the Qaba Kids Dressing Table and Chair Set (Model 316-001V00/316-001V80). Includes parts list, hardware details, step-by-step assembly guidance, and contact information for Aosom.