



Manuals.plus /

› **Rafow** /

› Rafow 4-in-1 Electric Milk Frother Instruction Manual

Rafow N32

Rafow 4-in-1 Electric Milk Frother Instruction Manual

Automatic Milk Steamer for Hot & Cold Coffee Foam, Milk Warmer Foamer

PRODUCT OVERVIEW

The Rafow 4-in-1 Electric Milk Frother is designed to create various milk textures for your favorite beverages, including lattes, cappuccinos, and hot chocolate. Its intuitive design and multiple functions make it a versatile addition to any kitchen.



The Rafow 4-in-1 Electric Milk Frother, ready for use.

SETUP

Before first use, ensure all packaging materials are removed and the frother is clean. Follow these steps to prepare your frother:

1. **Attach the Whisk:** Carefully place the frothing whisk onto the spindle at the bottom of the frother's interior. Ensure it is securely seated.



Visual guide for installing and removing the frothing whisk.

- Add Milk:** Pour the desired amount of milk into the frother. Observe the internal MAX and MIN markings for frothing (2.5oz/75ml to 4.5oz/130ml) and heating (up to 10oz/300ml for chocolate milk). For best frothing results, it is recommended to use whole milk with a fat content greater than 3%.

300ml LARGE CAPACITY

Ensure flexibility to froth more or less milk according to your preference



Internal markings indicate maximum and minimum milk levels for frothing and heating.

3. **Secure the Lid:** Place the lid firmly on top of the frother.

Official product video demonstrating whisk attachment, milk pouring, and various frothing modes.

OPERATING INSTRUCTIONS

The Raflow Milk Frother features a simple one-button operation to select your desired milk preparation mode. The device will automatically shut off once the process is complete.

Available Modes:

- **Hot Dense Milk Foam:** Press the power button once. The indicator light will turn red. This mode creates a rich, thick foam ideal for cappuccinos.


HOW TO REMOVE THE WHISK



Mode 1: Hot Dense Milk Foam, perfect for a creamy cappuccino.

- **Hot Airy Milk Foam:** Press the power button twice. The indicator light will turn red. This mode produces a lighter, airy foam suitable for lattes.

HOW TO INSTALL THE WHISK

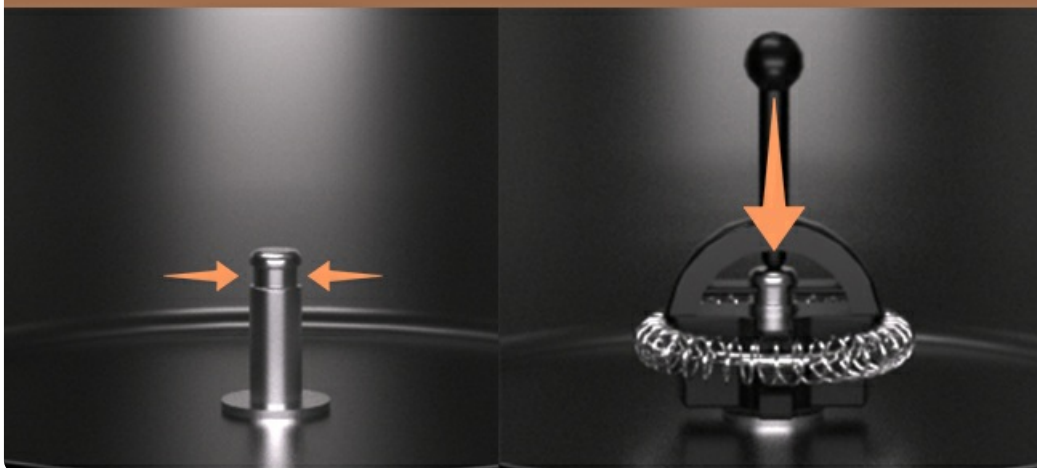

Mode 2: Hot Airy Milk Foam, ideal for a light and fluffy latte.

- **Heating Chocolate Milk:** Press the power button three times. The indicator light will turn red. This mode heats milk and mixes in chocolate powder for a smooth hot chocolate.



Mode 3: Heating Chocolate Milk, for a perfectly warm and mixed beverage.

- **Cold Thin Milk Foam:** Press the power button four times. The indicator light will turn blue. This mode creates cold foam without heating, perfect for iced coffees and cold beverages.



Mode 4: Cold Thin Milk Foam, for refreshing iced drinks.

The upgraded magnetic frothing technology ensures finer and more perfect milk foam in approximately 2-3 minutes.

MAINTENANCE

Proper cleaning and maintenance will extend the life of your Rafo Milk Frother.


- **Easy-to-Clean Design:** The frother features an ABS outer shell and a non-stick coated stainless steel interior for easy cleaning.
- **Cleaning the Interior:** After each use, rinse the interior with water. Use the included cleaning brush and a soft sponge with mild dish detergent to clean the non-stick coating. Avoid using wire scrubbers or abrasive materials that could damage the surface.
- **Cleaning the Exterior:** Wipe the exterior of the frother with a damp towel. **Important:** Do not immerse the frother's base or exterior in water, as this can damage the electrical components.
- **Hand Wash Only:** This appliance is not dishwasher safe. Always hand wash.

EASY TO CLEAN

The included cleaning brush ensures easy maintenance



SUS 304
Non-stick coating

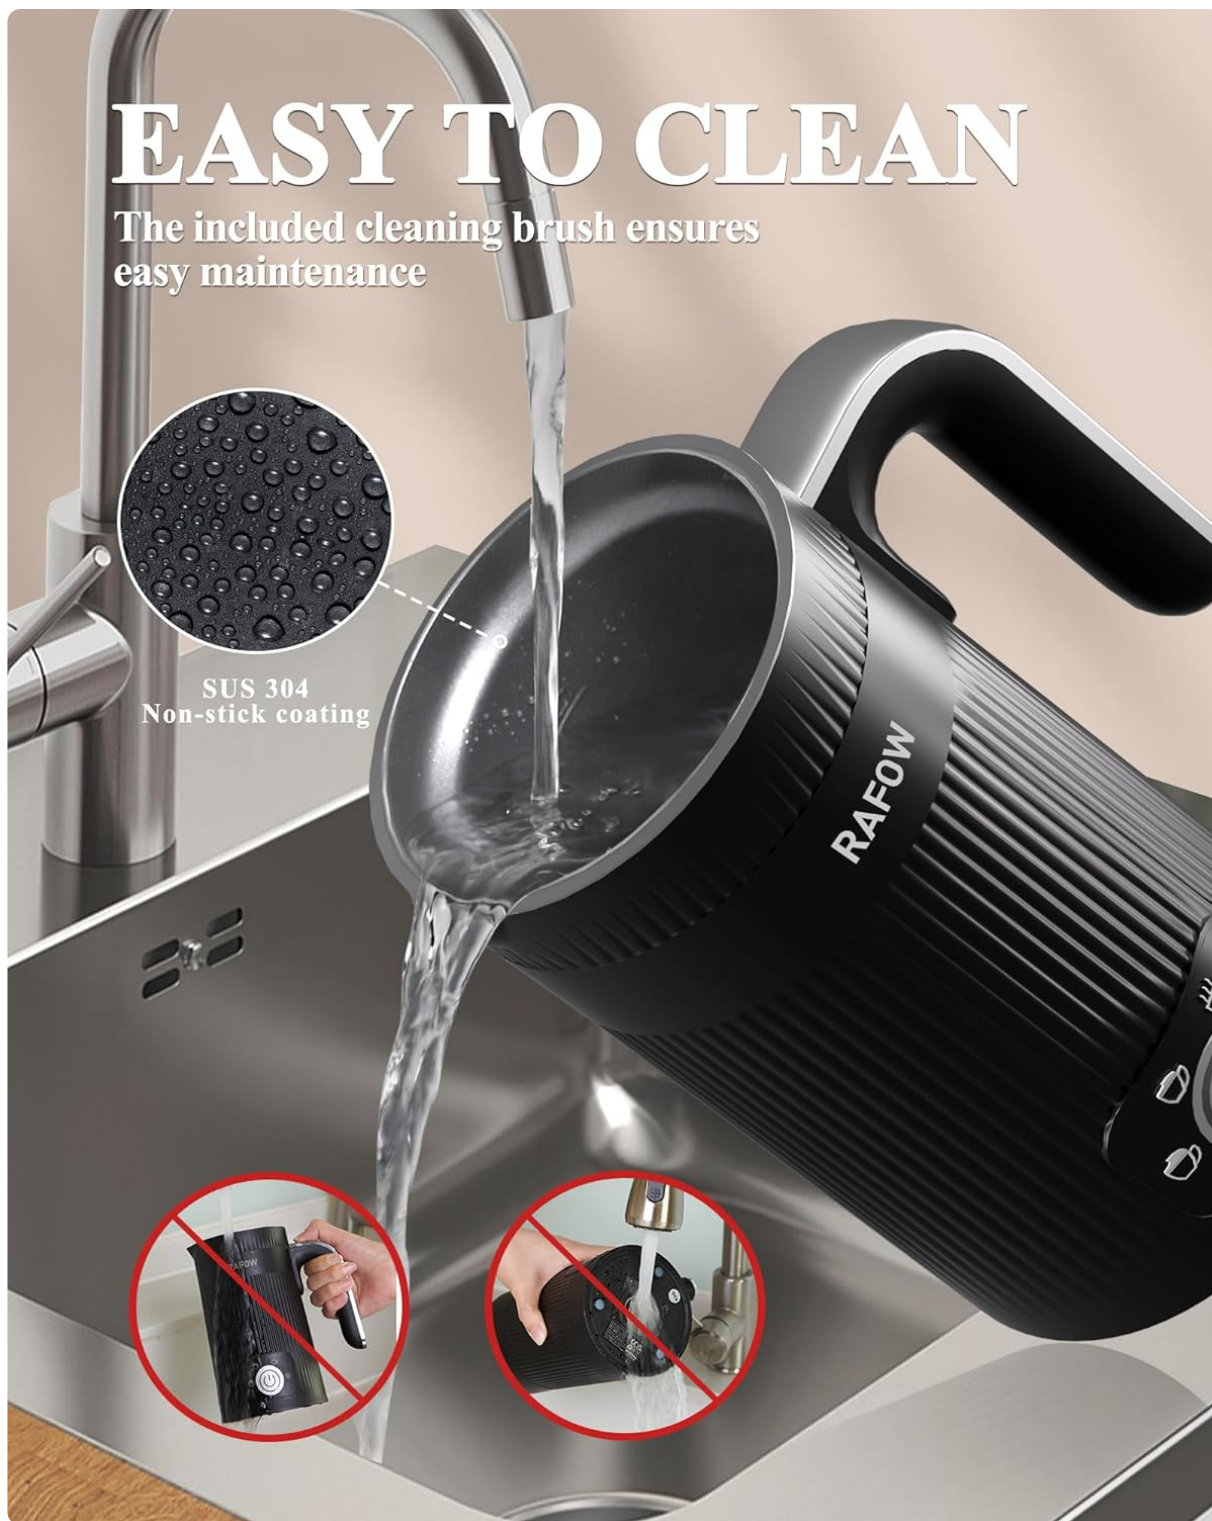

The non-stick interior allows for easy cleaning with the provided brush.

RAFOW 4IN1 MILK FROTHER

Must-have for anyone seeking cafe-quality drinks at home



Detailed cleaning instructions, emphasizing not to immerse the base in water.

TROUBLESHOOTING

If you encounter any issues with your Rafow Milk Frother, please refer to the following common solutions:

- **Frother not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the frother is properly seated on its base.
- **Milk not frothing or heating:** Verify that the whisk is correctly installed. Ensure the milk level is within the MIN and MAX markings. For frothing, use whole milk with sufficient fat content (>3%).
- **Excessive foam or overflow:** Do not exceed the MAX fill line for frothing. Different milk types may produce varying amounts of foam.
- **Unusual noise during operation:** Ensure the whisk is properly seated and there are no foreign objects inside the frother.

If the problem persists, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Rafow
Model Name	N32
Special Feature	Auto Shut-Off, Non-Stick
Color	Black
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Capacity	280 ml/min (general), 350mL (max heat milk), 130mL (max frothing milk), 100mL (min frothing milk)
Power Source	Corded Electric
Wattage	500 watts
Product Care Instructions	Hand Wash Only
Item Weight	2.09 pounds
Package Dimensions	8.15 x 6.61 x 5.47 inches

WARRANTY & SUPPORT

The Rafow 4-in-1 Electric Milk Frother typically comes with a 2-year extended warranty. Please refer to the warranty card included in your product packaging for specific registration instructions, usually involving scanning a QR code to register on the Rafow website with your Amazon order number.

For any product inquiries, technical support, or warranty claims, please contact Rafow customer service through the official channels provided with your purchase or on the manufacturer's website.