

Fleafer C15

Fleafer 56MP FHD 1080P Digital Camera C15 User Manual

Model: C15

INTRODUCTION

 
This manual provides detailed instructions for the operation and maintenance of your Fleafer C15 Digital Camera. Designed for ease of use, this camera captures high-quality photos and videos, making it ideal for beginners and young photographers.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x Fleafer C15 Digital Camera
- 2x Batteries (Lithium Ion)
- 1x 32GB TF Card
- 1x USB Cable
- 1x Lanyard
- 1x Camera Bag
- 1x User Manual (this document)

Packing List

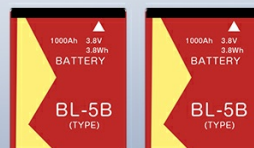

2x Batteries



1x 32GB TF card



1x USB cable



1x User Manual



1x kids digital camera

Image: Contents of the Fleafer C15 Digital Camera package, including the camera, two batteries, a 32GB TF card, USB cable, lanyard, and bag.

PRODUCT OVERVIEW

The Fleafer C15 Digital Camera is equipped with advanced features for capturing memorable moments:

- **High Resolution:** 56 Megapixel photos and Full HD 1080P videos.
- **Digital Zoom:** 16x digital zoom for capturing distant subjects.
- **Anti-Shake:** Digital image stabilization to reduce blur from camera movement.
- **Smart Features:** Face recognition, smile detection, continuous shooting, and self-timer.
- **Built-in Fill Light:** Enhances image quality in low-light conditions.
- **Compact Design:** Lightweight and portable for everyday use and travel.

FHD 1080P & 56MP

Advanced CMOS sensor for instant and decent image



16x Zoom




Auto Focus



2.8 Screen



Multiple filters

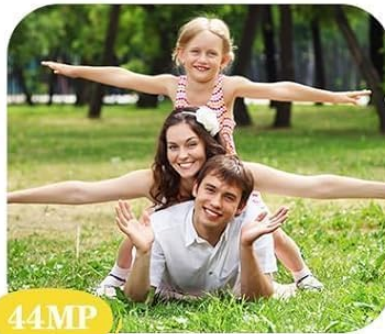

1920x1080 digital camera captures natural-color images that are quite enough for young photographer

Image: Overview of the Fleafer C15 Digital Camera's key features, including 56MP resolution, 1080P video, 16x digital zoom, auto focus, 2.8-inch screen, and various filters.

SETUP

1. Installing the Battery

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover to open it.
3. Insert the Lithium Ion battery, ensuring the correct orientation as indicated inside the compartment.

4. Close the battery compartment cover securely.

2. Inserting the Memory Card (TF Card)

1. With the battery compartment open, locate the TF card slot.
2. Insert the 32GB TF card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. Close the battery compartment cover.

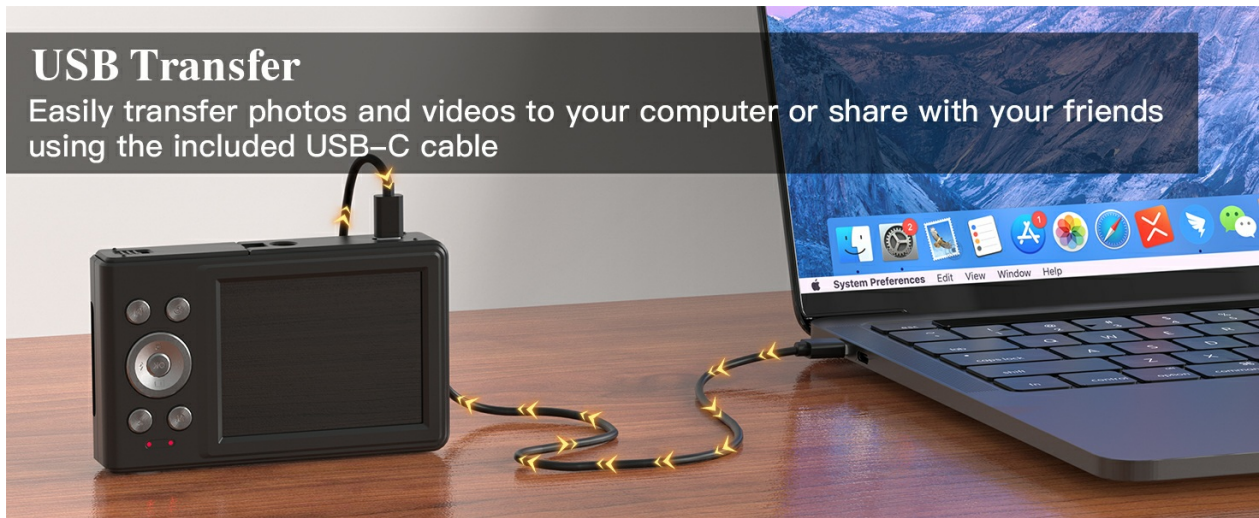 


Image: Step-by-step visual guide for installing the battery and 32GB TF memory card into the Fleafer C15 Digital Camera.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

2. Basic Photography

To take a photo:

1. Point the camera at your subject.
2. Press the shutter button halfway down to allow the camera to focus. A green box will appear on the screen when focus is achieved.
3. Press the shutter button fully to capture the image.



Image: Detailed diagram illustrating the function of each button and control on the Fleafer C15 Digital Camera.


3. Video Recording

To record a video:

1. Switch to video mode (refer to the camera's on-screen icons or menu for mode selection).
2. Press the shutter button to start recording. A red indicator will typically appear.
3. Press the shutter button again to stop recording.

4. Using Digital Zoom

The camera features 16x digital zoom. Use the 'W' (Wide) and 'T' (Telephoto) buttons, often located near the shutter, to zoom in or out.

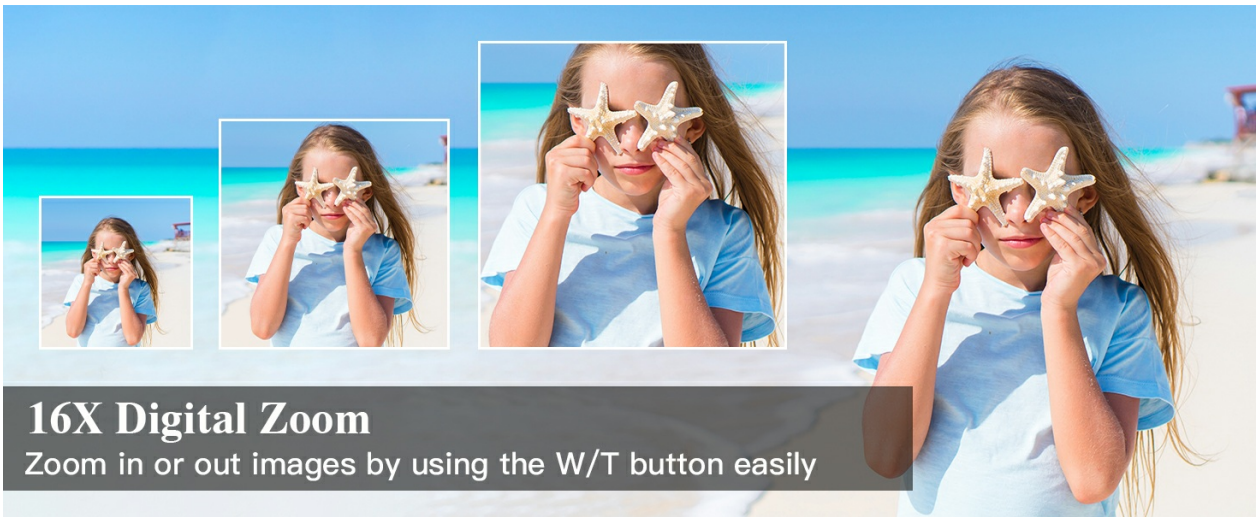

16X Digital Zoom

Zoom in or out images by using the W/T button easily

Image: Visual example of the 16x digital zoom capability, illustrating how images can be magnified using the camera's controls.

5. Special Features

Anti-Shake Function

The built-in anti-shake feature helps to stabilize images and videos, reducing blur caused by camera movement. This is particularly useful for active subjects or when shooting handheld.



Image: Demonstration of the anti-shake feature, showing a clear photo of a skier with the function enabled versus a blurred photo when disabled.

Self-Timer

Activate the self-timer for delayed shots (e.g., 2s, 5s, 10s) to allow time to get into position or for group photos.

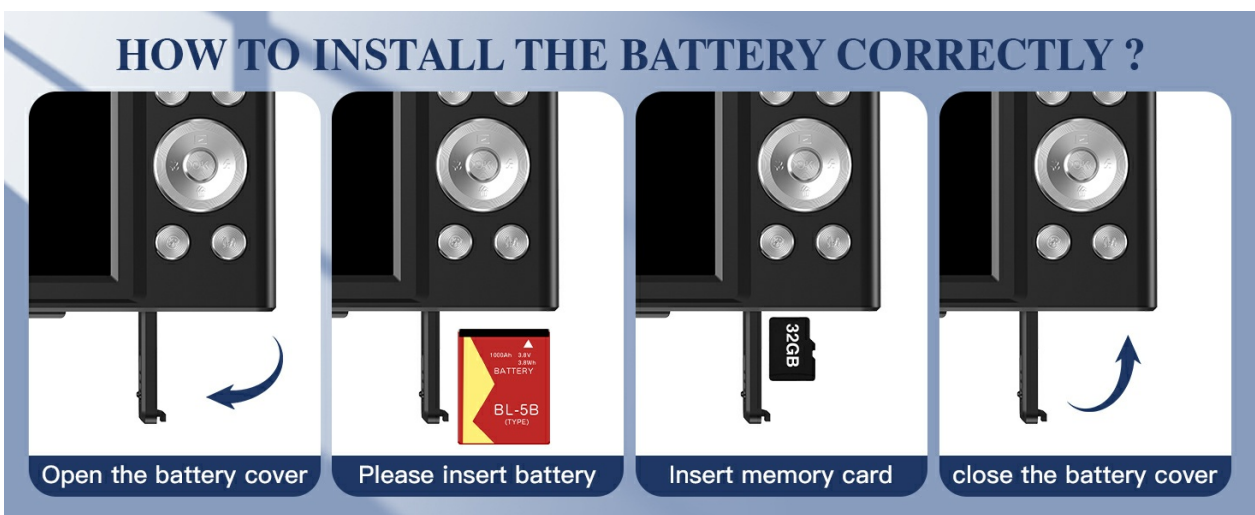


Image: Illustration of the self-timer function, indicating options for 2, 5, and 10-second delays before capturing a photo.

Fill Light

The integrated fill light can be activated to provide additional illumination in dark environments, ensuring brighter and clearer images.

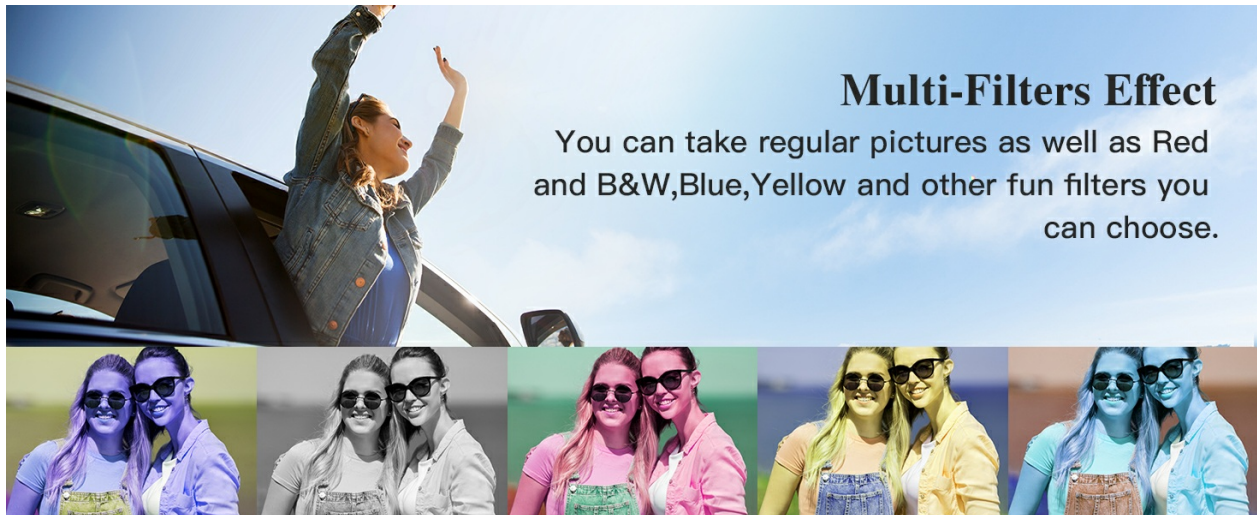


Image: Demonstration of the fill light feature, showing a comparison between a photo taken with the fill light on (brighter) and off (darker) in low-light conditions.

Multi-Filters Effect

Experiment with various built-in filters (e.g., Red, Black & White, Blue, Yellow) to add creative effects to your photos.



Image: Example of the multi-filters effect, displaying a single image with different color filters applied, such as red, black and white, blue, and yellow.

CONNECTING TO A COMPUTER

To transfer photos and videos to your computer:

1. Ensure the camera is powered off.
2. Connect the camera to your computer using the provided USB-C cable.
3. Power on the camera. It should appear as a removable disk drive on your computer.
4. Open the camera's folder and copy the desired files to your computer.
5. Safely eject the camera from your computer before disconnecting the cable.

Multi-Usage Scenarios



Image: The Fleafer C15 Digital Camera connected to a laptop via a USB-C cable, illustrating the process of transferring photos and videos.

MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, dust, or moisture. The camera is not water resistant.
- Store the camera in its provided bag when not in use to protect it from scratches and impacts.
- Ensure the lens is clean for optimal image quality. Use a lens cleaning cloth if necessary.

TROUBLESHOOTING

Camera Not Turning On

- Check if the battery is correctly inserted and fully charged.
- Ensure the power button is pressed and held for a few seconds.

Poor Image Quality

- Ensure the lens is clean and free from smudges.
- Check lighting conditions; use the built-in fill light in dark environments.
- Verify that the camera settings (e.g., resolution) are set to your preference.

Cannot Transfer Files to Computer

- Ensure the USB cable is securely connected to both the camera and the computer.
- Confirm the camera is powered on after connecting to the computer.
- Try a different USB port on your computer.

SPECIFICATIONS

Feature	Detail
Brand	Fleafer
Model Name	C15
Photo Sensor Resolution	56 MP

Feature	Detail
Video Resolution	1080p
Optical Zoom	16 x
Image Stabilization	Digital
Screen Size	2.8 Inches
Memory Storage Capacity	32 GB (TF Card included)
Battery Type	Lithium Ion (2 AA type, included)
Connectivity Technology	USB
Special Features	Anti-shake, Face Recognition, Smile Detection, Continuous Shooting, Self-Timer, Time Stamp ON/OFF, Built-in Fill Light
Item Weight	1.2 Pounds
Water Resistance Level	Not Water Resistant

WARRANTY & SUPPORT

The Fleafer C15 Digital Camera comes with a one-year satisfaction warranty. For any problems or questions regarding your camera, please contact customer support for assistance. A no-hassle replacement policy is also available.

For further support, please refer to the contact information provided with your purchase documentation.