

[Manuals.plus](#) /

› [SENCOR](#) /

› SENCOR Low Carb Rice Cooker SRM 0671BK Instruction Manual

SENCOR SRM 0671BK

SENCOR Low Carb Rice Cooker SRM 0671BK - Instruction Manual

Model: SRM 0671BK

PRODUCT OVERVIEW

The SENCOR SRM 0671BK Low Carb Rice Cooker is designed to prepare healthy and delicious rice with reduced carbohydrate and sugar content. This innovative appliance features a unique technology that separates excess sugar from starch during cooking, preserving the rice's taste and texture. Its compact design and multiple cooking functions make it ideal for various culinary needs.



Figure 1: Top view of the SENCOR SRM 0671BK Low Carb Rice Cooker, showing its digital touch screen and control buttons.

SAFETY INSTRUCTIONS

- Always read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.

- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS AND ACCESSORIES

The SENCOR SRM 0671BK Low Carb Rice Cooker comes with the following components and accessories:

- Main Unit (Rice Cooker Body)
- Non-stick Aluminum Inner Pot
- Stainless Steel Steam Basket
- Rice Spatula
- Measuring Cup
- Power Cord



Figure 2: The inner pot and steam basket of the rice cooker, shown with cooked rice.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the inner pot, steam basket, rice spatula, and measuring cup with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Ensure the voltage of your power outlet matches the rated voltage of the appliance (220-240 V). Plug the power cord into the rice cooker and then into a grounded wall outlet.



Figure 3: The SENCOR rice cooker positioned on a kitchen counter, ready for use.

OPERATING INSTRUCTIONS

General Rice Cooking (White Rice)

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice typically yields about 2-3 cups of cooked rice.
2. **Rinse Rice:** Rinse the rice thoroughly under cold running water until the water runs clear. This helps remove excess starch.
3. **Add Water:** Place the rinsed rice into the non-stick inner pot. Add the appropriate amount of water. Refer to the water level markings inside the inner pot or a standard rice-to-water ratio (e.g., 1:1.25 for white rice).
4. **Place Pot:** Place the inner pot into the main unit, ensuring it is seated correctly. Close the lid securely.

5. **Select Function:** Plug in the rice cooker. The digital touch screen will illuminate. Press the "Menu" button to cycle through the 8 cooking functions: *Sushi, White Rice, Quick Cook, Low Carb, Risotto, Brown Rice, Cake, Steam*. Select "White Rice".
6. **Start Cooking:** Press the "Start" button. The indicator light will show that cooking has begun.
7. **Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to the "Keep Warm" function. This keeps the rice warm without overcooking it.
8. **Serve:** Open the lid carefully, avoiding steam. Use the provided rice spatula to fluff and serve the rice.

Low Carb Cooking Function

The Low Carb function utilizes a unique technology to reduce carbohydrate and sugar content by up to 40%.

1. Follow steps 1-3 from "General Rice Cooking". For Low Carb cooking, ensure you use the stainless steel steam basket inside the inner pot, and place the rice in the steam basket. The water should be in the main inner pot, below the steam basket.
2. Place the inner pot with the steam basket into the main unit and close the lid.
3. Press "Menu" and select "Low Carb".
4. Press "Start". The cooker will perform a special cooking cycle where excess starch and sugar are drained into the water below the basket.
5. Once complete, the cooker will switch to "Keep Warm". Serve the low carb rice from the steam basket.



Figure 4: A hand interacting with the digital touch screen to select a cooking function.

Delay Timer Function

The delay timer allows you to set a specific time for cooking to begin.

1. Prepare rice and water in the inner pot as usual.
2. Select your desired cooking function (e.g., "White Rice").
3. Press the "Delay Time" button.
4. Use the "Hour" and "Min" buttons to adjust the delay time. The display will show the set delay.
5. Press "Start". The cooker will begin the countdown, and cooking will start automatically after the set delay.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your rice cooker.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Accessories:** Wash the non-stick inner pot, steam basket, rice spatula, and measuring cup with warm, soapy water. Use a soft sponge or cloth to avoid scratching the non-stick coating. Rinse thoroughly and dry.

completely. These parts are generally not dishwasher safe unless specified otherwise in the product manual (not specified here, so assume hand wash).

- 3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- 4. **Lid:** The inner lid may accumulate condensation or food residue. Wipe it clean with a damp cloth after each use.
- 5. **Storage:** Ensure all parts are clean and dry before storing. Store the rice cooker in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into both the cooker and a working outlet. Check circuit breaker.
Rice is too hard/undercooked.	Insufficient water; lid not closed properly; wrong cooking function selected.	Add more water next time; ensure lid is securely closed; select appropriate function for rice type.
Rice is too soft/mushy.	Too much water; rice not rinsed properly.	Reduce water next time; rinse rice thoroughly before cooking.
"Low Carb" function not reducing carbs.	Steam basket not used; incorrect water level.	Ensure rice is in the stainless steel steam basket and water is in the main inner pot below it. Follow instructions for water levels.
Display not responding.	Temporary electronic glitch.	Unplug the unit for 5 minutes, then plug it back in. If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	SRM 0671BK
Brand	SENCOR
Capacity	0.6 Liters
Rated Voltage	220-240 V
Frequency	50-60 Hz
Power Input	350 W
Power Cord Length	0.95 m
Product Dimensions (L x W x H)	225 x 225 x 228 mm
Product Weight	2.3 kg
Inner Pot Material	Non-stick Aluminum

Feature	Detail
Steam Basket Material	Stainless Steel
Special Features	Low Carb/Low Sugar Function, 8 Cooking Functions, Digital Touch Screen, Delay Timer, Keep Warm Function, Automatic Shut-off

WARRANTY AND SUPPORT

SENCOR provides a standard manufacturer's warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact SENCOR customer service. Contact information can typically be found on the SENCOR official website or on the product packaging.

Online Resources: For the most up-to-date information, FAQs, and additional support, please visit the official SENCOR website: www.sencor.com

© 2024 SENCOR. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DJTGV51C>

More documents and user manuals: <https://manuals.plus/>