

[Manuals.plus](#) /

› [CERAMAX](#) /

› Hot Pot Electric Cooker with Lid and Steamer, 2.5L Large Cooker Nonstick Electric Skillet, Electric Pot for Cooking, Portable Ceramic Electric Frying Pan for Dorm Rooms, Camping, RVs & More

CERAMAX 6456

CERAMAX 2.5L Hot Pot Electric Cooker User Manual

Model: 6456

INTRODUCTION

Thank you for purchasing the CERAMAX 2.5L Hot Pot Electric Cooker. This versatile and portable appliance is designed to simplify your cooking experience, whether at home, in a dorm room, RV, or while camping. Its nonstick ceramic interior and dual temperature settings make it ideal for a wide range of dishes, from frying and searing to boiling and steaming. Please read this manual thoroughly before use to ensure safe and optimal performance.



Figure 1: The CERAMAX 2.5L Hot Pot Electric Cooker, showcasing its compact design and a fried egg, with the product packaging in the background.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the electric cooker base or power cord in water or other liquids.
- Ensure the voltage rating on the appliance matches your local power supply before plugging in.
- Keep out of reach of children. Adult supervision is required when children are present.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Always unplug the cooker from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Use only manufacturer-recommended attachments.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- The exterior of the pot is designed with a cool-touch surface, but caution should still be exercised as heat can transfer.

WHAT'S INCLUDED

Your CERAMAX Electric Cooker package includes the following components:

- 1 x Electric Hot Pot (Main Unit)
- 1 x Tempered Glass Lid
- 1 x Steamer Insert
- 1 x Power Cord

What's Included



Figure 2: All components included with the CERAMAX Electric Cooker: the main hot pot unit, its tempered glass lid, a separate steamer insert, and the detachable power cord.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.

2. **Initial Cleaning:** Before first use, wash the interior of the hot pot, the tempered glass lid, and the steamer insert with warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main electric cooker unit in water.
3. **Placement:** Place the electric cooker on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the unit.
4. **Connect Power:** Insert the power cord into the designated port on the handle of the electric cooker. Then, plug the other end of the power cord into a standard electrical outlet.

Thoughtfully Crafted



Built with a Cool Touch,
Surface Safe Exterior



Figure 3: Demonstrates the ease of placing the steamer insert into the main pot, emphasizing the product's thoughtful design and cool-touch exterior for safe handling.

OPERATING INSTRUCTIONS

The CERAMAX Electric Cooker offers versatile cooking options with its dual temperature settings and nonstick ceramic

interior.

Temperature Settings

The cooker features two temperature settings controlled by a switch on the handle:

- **Setting 1 (Low):** Approximately 300°F (149°C) - Ideal for simmering, keeping food warm, or gentle cooking.
- **Setting 2 (High):** Approximately 350°F (177°C) - Suitable for boiling, frying, searing, and rapid cooking.

Cook Meals Quicker

Heats Up Quicker Than a Typical Oven or Fry Pan



**2 TEMPERATURE
SETTINGS**

300°F



350°F

Figure 4: The electric cooker in use for steaming, illustrating the two available temperature settings on the handle for precise cooking control.

Cooking Functions

This electric cooker is designed for a variety of cooking methods:

- **Frying/Searing:** Add a small amount of oil or butter if desired (though the nonstick surface often requires none).

Select Setting 2. Once heated, add ingredients like eggs, meats, or vegetables. The nonstick ceramic interior ensures easy food release.

Nonstick Ceramic Interior



No Oil or
Butter Needed



Easy
to Clean



Made
Without PFOA



Figure 5: The nonstick ceramic interior allows for easy food release, as demonstrated by an omelette sliding cleanly onto a plate.

- **Boiling:** Fill the pot with water or broth. Select Setting 2 for rapid boiling. Once boiling, add pasta, noodles, or other ingredients. Reduce to Setting 1 for simmering.
- **Steaming:** Pour a small amount of water into the main pot (below the steamer insert level). Place the steamer insert into the pot. Arrange vegetables, dumplings, or other items in the steamer insert. Cover with the tempered glass lid.

Select Setting 2 to bring water to a boil, then reduce to Setting 1 for continuous steaming.

- **One-Pot Meals:** The 2.5L capacity is ideal for preparing various one-pot dishes like hot pot, stir-fries, soups, and stews.



Figure 6: A visual representation of the diverse meals that can be prepared, such as fried eggs, seared meats, boiled soups, and steamed vegetables, highlighting the cooker's versatility.


Portability and Usage Scenarios

The compact and lightweight design of the CERAMAX Electric Cooker makes it highly portable, suitable for various

environments where a full kitchen might not be available.

- **Dorm Rooms:** Prepare quick and easy meals without needing a stove.
- **Camping/RVs:** A convenient cooking solution for outdoor adventures or limited space.
- **Offices/Workplaces:** Heat up lunches or prepare simple dishes.
- **Small Apartments:** Ideal for individuals or small households with limited kitchen space.

Portable Kitchen in a Pot

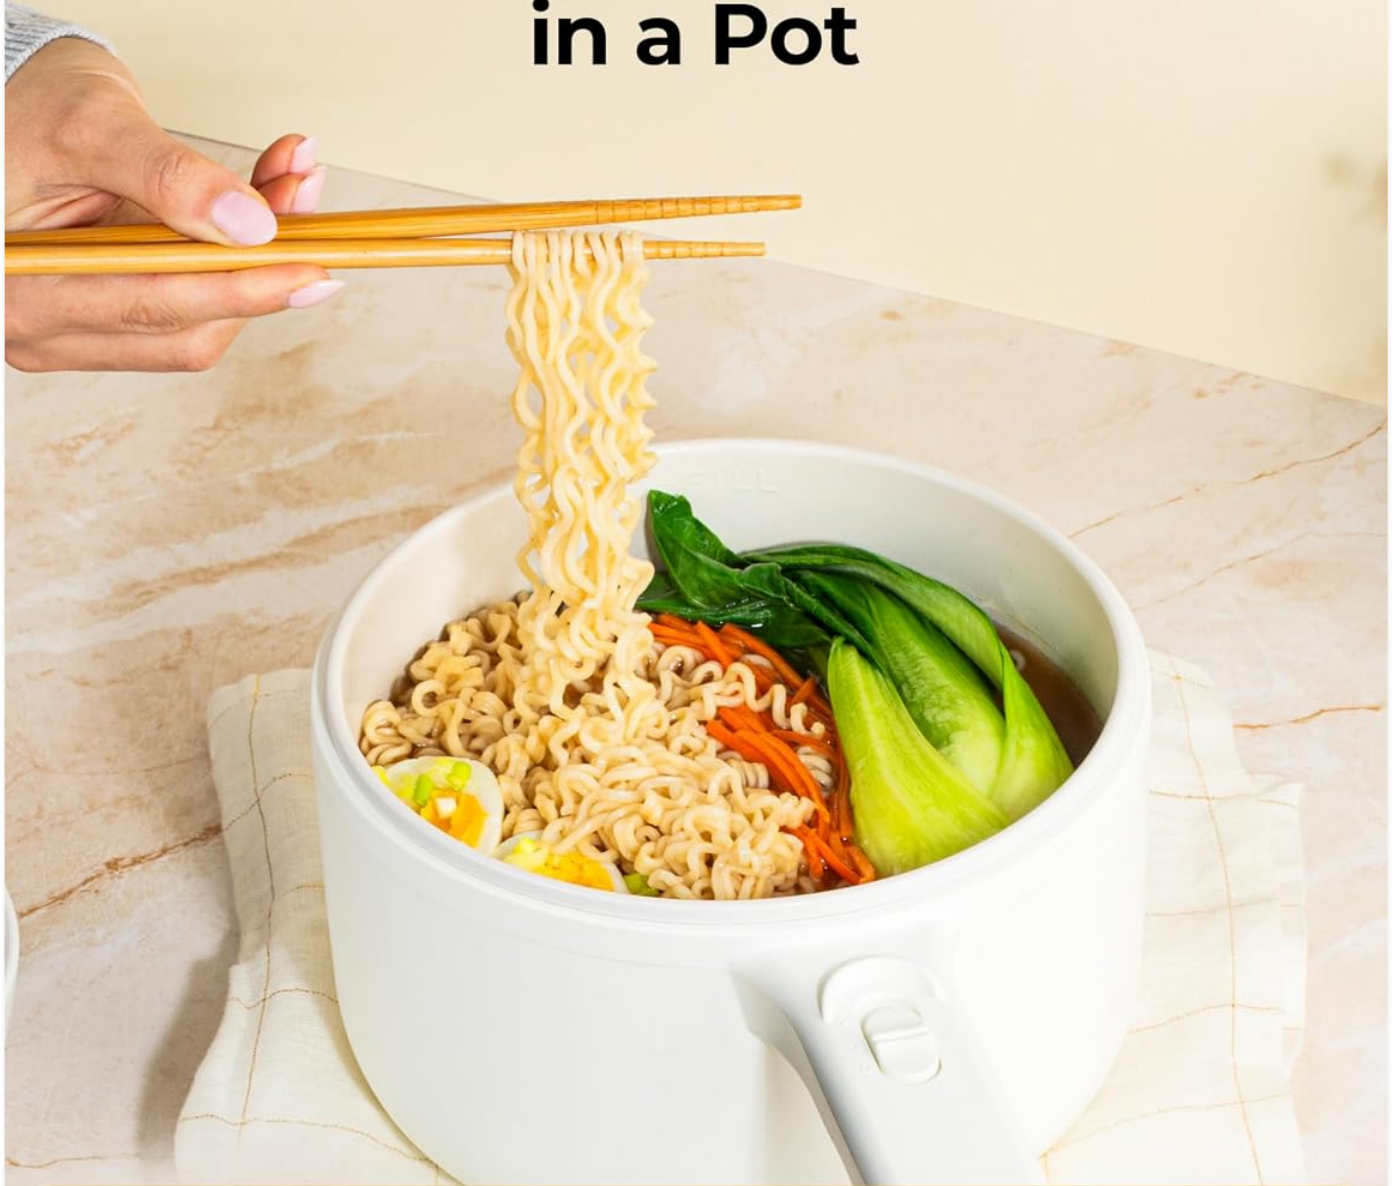

Just Plug it In and Use Anywhere



Dorm Room



Rv



Tailgate

Figure 7: The electric cooker's portability is highlighted, showing it being used for ramen, and in various settings like a dorm room, RV, and for tailgating.

Product Video

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and versatility of the Ceramax Electric Skillet Pot, including its nonstick capabilities, quick heating, and various cooking applications.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your CERAMAX Electric Cooker. Always unplug the unit and allow it to cool completely before cleaning.

- **Interior Cleaning:** The nonstick ceramic interior is easy to clean. Use a soft sponge or cloth with warm, soapy water. For stubborn food residue, soak the pot for a few minutes before cleaning. Avoid abrasive cleaners, scouring pads, or metal utensils that can damage the nonstick coating.
- **Exterior Cleaning:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Lid and Steamer Insert:** The tempered glass lid and steamer insert are hand wash only. Wash with warm, soapy water, rinse, and dry thoroughly.
- **Storage:** Store the electric cooker in a dry place. Ensure all parts are completely dry before storing.

Nonstick Ceramic Interior



No Oil or
Butter Needed



Easy
to Clean



Made
Without PFOA



Figure 8: The nonstick surface not only aids in cooking but also simplifies cleaning, as food slides off easily.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in correctly; Power outlet malfunction.	Ensure the power cord is securely plugged into both the cooker and a working electrical outlet. Test the outlet with another appliance.
Food sticks to the bottom.	Insufficient oil/butter (if used); Temperature too high; Damaged nonstick coating.	Ensure a thin layer of oil/butter is used if desired. Adjust temperature setting. Avoid using metal utensils or abrasive cleaners.
Cooker heats up slowly.	Incorrect temperature setting; Overfilling the pot.	Ensure Setting 2 is selected for faster heating. Do not exceed the maximum fill line.
Exterior feels hot.	Normal operation; Prolonged use.	While designed with a cool-touch exterior, prolonged use at high temperatures can cause the surface to warm. Always use caution and handle by the handle.

If you experience issues not listed here, please contact customer support.

SPECIFICATIONS

- **Brand:** CERAMAX
- **Model Number:** 6456
- **Capacity:** 2.5 Liters
- **Material:** Ceramic, Nonstick (Interior); Glass (Lid)
- **Product Dimensions:** 14.1 x 9.6 x 8 inches
- **Item Weight:** 4.4 pounds
- **Temperature Settings:** Dual (approx. 300°F / 350°F)
- **Care Instructions:** Hand Wash Only (Pot interior, lid, steamer insert); Wipe clean (Exterior)
- **Dishwasher Safe:** No
- **Oven Safe:** No
- **UPC:** 080313064562

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact CERAMAX customer service directly. Contact details can typically be found on the product packaging or the official CERAMAX website.

© 2025 CERAMAX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the power consumption of the CERAMAX 6456 2.5L Hot Pot Electric Cooker?

The provided manual for the CERAMAX 6456 2.5L Hot Pot Electric Cooker does not explicitly state the exact wattage (W) or power consumption in the specifications section. However, it provides the following electrical and...

[Read full answer](#)

Where can I find the PDF manual for the CERAMAX 6456 Electric Cooker?

You can find the digital version of the manual for the CERAMAX 6456 2.5L Hot Pot Electric Cooker directly on the product page where you submitted your question. Manuals+ provides the full text and...

[Read full answer](#)