

[Manuals.plus](#) /

> [SENCOR](#) /

> SENCOR Low Carb Rice Cooker SRM 0670WH Instruction Manual

SENCOR SRM 0670WH

SENCOR Low Carb Rice Cooker SRM 0670WH Instruction Manual

INTRODUCTION

Thank you for choosing the SENCOR Low Carb Rice Cooker SRM 0670WH. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plug, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.

PRODUCT OVERVIEW

The SENCOR Low Carb Rice Cooker SRM 0670WH is designed for versatile rice cooking with a special function to

reduce carbohydrate content.



Figure 1: Overall view of the SENCOR Low Carb Rice Cooker SRM 0670WH. This image shows the compact, white design of the appliance with its top-mounted digital control panel.



Figure 2: Close-up of the digital touch screen control panel. The panel displays cooking options such as Sushi, White Rice, Quick Cook, Low Carb, Risotto, Brown Rice, Cake, and Steam, along with time adjustment buttons (Hour, Min) and function buttons (Menu, Start, Cancel, Keep Warm, Delay Time).



Figure 3: The rice cooker with its lid open, revealing the non-stick aluminum inner pot and the stainless steel steam basket. The inner pot has measurement markings for water levels.

Components:

- Main Unit with Digital Touch Screen Control Panel
- Non-stick Aluminum Inner Pot
- Stainless Steel Steam Basket
- Lid
- Measuring Cup
- Rice Spatula

SETUP

Before using your rice cooker for the first time, please follow these steps:

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the appliance.
2. **Clean Removable Parts:** Wash the inner pot, steam basket, lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely.
3. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water.
4. **Placement:** Place the rice cooker on a stable, level, and heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

OPERATING INSTRUCTIONS

General Cooking Steps:

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. The capacity is 0.6 L, suitable for 1-2 servings.
2. **Rinse Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add Rice and Water:** Place the rinsed rice into the non-stick inner pot. Add the appropriate amount of water according to the type of rice and your desired consistency. For the Low Carb function, place the rice in the stainless steel steam basket, then place the basket into the inner pot with water below it.
4. **Assemble:** Insert the inner pot (with or without the steam basket) into the main unit. Close the lid securely.
5. **Power On:** Plug the power cord into a suitable electrical outlet. The digital display will illuminate.
6. **Select Program:** Press the 'Menu' button repeatedly to cycle through the available cooking programs: Sushi, White Rice, Quick Cook, Low Carb, Risotto, Brown Rice, Cake, Steam.

7. **Adjust Time (if applicable):** For certain programs or the Delay Timer, use the 'Hour' and 'Min' buttons to adjust the cooking or delay time.
8. **Start Cooking:** Press the 'Start' button to begin the selected cooking program.

Specific Functions:

- **Low Carb Function:** This unique technology reduces the carbohydrate and sugar content of rice by up to 40%. During cooking, excess sugars are separated from the starch without affecting the taste or texture of the rice. This function is ideal for individuals managing their sugar intake or those with health-conscious dietary needs. Use the stainless steel steam basket for this function.



Figure 4: The steam basket containing cooked rice being lifted from the inner pot, demonstrating the separation process for the Low Carb function.

- **Sushi, White Rice, Quick Cook, Risotto, Brown Rice, Cake, Steam:** These are pre-programmed settings optimized for different types of rice and cooking methods. Select the desired program from the menu.



Figure 5: The rice cooker with its lid open, showing risotto being cooked in the inner pot, illustrating one of the versatile cooking functions.

- **Keep Warm Function:** After the cooking cycle is complete, the appliance will automatically switch to the 'Keep Warm' mode, maintaining the rice at an optimal serving temperature without overcooking.
- **Delay Timer:** This function allows you to set a delayed start time for your cooking. Press 'Delay Time', then use 'Hour' and 'Min' to set the desired delay before pressing 'Start'.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your rice cooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The inner pot, steam basket, lid, measuring cup, and rice spatula should be washed by hand with warm, soapy water. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Clean Main Unit Exterior:** Wipe the exterior of the main unit with a soft, damp cloth. For stubborn stains, use a mild detergent. Ensure no water enters the electrical components.
4. **Do Not Immerse:** Never immerse the main unit, power cord, or plug in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your rice cooker, refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into both the appliance and the wall outlet.
 - Ensure the power outlet is functional by testing it with another appliance.
- **Rice is too hard or too soft:**
 - Adjust the water-to-rice ratio for future cooking. Different types of rice may require varying amounts of water.
 - Ensure the lid is properly closed during cooking.
- **Rice sticks to the inner pot:**
 - Ensure the inner pot's non-stick coating is not damaged.
 - Add a small amount of cooking oil or butter to the pot before adding rice and water.
 - Do not use metal utensils in the inner pot.
- **'Keep Warm' function is not activating:**
 - Verify that the cooking program completed successfully. The 'Keep Warm' function typically activates automatically after cooking.
- **Steam escaping excessively from the lid:**
 - Check if the lid is properly sealed and not obstructed by food particles.
 - Ensure the steam vent is clear.

If the problem persists after checking these points, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	SENCOR
Model Number	SRM 0670WH
Color	White
Power	350 Watts
Voltage	220-240 Volts
Material	Stainless Steel (steam basket), Non-stick Aluminum (inner pot)
Automatic Shut-off Function	Yes
Special Features	Non-stick, Automatic shut-off, Removable bowl, Airtight lid, Timer, Portable, Dual power setting
Item Weight	2.3 Kilograms

Product Dimensions (D x W x H)	22.8 cm x 22.5 cm x 22.5 cm
Power Source	Electric
Care Instructions	Hand wash (for removable parts)

WARRANTY AND SUPPORT

SENCOR provides a commitment to quality for its products. Please refer to the warranty card included with your purchase for specific terms and conditions.

- **Spare Parts Availability:** Spare parts for this model are available for up to 5 years from the date of purchase.
- **Customer Support:** For technical assistance, warranty claims, or service inquiries, please contact your retailer or the official SENCOR customer service in your region. Contact details can typically be found on the SENCOR website or your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DJTTM1LX>

More documents and user manuals: <https://manuals.plus/>