

## ARCADE1UP PHO-B-405200

# Arcade1Up Touchscreen Photobooth User Manual

Model: PHO-B-405200

## INTRODUCTION

---

Welcome to the Arcade1Up Touchscreen Photobooth user manual. This guide provides essential information for setting up, operating, and maintaining your photobooth to ensure optimal performance and enjoyment. Please read this manual thoroughly before using the product.



Figure 1: Front view of the Arcade1Up Touchscreen Photobooth, showcasing its compact design and the display screen.

## PRODUCT FEATURES

- **7" Touchscreen Monitor:** The intuitive touchscreen allows for easy navigation and interaction. The photobooth can be hung on a door or placed on any flat surface for flexible use.

- **16GB Internal Storage:** Ample storage capacity to save numerous photos and memories directly on the device.
- **Micro SD Memory Slot:** Expand storage capabilities using external Micro SD cards (not included) for additional photo saving.
- **Quick Share Feature:** Instantly generate QR codes directly from the photobooth to easily share captured photos with smartphones.
- **Vast Library of Effects:** Enhance your photos with a wide range of built-in filters, stickers, frames, borders, text options, and drawing features.
- **2" x 3" ZINK Photo Printing:** Print physical 2x3 inch photos directly from the device using ZINK (Zero Ink) technology.



Figure 2: Angled view of the photobooth, highlighting its sleek design and accessible print slot.

## PACKAGE CONTENTS

Upon unboxing, please verify that all components are present:

- Arcade1Up Touchscreen Photobooth Unit
- 20 ZINK Photo Paper Sheets
- Power Adapter
- User Manual (this document)



Figure 3: Side profile of the photobooth, illustrating its compact dimensions for easy placement.

## SETUP GUIDE

---

1. **Unpacking:** Carefully remove the photobooth from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Choose a stable, flat surface for the photobooth, or utilize the integrated hanging mechanism to mount it on a door. Ensure adequate space around the unit for operation and photo printing.
3. **Power Connection:** Connect the provided power adapter to the photobooth's power input port and then to a standard electrical outlet.
4. **Loading Photo Paper:** Open the photo paper compartment located on the front of the unit. Insert the 2" x 3" ZINK photo paper sheets according to the diagram inside the compartment, ensuring the glossy side is facing up. Close the compartment securely.
5. **Initial Power On:** Press the power button to turn on the photobooth. The touchscreen will illuminate, and the system will boot up.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the setup and key features of the Arcade1Up Touchscreen Photobooth, including loading photo paper and using the touchscreen interface.

## OPERATING INSTRUCTIONS

---

### Taking Photos

1. **Access Camera:** From the main screen, tap the camera icon to enter photo capture mode.
2. **Positioning:** Stand in front of the photobooth, ensuring your face is within the frame displayed on the touchscreen.
3. **Capture Photo:** Tap the capture button on the screen or press the physical button next to the screen to take a photo. A countdown may appear before capture.

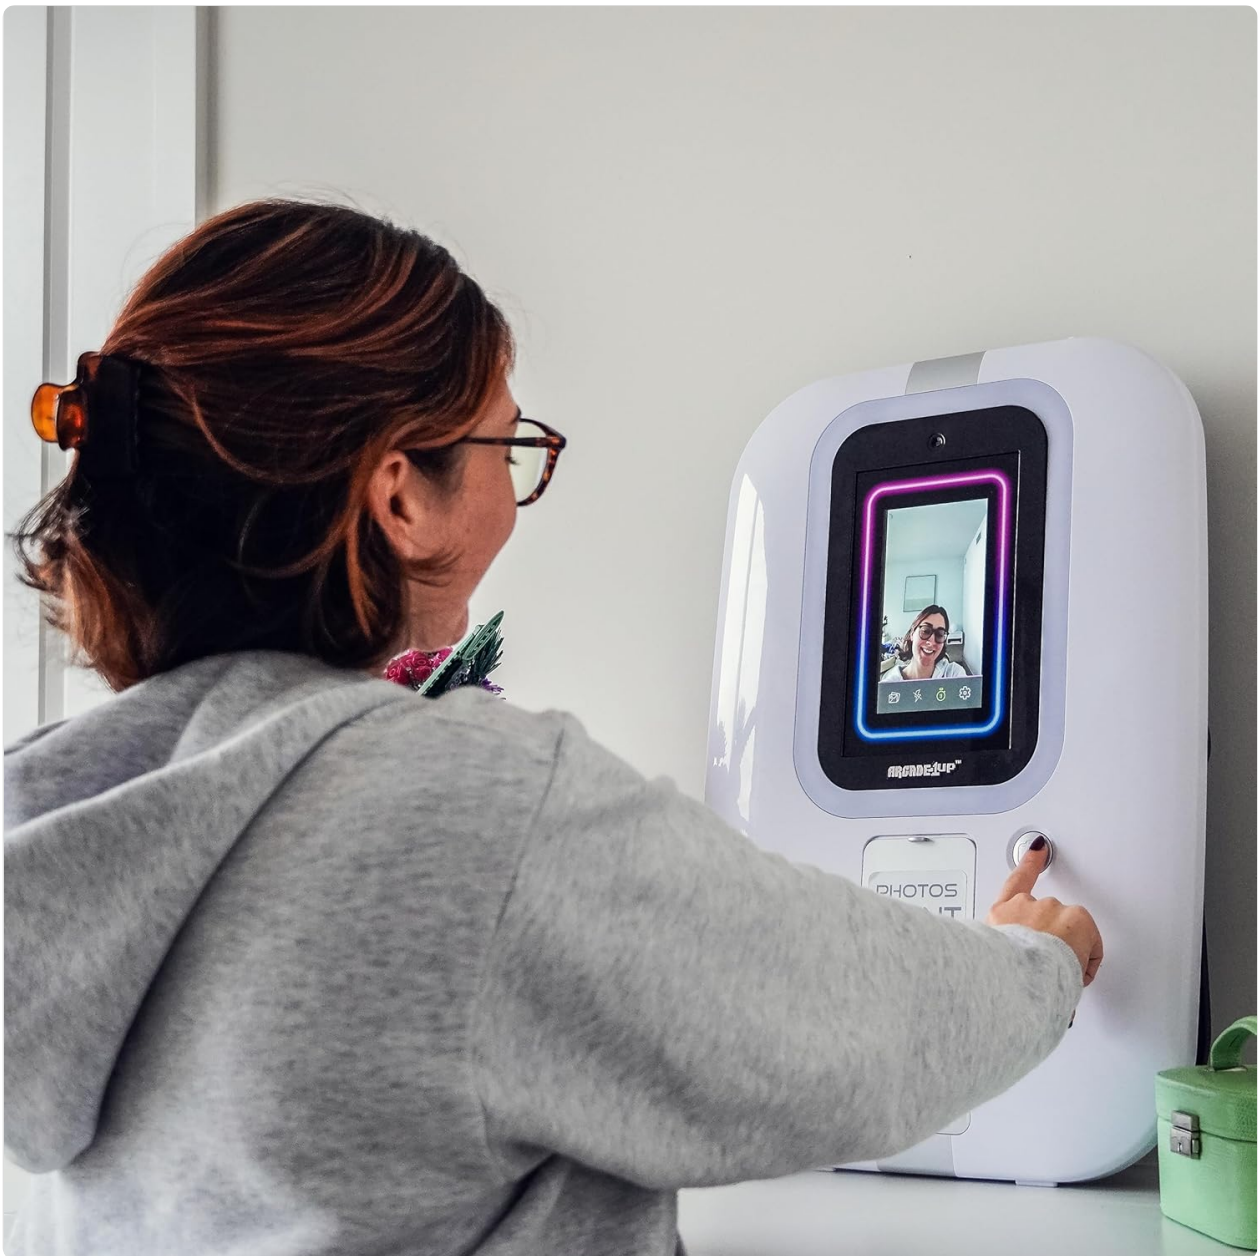


Figure 4: A user engaging with the photobooth, demonstrating the ease of photo capture.

## Editing and Enhancing Photos

After capturing a photo, you will be presented with editing options:

- **Filters:** Apply various color filters and effects to change the mood of your photo.
- **Stickers & Frames:** Choose from a library of digital stickers and decorative frames to personalize your image.
- **Text & Drawing:** Add custom text or draw directly on your photo using the touchscreen.
- **Undo/Redo:** Utilize the undo and redo functions to adjust edits as needed.

## Printing Photos

1. **Select Print Option:** After editing, tap the print icon on the screen.
2. **Confirmation:** Confirm your print selection. The photobooth will then process and print the 2" x 3" photo.
3. **Collect Print:** Once printed, the photo will emerge from the print slot at the bottom of the unit. Carefully retrieve your photo.





Figure 5: The photobooth displaying a captured image, with physical prints laid out, demonstrating the instant print capability.

## Sharing Photos via QR Code

1. **Generate QR Code:** After capturing or editing a photo, select the share icon (often represented by a QR code symbol).
2. **Scan QR Code:** Use your smartphone's camera or a QR code scanner app to scan the QR code displayed on the photobooth screen.
3. **Download Photo:** Your smartphone will be directed to a link where you can download the digital copy of your photo.

## MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the touchscreen and exterior surfaces. Do not use abrasive cleaners or solvents.



- **Photo Paper Replacement:** When the photo paper supply is low, replace it with new 2" x 3" ZINK photo paper sheets. Refer to the "Loading Photo Paper" section in the Setup Guide.
- **Software Updates:** Periodically check the manufacturer's website or the device's settings for available software updates to ensure optimal performance and access to new features.
- **Storage:** When not in use for extended periods, store the photobooth in a cool, dry place, ideally in its original packaging.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power connection; faulty power adapter.	Ensure power adapter is securely connected to both the unit and a working electrical outlet. Try a different outlet.
Photos are not printing.	No photo paper; paper loaded incorrectly; print mechanism jam.	Check if photo paper is loaded correctly and sufficient quantity is available. Open and close the paper compartment. If jammed, gently remove any obstructions.
Touchscreen is unresponsive.	Temporary software glitch; screen dirty.	Restart the device by powering it off and on. Clean the screen with a soft, dry cloth.
Poor photo quality.	Insufficient lighting; dirty camera lens; low quality photo paper.	Ensure adequate lighting in the environment. Clean the camera lens. Use genuine ZINK photo paper.
QR code sharing not working.	No internet connection; QR code not scanned correctly.	Ensure the photobooth is connected to a stable Wi-Fi network (if applicable). Ensure good lighting when scanning the QR code with your smartphone.

## SPECIFICATIONS

- **Model Name:** Photobooth
- **Model Number:** PHO-B-405200
- **Product Dimensions (L x W x H):** 15.7 x 5.2 x 23.8 inches
- **Item Weight:** 8.18 pounds (approx. 3.71 kg)
- **Display:** 7" Touchscreen Monitor
- **Internal Storage:** 16GB
- **Expandable Storage:** Micro SD Memory Slot (card not included)
- **Print Technology:** ZINK (Zero Ink)

- **Print Size:** 2" x 3"
- **Manufacturer:** Tastemakers LLC
- **Country of Origin:** China
- **First Available:** October 10, 2024

## WARRANTY AND SUPPORT

 
For warranty information and technical support, please refer to the official ARCADE1UP website or contact their customer service directly. Keep your proof of purchase for warranty claims.

**ARCADE1UP Official Website:** [www.arcade1up.com](http://www.arcade1up.com)

For further assistance, please contact ARCADE1UP customer support.

© 2024 ARCADE1UP. All rights reserved.

### Documents - ARCADE1UP – PHO-B-405200

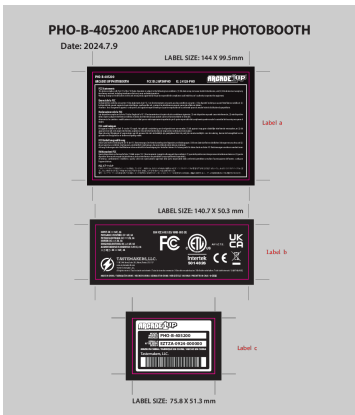


[\[pdf\]](#) Label

PHO B 405200 Photobooth ETL FCC Serial Number labels Rev7 9 24 Jon Chan label and location WF TASTEMAKERS TRADING LIMITED ARCADE1UP PHOTOBOOTH 2APXHPHO pho

**PHO-B-405200** ARCADE1UP PHOTOBOOTH Date: 2024.7.9 LABEL SIZE: 144 X 99.5mm **PHO-B-405200** ARCADE1UP PHOTOBOOTH FCC ID: 2APXHPHO IC: 24128-PHO FCC Statements This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1 this device may not cause harmful...

 lang:es score:43 filesize: 492.81 K page\_count: 2 document date: 2024-08-15

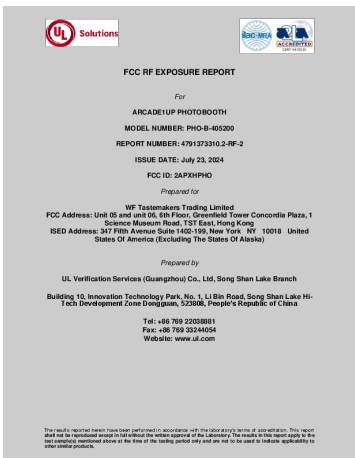

[\[pdf\]](#) SAR Rating

Zhang Kebo RF Exposure WF TASTEMAKERS TRADING LIMITED PHO ARCADE1UP PHOTOBOOTH 2APXHPHO pho

FCC RF EXPOSURE REPORT For ARCADE1UP PHOTOBOOTH MODEL NUMBER: **PHO-B-405200** REPORT NUMBER: 4791373310.2-RF-2 ISSUE DATE: July 23, 2024 FCC ID: 2APXHPHO Prepared for WF Tastemakers Trading Limited FCC Address: Unit 05 and unit 06, 6th Floor, Greenfield Tower Concordia Plaza, 1 Science Museum Road, TST...

lang:en score:31 filesize: 403.06 K page\_count: 8 document date: 2024-08-15



[\[pdf\]](#) Test Report

Mike Heckrotte Test report WiFi WF TASTEMAKERS TRADING LIMITED PHO ARCADE1UP

PHOTOBOOTH 2APXHPHO pho

CFR 47 FCC PART 15 SUBPART C ISSED RSS-247 Issue 3 TEST REPORT For

ARCADE1UP PHOTOBOOTH MODEL NUMBER: **PHO-B-405200** REPORT

NUMBER: 4791373310.2-RF-1 ISSUE DATE: July 23, 2024 FCC ID: 2APXHPHO IC:

24128-PHO Prepared for WF Tastemakers Trading Limited FCC Address: Unit 05

and unit 06, 6th Floor, Greenfi...

lang:en score:20 filesize: 4.96 M page\_count: 109 document date: 2024-08-15