

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mesqool](#) /

› [Mesqool Electric Spin Scrubber CB1001 Instruction Manual](#)

Mesqool CB1001

Mesqool Electric Spin Scrubber CB1001 Instruction Manual

Model: CB1001

INTRODUCTION

Thank you for choosing the Mesqool Electric Spin Scrubber. This versatile cleaning tool is designed to simplify your cleaning tasks with its powerful motor, multiple brush heads, and adjustable handle. Please read this manual carefully before use to ensure safe and optimal operation of your device. Keep this manual for future reference.

PACKAGE CONTENTS

Your Mesqool Electric Spin Scrubber package includes the following items:

- Electric Spin Scrubber Main Unit
- Extended Handle (multi-segment)
- USB-C Charging Cable
- 8 Replaceable Brush Heads:
 - Wide Flat Brush
 - Small Flat Brush
 - Dome Brush
 - Corner Brush
 - Cloth Brush
 - Sponge Brush
 - Fiber Brush
 - Imitation Wool Brush
- User Manual



Image: Overview of all items included in the Mesqool Electric Spin Scrubber package.

SAFETY INSTRUCTIONS

- Do not immerse the main unit in water beyond its IPX7 waterproof rating.
- Keep out of reach of children.
- Use only the provided charging cable.
- Do not operate the device if it is damaged.
- Ensure brush heads are securely attached before operation.
- Avoid applying excessive pressure, which may cause the motor to stall or damage the brush head.

SETUP

1. Assembling the Handle

The extended handle consists of multiple segments that can be screwed together to achieve your desired length. To assemble, align the threaded ends of the segments and twist clockwise until secure. To adjust the length, simply add or remove segments. The scrubber can also be used as a handheld device without any extension segments.



Image: Illustration of the retractable and detachable extension handle, showing different length configurations (9 inches, 38.6 inches, 51 inches).

2. Attaching Brush Heads

To attach a brush head, align the brush head with the rotating shaft on the main unit and push firmly until it clicks into place. To remove, pull the brush head away from the shaft.

Image: Display of the 8 replaceable brush heads, each with its name: Wide Flat Brush, Small Flat Brush, Dome Brush, Corner Brush, Cloth Brush, Sponge Brush, Fiber Brush, and Imitation Wool Brush.

CHARGING THE DEVICE

The Mesqool Electric Spin Scrubber is equipped with a 3000mAh large-capacity battery. Before first use, fully charge the device.

- Connect the USB-C charging cable to the charging port on the main unit.
- Plug the other end of the cable into a compatible USB power adapter (not included).
- The battery indicator lights will show the charging status. A full charge typically takes about 2 hours.
- Once fully charged, the device can operate continuously for up to 120 minutes.



Image: The main unit of the electric spin scrubber connected to a USB-C charging cable, illustrating the fast charging capability and battery life.

OPERATING INSTRUCTIONS

1. Power On/Off and Speed Adjustment

Press the power button to turn the device on. The scrubber has 3 adjustable speeds:

- **Low Speed (280 RPM):** Suitable for delicate surfaces like precious furniture.
- **Medium Speed (380 RPM):** Ideal for daily cleaning tasks.
- **High Speed (440 RPM):** For deep cleaning tough stains, grime, or stubborn dirt.

Press the power button repeatedly to cycle through the speeds. Press and hold the power button to turn the device off.



Image: Close-up of the scrubber's control panel showing the power button and LED indicators for Low (280 RPM), Medium (380 RPM), and High (440 RPM) speeds, along with a low noise indicator and overload protection feature.

2. Using the Scrubber

Apply appropriate cleaning solution to the surface or directly to the brush head. Turn on the scrubber and gently guide it over the area to be cleaned. The rotating brush will do the scrubbing for you. For optimal results, allow the brush to work without excessive force.

BRUSH HEAD APPLICATIONS

Choose the correct brush head for your cleaning task:

- **Wide Flat Brush:** Ideal for large flat surfaces like floors, tile walls, pools, and carpets.
- **Small Flat Brush:** Suitable for smaller flat areas such as cooktops, stoves, and ovens.
- **Dome Brush:** Excellent for curved surfaces like bathtubs and sinks.
- **Corner Brush:** Designed for tight spaces, corners, faucets, and crevices.
- **Cloth Brush:** Gentle cleaning for windows and wood floors.
- **Sponge Brush:** Perfect for car surfaces and kitchenware.
- **Fiber Brush:** Effective for stove, kitchen ventilator, and gas cooker cleaning.
- **Imitation Wool Brush:** Gentle cleaning for furniture, car seats, and leather.

Package List



Image: Demonstrates the use of the Wide Flat Brush for floors/tile walls/pool/carpet and the Flat Brush for sink/stove/toilet grooves.

Perfect Gift for Loved Ones



Image: Shows the Sponge Brush being used for car surfaces/kitchenware and the Fiber Brush for stove/kitchen ventilator/gas cooker.

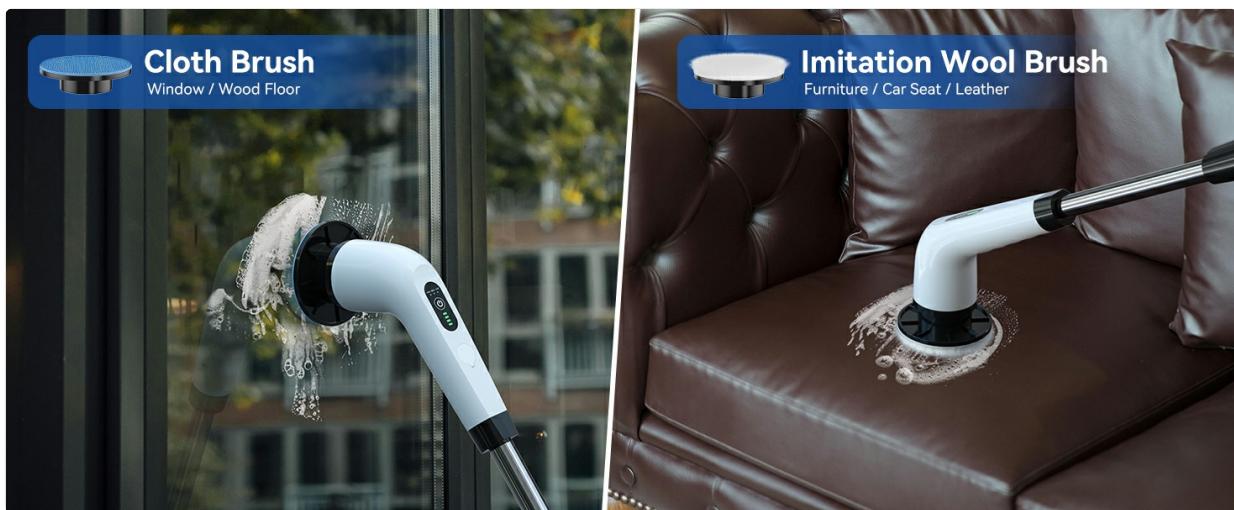


Image: Illustrates the Dome Brush for bathtub/toilet/sink and the Corner Brush for corners/vehicle tires.



Image: Depicts the Cloth Brush for window/wood floor cleaning and the Imitation Wool Brush for furniture/car seat/leather.

MAINTENANCE AND CARE

- After each use, rinse the brush heads thoroughly with water to remove any cleaning solution or debris.
- Allow brush heads to air dry completely before storing.
- Wipe the main unit and handle with a damp cloth. Do not use abrasive cleaners.
- Store the device and all accessories in a cool, dry place.

TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. If not, connect to the charger.
- **Brush head not spinning:** Check if the brush head is correctly attached. Ensure no debris is obstructing the rotation.
- **Reduced power/speed:** Recharge the battery. The smart overload protection chip may temporarily reduce power if excessive pressure is applied. Reduce pressure and restart.

SPECIFICATIONS

Feature	Detail
Brand	Mesqool
Model Number	CB1001
Battery Capacity	3000mAh
Charging Time	Approx. 2 hours
Runtime	Up to 120 minutes
Adjustable Speeds	3 (280 RPM, 380 RPM, 440 RPM)
Waterproof Rating	IPX7
Handle Material	Stainless Steel
Product Dimensions	22.86 x 6.6 x 11.68 cm (main unit); Extended up to 51 inches
Item Weight	990 g

WARRANTY AND SUPPORT

Mesqool provides an 18-month after-service and a 2-year warranty service for the electric shower scrubber. If any quality problem occurs or if you have any questions, please contact us at: support-ca@mesqool.com.