



Manuals.plus /

› HIENA PRO /

› HIENA PRO Professional Hair Clipper Set Instruction Manual (Model HYN-212+023+HG303+b001)

## HIENA PRO HYN-212+023+HG303+b001

# HIENA PRO Professional Hair Clipper Set Instruction Manual

Model: HYN-212+023+HG303+b001

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your HIENA PRO Professional Hair Clipper Set. This comprehensive grooming kit includes a main hair clipper, a precision trimmer, a foil shaver, and a nose/ear hair trimmer, along with various accessories. Please read this manual thoroughly before first use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

For your safety and to prevent damage to the product, always adhere to the following guidelines:

- Avoid using the devices near water or in wet environments.
- Do not operate any device while it is charging.
- Keep all components of the set out of reach of children.
- Always follow the specific instructions provided for each individual component within this manual.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

## PACKAGE CONTENTS

---

Your HIENA PRO Professional Hair Clipper Set includes the following items:

- 1x Main Hair Clipper with adjustable lever
- 1x Precision Hair Trimmer
- 1x Foil Shaver with dual sharp foil blades
- 1x Nose/Ear Hair Trimmer with 360° multi-directional trimming head
- 8x Limit Combs (4 for clippers: 1.5mm, 3mm, 4.5mm, 6mm; 4 for trimmers: 1mm, 3mm, 5mm, 7mm)
- USB Charging Cables (multiple, for each device)
- Cleaning Brush
- Lubricating Oil Bottle
- Hair Comb

- Barber Cape
- Storage Case
- Instruction Manual



Image: Overview of the HIENA PRO Professional Hair Clipper Set, showing all included components such as the main clipper, trimmer, shaver, nose trimmer, various guide combs, charging cables, cleaning brush, oil, comb, cape, and storage case.

## SETUP AND INITIAL CHARGING

Before using your HIENA PRO grooming tools for the first time, ensure they are fully charged.

1. **Unpack:** Carefully remove all items from the packaging and inspect them for any damage.
2. **Initial Charge:**
  - **Main Hair Clipper:** Connect the USB charging cable to the clipper and a compatible USB power source (e.g., computer, car charger, mobile power, wall adapter). The LCD display will show battery percentage. Full charge takes approximately 240 minutes (4 hours) for up to 5 hours of operation.

- **Precision Hair Trimmer:** Connect the USB charging cable. Full charge takes approximately 120 minutes (2 hours) for up to 2 hours of operation. The intelligent light indicator will show charging status.
- **Foil Shaver:** Connect the USB charging cable. Full charge takes approximately 120 minutes (2 hours) for up to 90 minutes of operation. The intelligent light indicator will show charging status.
- **Nose/Ear Hair Trimmer:** Connect the USB charging cable. Full charge takes approximately 60 minutes (1 hour) for up to 40 minutes of operation. The LCD display will show battery percentage.

## USB charging

### Multiple charging options for easy charging

Device	Charging time	Working time
Main Hair Clipper	240 Minutes	300 Minutes
Precision Hair Trimmer	120 Minutes	120 Minutes
Foil Shaver	120 Minutes	90 Minutes
Nose/Ear Hair Trimmer	60 Minutes	40 Minutes

Image: Illustration showing various USB charging methods (USB data cable, laptop, car charger, mobile power, computer, plug) and the charging times for each device in the HIENA PRO set.

- Blade Oiling:** Before first use, apply a small drop of the included lubricating oil to the blades of the main clipper and precision trimmer. Turn the device on for a few seconds to distribute the oil. This ensures optimal performance and blade longevity.

## OPERATING INSTRUCTIONS

### 1. Main Hair Clipper

Ideal for general hair cutting and shaping.

- **Attaching Guide Combs:** Select the desired limit comb (1.5mm, 3mm, 4.5mm, or 6mm) and securely attach it to the clipper head.
- **Adjustable Lever:** Use the adjustable lever on the side of the clipper to fine-tune the cutting length without changing the comb. This allows for blending and precise fades.
- **Power On/Off:** Press the power button to turn the clipper on or off. The LCD display will show the battery percentage, oil reminder, and charge reminder.
- **Cutting:** Hold the clipper against the hair, moving it slowly and steadily against the direction of hair growth.



Image: Close-up view of the main hair clipper's adjustable lever and cutter head, demonstrating how to adjust the blade length for precise trimming. The image highlights the wear-resistant nature of the blades and the skin-friendly design.

# Digital Display

Intelligent display of remaining battery  
oil dripping alert, charging, etc



Battery  
percentage



oil  
Reminder



Charge  
Reminder

Image: The digital LCD display on the main hair clipper, illustrating the battery percentage, an oil drop icon for lubrication reminders, and a plug icon for charging reminders.

## 2. Precision Hair Trimmer

Designed for detailing, outlining, and close trimming of beards and hairlines.

- **Attaching Guide Combs:** Select the desired limit comb (1mm, 3mm, 5mm, or 7mm) for beard trimming or specific detailing.
- **Power On/Off:** Press the power button. The intelligent light indicator will illuminate.
- **Trimming:** Use the trimmer for precise lines, edges, and intricate designs. For a closer trim, use without a guide comb.

## 3. Foil Shaver

For a smooth, close shave on facial hair or other body areas.

- **Power On/Off:** Press the power button. The intelligent light indicator will illuminate.
- **Shaving:** Gently press the shaver against the skin, moving it in short, circular, or straight motions against the

direction of hair growth. The dual sharp foil blades are designed for close contact.

#### 4. Nose/Ear Hair Trimmer

For safe and comfortable removal of unwanted nose and ear hair.

- **Power On/Off:** Press the power button. The LCD display will show the battery percentage.
- **Trimming:** Carefully insert the trimmer tip into the nostril or ear canal. The 360° multi-directional trimming system will smoothly cut hair without pulling.
- **Dust Cover:** Always use the provided dust cover to protect the head when not in use.



Image: A detailed view of the nose/ear hair trimmer, highlighting its 360° rotating head for safe and smooth trimming. The image also shows its skin-friendly design and portability.

#### MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your grooming tools.

1. **Cleaning Blades:** After each use, turn off the device and remove any attached guide combs. Use the provided

cleaning brush to brush away loose hairs from the blades and cutting head. For the foil shaver, the head can typically be detached for easier cleaning.

2. **Oiling Blades:** For the main hair clipper and precision trimmer, apply 1-2 drops of lubricating oil to the blades after every few uses or when the oil reminder appears on the LCD screen. Turn the device on for a few seconds to distribute the oil evenly. This reduces friction and maintains blade sharpness.
3. **Storage:** Store all components in the provided storage case in a dry, cool place, away from direct sunlight and moisture. Ensure the nose/ear trimmer has its dust cover on.
4. **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge when the battery indicator is low. If storing for an extended period, charge the devices to about 50% every few months.

## TROUBLESHOOTING

---

If you encounter issues with your HIENA PRO grooming set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Blades pull hair or cut poorly.	Blades are dull, dirty, or not oiled.	Clean the blades thoroughly and apply lubricating oil. If the problem persists, blades may need replacement (contact support).
Device makes unusual noise.	Blades are obstructed or require lubrication.	Clean the blades and oil them. Ensure no hair or debris is lodged in the mechanism.
Charging indicator not working.	Cable or power source issue.	Try a different USB cable or power adapter. Ensure connections are secure.

## PRODUCT SPECIFICATIONS

---

- **Brand:** HIENA PRO
- **Model Name:** HYN-212+023+HG303+b001
- **Power Source:** Lithium-Ion Batteries (1 required)
- **Main Clipper Charging Time:** Approximately 240 minutes (4 hours)
- **Main Clipper Operating Time:** Up to 5 hours
- **Trimmer Charging Time:** Approximately 120 minutes (2 hours)
- **Trimmer Operating Time:** Up to 2 hours
- **Shaver Charging Time:** Approximately 120 minutes (2 hours)
- **Shaver Operating Time:** Up to 90 minutes
- **Nose Trimmer Charging Time:** Approximately 60 minutes (1 hour)
- **Nose Trimmer Operating Time:** Up to 40 minutes
- **Product Dimensions:** 6.77 x 1.97 x 1.57 inches (Main Clipper); 1.16 Pounds (Total weight)
- **Included Components:** Hair Clipper, Trimmer, Shaver, Nose Hair Trimmer, Guide Combs, Cleaning Brush, USB Cables.

## WARRANTY AND SUPPORT

---

For warranty information, product support, or to purchase replacement parts, please refer to the contact information provided with your purchase or visit the official HIENA PRO website. Keep your purchase receipt as proof of purchase for any warranty claims.

## PRODUCT VIDEOS

---

No official seller videos are available for embedding at this time.

