

[Manuals.plus](#) /

› [NYXI](#) /

› NYXI Wireless Controller User Manual

NYXI B0DJW1D33R

NYXI Wireless Controller User Manual

Model: B0DJW1D33R

Brand: NYXI

INTRODUCTION

This manual provides detailed instructions for the NYXI Wireless Controller, designed for use with PS4, PC, iOS, and Android devices. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your controller.



Front view of the NYXI Wireless Controller, showcasing its transparent brown shell and illuminated RGB lighting.

Key Features

- **Hall Effect Joysticks and Triggers:** Engineered for precision, these components detect position via magnetic fields, eliminating drift and ensuring higher reliability and longer life. *(Note: Not compatible with PS3/PS5.)*
- **Ultimate Personalization with Breathing RGB Lighting:** Features a color-transparent shell with dynamic RGB lighting. Double-click the RGB button to activate a left/right asynchronous seven-color cycle, or turn off the lights as desired.
- **Programmable Back Buttons:** Customize frequently used buttons to reduce finger fatigue and enhance gaming. This feature helps minimize button wear and extends controller life. *(Note: No turbo function.)*
- **Multi-Platform Support:** Compatible with PS4, PC, iOS, and Android, supporting both Xinput and Dinput games on

PC for versatile gaming environments.

- **3.5mm Audio Jack:** Connect your headset directly to the controller for clear and immersive audio.
- **Bilateral Asymmetric Vibration:** Left and right grips feature asymmetric vibration motors for realistic and delicate haptic feedback, with 4-level vibration adjustment to enhance immersion in various game genres.

PACKAGE CONTENTS

- NYXI Wireless Controller
- USB Charging Cable
- User Manual

SETUP

Initial Charging

Before first use, fully charge the controller using the provided USB cable. Connect the small end of the USB cable to the controller's charging port and the larger end to a USB power source (e.g., console, PC, or USB wall adapter). The RGB lights may indicate charging status.

Connecting to PS4

1. Ensure your PS4 console is powered on.
2. Connect the controller to the PS4 console using the USB charging cable.
3. Press the PS button on the controller. The controller will pair with the console.
4. Once paired, you can disconnect the USB cable for wireless play.

Connecting to PC (Windows)

The controller supports both Xinput and Dinput modes on PC.

- **Wired Connection:** Connect the controller to your PC using the USB cable. The PC should automatically detect and install the necessary drivers.
- **Wireless Connection (Bluetooth):**
 - a. Ensure your PC has Bluetooth enabled.
 - b. On the controller, press and hold the Share button and the PS button simultaneously until the light bar starts flashing rapidly, indicating pairing mode.
 - c. On your PC, go to Bluetooth & other devices settings, click "Add Bluetooth or other device," and select "Bluetooth."
 - d. Select "Wireless Controller" from the list of available devices to pair.

Connecting to iOS/Android Devices

- Ensure Bluetooth is enabled on your mobile device.
- On the controller, press and hold the Share button and the PS button simultaneously until the light bar starts flashing rapidly.

- On your mobile device, go to Bluetooth settings and select "Wireless Controller" from the list of available devices to pair.

OPERATING INSTRUCTIONS

RGB Lighting Control

The controller features breathing RGB lighting. To control the lighting:

- **Change Color/Mode:** Double-click the RGB button (located near the PS button) to cycle through various vibrant colors or activate the asynchronous seven-color cycle.
- **Turn Off Lights:** Continue double-clicking the RGB button until the lights turn off.



The controller displaying its adjustable breathing RGB lights, which can be cycled through various colors or turned off.

Your browser does not support the video tag.

Video demonstrating the NYXI Wireless Controller with Hall Effect Joysticks and RGB lighting effects.

Programmable Back Buttons (M1/M2)

The controller features two programmable back buttons (M1 and M2) for enhanced gameplay. Refer to the detailed instructions in the included quick start guide for specific programming steps. These buttons can be mapped to various functions to suit your gaming style.



Rear view of the NYXI Wireless Controller highlighting the M1 and M2 programmable back buttons.

Vibration Adjustment

The controller offers 4-level vibration adjustment for a customized haptic experience. Consult the quick start guide for instructions on how to adjust the vibration intensity.



Illustration showing the 4-areas vibration feature of the NYXI Wireless Controller.

Using the 3.5mm Audio Jack

Connect any standard 3.5mm headset to the audio jack located at the bottom of the controller for in-game audio and chat functionality.

3.5 MM AUDIO JACK



The NYXI Wireless Controller with a headset connected to its 3.5mm audio jack.

COMPATIBILITY

The NYXI Wireless Controller is designed for broad compatibility across multiple gaming platforms:

- **PlayStation 4 (PS4):** Fully compatible for an immersive gaming experience.
- **PC (Windows):** Supports both Xinput and Dinput games, ensuring compatibility with a wide range of PC titles.
- **iOS Devices:** Connect wirelessly to compatible Apple devices for mobile gaming.
- **Android Devices:** Connect wirelessly to compatible Android smartphones and tablets.

Important Note: This controller is not compatible with PS3 or PS5 consoles.

MULTI-PLATFORM COMPATIBILITY



PC



PS



iOS



Android



Visual representation of the NYXI Wireless Controller's multi-platform compatibility.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller not connecting/pairing.	Low battery; incorrect pairing procedure; interference.	Ensure controller is charged. Follow pairing instructions carefully. Move closer to the device or away from other wireless signals.
Input lag or unresponsive buttons.	Low battery; wireless interference; outdated drivers (PC).	Charge the controller. Reduce wireless interference. Update PC drivers if necessary. Try a wired connection.
RGB lights not working.	Lights turned off; software glitch.	Double-click the RGB button to cycle through modes or turn them on. If unresponsive, try resetting the controller (refer to quick start guide for reset pinhole location).
Controller not recognized by PC.	Driver issues; incorrect connection mode.	Ensure USB cable is securely connected. Check Device Manager for driver status. Try a different USB port. Reinstall drivers if needed.

SPECIFICATIONS

- **Model:** B0DJW1D33R
- **Connectivity:** Wireless (Bluetooth), Wired (USB)
- **Joysticks:** Hall Effect
- **Triggers:** Hall Effect Analog
- **Lighting:** Breathing RGB
- **Audio:** 3.5mm Audio Jack
- **Vibration:** Bilateral Asymmetric, 4-Levels Adjustable
- **Programmable Buttons:** Yes (Back Buttons M1/M2)
- **Battery:** 1 Lithium Ion battery (included)
- **Product Dimensions:** 5.98 x 4.25 x 2.34 inches
- **Item Weight:** 7 ounces
- **Manufacturer:** NYXI
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official NYXI website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question