

Snughome OPCC001

Snughome Computer Tower Stand with Charging Station - Instruction Manual

Model: OPCC001

PRODUCT OVERVIEW

The Snughome Computer Tower Stand with Charging Station is designed to provide a versatile and ergonomic solution for your computer setup. This mobile PC holder features adjustable height, a built-in charging station, and locking wheels for easy mobility and stability.

- **Height Adjustable:** Customize the stand's height from 25.0 inches to 32.1 inches to perfectly align with your desk or preferred ergonomic position.
- **Integrated Charging Station:** Equipped with dual AC outlets, a Type-C port, and USB ports to keep your devices powered and organized.
- **Mobile Design with Locking Wheels:** Easily move your PC tower stand on both hard floors and carpets. Locking wheels ensure stability when stationary.
- **Expandable Tabletop:** The top surface provides additional space for a printer, external drives, or office supplies.
- **Robust Construction:** Supports up to 44 lbs, ensuring a sturdy platform for your equipment.



Figure 1: Snughome Computer Tower Stand in a typical office environment, showcasing its use with a PC tower and a printer on top.

SETUP AND ASSEMBLY

The Snughome Computer Tower Stand is designed for quick and straightforward assembly. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the included parts list (not provided in this manual, refer to product packaging).
2. **Attach Wheels:** Secure the four caster wheels to the base frame. Ensure two of the wheels are locking wheels and are placed on the front for easy access.
3. **Assemble Frame:** Connect the vertical support bars to the base and top frame using the provided hardware.
4. **Install Shelves:** Place the bottom and top shelves onto the assembled frame.
5. **Integrate Charging Station:** Install the charging station into the designated slot on the top shelf. Ensure the power cord is routed safely.

6. **Adjust Height:** Loosen the adjustment knobs on the vertical support bars to set the desired height. Tighten the knobs securely once the preferred height is achieved.

Please Confirm The Size Before Purchasing

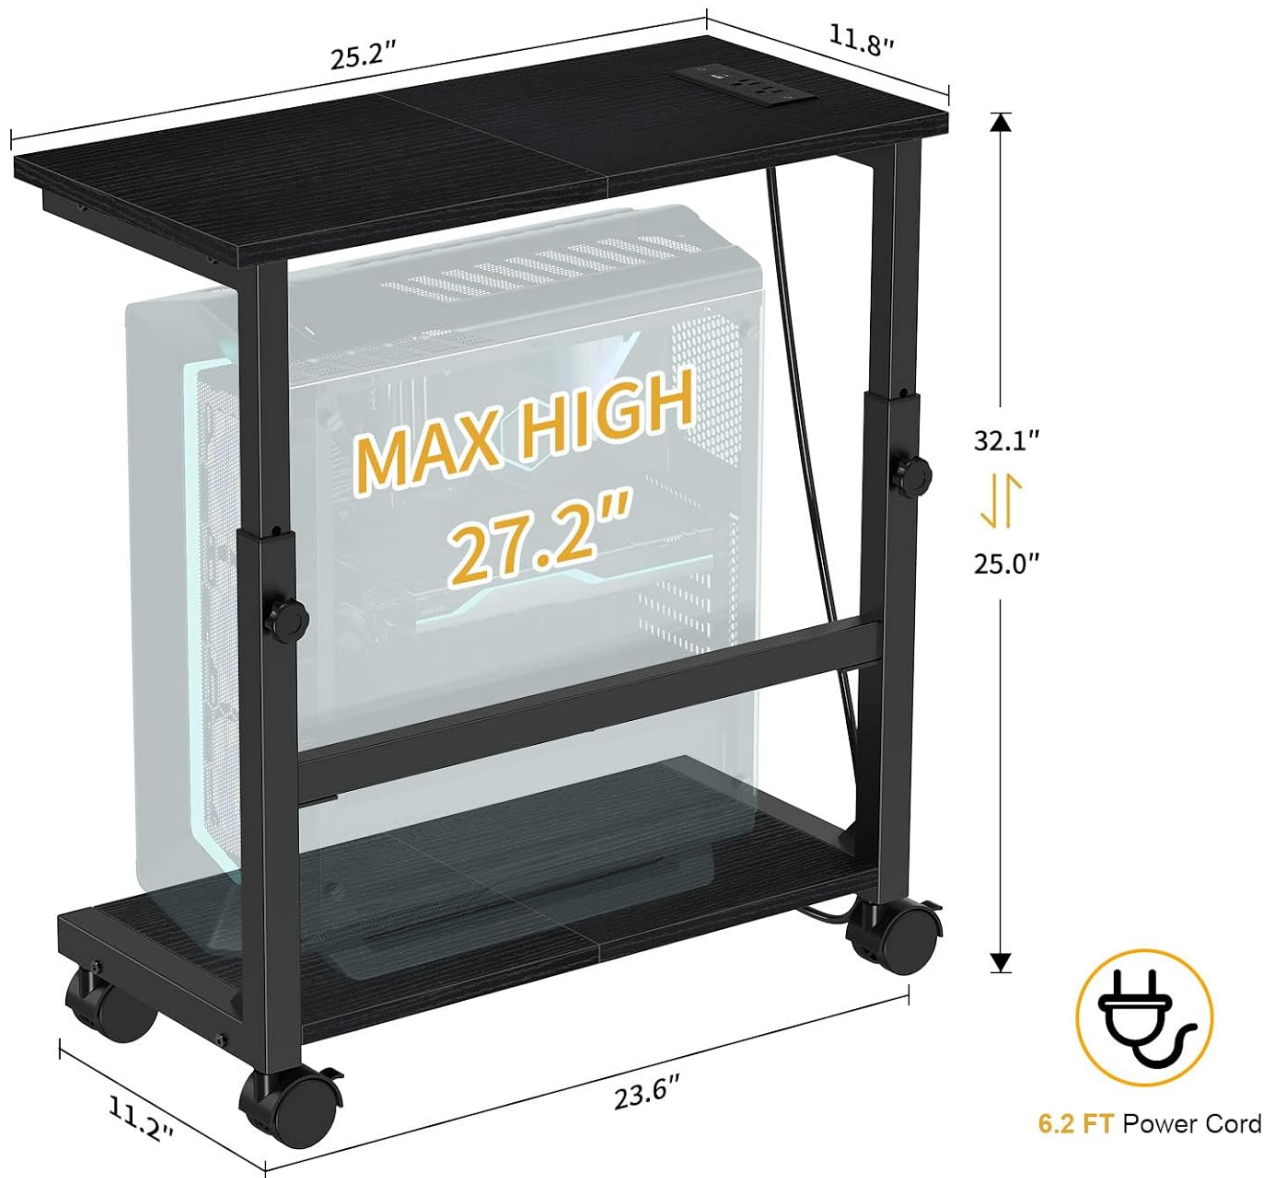


Figure 2: Product dimensions for planning placement and ensuring compatibility with your PC tower.



Figure 3: The stand's adjustable height allows it to be placed under or next to various desk types.

OPERATING INSTRUCTIONS

Height Adjustment

To adjust the height of your Snughome Computer Tower Stand:

1. Ensure no heavy items are on the top shelf that could cause instability during adjustment.
2. Locate the adjustment knobs on the vertical support bars (refer to Figure 4).
3. Turn the knobs counter-clockwise to loosen them.
4. Carefully slide the top section of the stand up or down to your desired height, between 25.0 inches and 32.1 inches.
5. Once the desired height is reached, turn the knobs clockwise to tighten them securely. Ensure both sides are tightened evenly to maintain stability.




Figure 4: Close-up of the height adjustment mechanism and available height settings.

Using the Charging Station

The integrated charging station provides convenient power access for your devices.

1. Plug the stand's 6.2 FT power cord into a standard 110V/12A wall outlet.
2. Utilize the two AC outlets for larger electronics like monitors or lamps.
3. Use the USB port (5V/2A) or the Type-C port for charging smartphones, tablets, and other compatible USB-powered devices.
4. Always ensure devices are compatible with the provided power specifications to prevent damage.

 Equipped with Charging Station



110V/12A
2 AC Outlets



5V/2A
USB Port
Type-C Port



6.2 FT Power Cord



Figure 5: Details of the integrated charging station, including AC, USB, and Type-C ports.

Mobility and Stability

The stand is equipped with smooth-rolling caster wheels for easy movement. To secure the stand in place, press down on the locking levers located on two of the wheels. To move the stand, lift the locking levers to unlock the wheels.

MAINTENANCE

To ensure the longevity and appearance of your Snughome Computer Tower Stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the metal or wood finish.
- **Dusting:** Regularly dust the stand to prevent accumulation, especially around the charging ports.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Wheel Care:** Keep the caster wheels free of debris (hair, dust, etc.) to ensure smooth movement.

Troubleshooting

If you encounter any issues with your Snughome Computer Tower Stand, please refer to the following common solutions:

Problem	Possible Cause	Solution
Stand is wobbly after height adjustment.	Adjustment knobs are not fully tightened.	Ensure both height adjustment knobs are tightened securely and evenly.
Charging station is not providing power.	Power cord is not plugged in or wall outlet is not active.	Verify the stand's power cord is securely plugged into a functional wall outlet. Check the wall outlet with another device.
Wheels are not rolling smoothly.	Wheels are locked or obstructed by debris.	Unlock the wheels by lifting the locking levers. Clear any hair or debris from the wheel casters.
Stand appears uneven.	Uneven floor surface or uneven height adjustment.	Move the stand to a level surface. Re-adjust the height, ensuring both sides are set to the same level and knobs are tightened.

Specifications

Brand	Snughome
Model Number	OPCC001
Height Adjustment Range	25.0" - 32.1"
Weight Capacity	Up to 44 lbs (20 kg)
Charging Station Output	2 x 110V/12A AC Outlets, 1 x 5V/2A USB Port, 1 x Type-C Port
Power Cord Length	6.2 FT
Material	Metal, Wood
Item Weight	7.61 kg
Compatible Devices	Desktop, Laptops, Smartphones, Tablets

Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the product packaging or the seller's information for specific warranty terms and duration. Keep your proof of purchase for any warranty claims.

Customer Support

For any questions, concerns, or assistance with your Snughome Computer Tower Stand, please contact the seller or manufacturer directly. Contact information can typically be found on the product packaging or through your purchase platform.

We are committed to providing a seamless experience and will gladly assist you.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question