

[Manuals.plus](#) /

› [Simple Deluxe](#) /

› Simple Deluxe 32-Inch Oscillating Tower Fan User Manual (Model: HIFANXTOWER32RC)

Simple Deluxe HIFANXTOWER32RC

Simple Deluxe 32-Inch Oscillating Tower Fan

MODEL: HIFANXTOWER32RC

Introduction

Thank you for choosing the Simple Deluxe 32-Inch Oscillating Tower Fan. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.

Safety Instructions

- Always ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects through the fan grille.
- Keep the fan away from water or moist environments.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Ensure the power cord is not damaged or pinched. A fused safety plug is included to safeguard against over-voltage and power surges.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

SAFE BLADELESS DESIGN



The fan features a narrow safety grille, making it suitable for environments with children.

Package Contents

Verify that all components are present:

- 1 x Simple Deluxe 32-Inch Tower Fan
- 1 x Remote Control
- User Manual (this document)

Setup

1. **Unpacking:** Carefully remove the fan and all accessories from the packaging.
2. **Base Assembly:** If the base is not pre-assembled, attach it to the bottom of the fan unit using the provided screws. Ensure it is securely fastened for stability.
3. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow and oscillation.
4. **Power Connection:** Plug the fan's power cord into a standard 110V AC electrical outlet. The power cord is approximately 5 feet long.

SPACE-SAVING FAN

Fits any corner of your room.



The fan's compact design (32 inches tall, 11 inches wide base) allows for easy placement in various rooms.

PRODUCT DETAILS



5 Feet Long (Foldable)



Handle Design, More Convenient To Use



The fan features a convenient handle for easy portability and a 5-foot power cord.

Operating Instructions

Your tower fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel / Remote Control Functions:

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Button:** Cycle through fan speeds: **Low (L)**, **Medium (M)**, **High (H)**.
- **Mode Button:** Select from three airflow modes: **Normal (NT)**, **Natural (SL)**, **Sleep (SW)**.
- **Timer Button:** Set the auto-off timer for 0.5 hours, 1 hour, 2 hours, or 4 hours.
- **Oscillation Button:** Press to activate or deactivate the wide-angle oscillation feature, distributing air across a broader area.



Visual representation of the fan's three modes and three speed settings.

Maintenance

Regular cleaning helps maintain the fan's performance and extends its lifespan.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlet and outlet grilles.
- **Storage:** When not in use for extended periods, unplug the fan, clean it, and store it in a cool, dry place.
- **Important:** Never immerse the fan in water or any other liquid.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power cord not securely plugged in.	Check if the power outlet is working. Ensure the power cord is firmly plugged into the outlet.
Weak airflow.	Fan speed is too low. Air inlets/outlets are blocked.	Increase the fan speed setting. Clean any dust or obstructions from the grilles.
Fan makes unusual noise.	Fan is not on a level surface. Internal obstruction.	Place the fan on a stable, flat surface. Unplug and check for any foreign objects inside the fan (do not attempt to disassemble).
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries or ensure correct polarity. Remove any objects blocking the signal path.

Specifications

Brand: Simple Deluxe

Model Name: Tower Fan with Remote Control for Indoor, Bedroom and Home Office

Model Number: HIFANXTOWER32RC

Product Dimensions: 32"D x 11"W x 11"H

Color: Black

Power Source: AC

Voltage: 110V

Wattage: 60 watts

Number of Speeds: 3 (Low, Medium, High)

Modes: Normal, Natural, Sleep

Control Method: Remote Control, Touch Control

Special Features: Oscillation, Timer (0.5H, 1H, 2H, 4H), Bladeless Design

Material: Plastic

Indoor/Outdoor Usage: Indoor

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Simple Deluxe customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [Simple Deluxe Store on Amazon](#).