

[Manuals.plus](#) /

› [Wahl Professional](#) /

› Wahl Professional Deluxe U-Clip Pet Trimmer Instruction Manual

Wahl Professional 09484-300A

Wahl Professional Deluxe U-Clip Pet Trimmer Instruction Manual

Model: 09484-300A

1. INTRODUCTION

Thank you for choosing the Wahl Professional Deluxe U-Clip Pet Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new grooming tool. Designed for light to medium coats, this trimmer offers precision and ease of use for at-home pet grooming.





Image 1.1: The Wahl Professional Deluxe U-Clip Pet Trimmer, featuring a black and chrome design.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the trimmer to prevent injury or damage.

- Always unplug the trimmer from the power outlet before cleaning, performing maintenance, or changing attachments.
- Keep blades sharp and adequately lubricated with clipper oil for optimal performance and to prevent pulling on pet hair.
- Avoid direct contact of the blades with skin. Use caution when grooming sensitive areas.
- This product is intended for pet grooming only. Do not use on humans, infants, or children.
- Keep the trimmer away from water sources and do not immerse it in water or other liquids.

- Always supervise your pet during the grooming process to ensure their safety and comfort.
- Do not operate the trimmer if the cord is damaged or if the appliance is malfunctioning. Contact customer support for assistance.

3. PACKAGE CONTENTS

Your Wahl Professional Deluxe U-Clip Pet Trimmer kit includes the following items:

- Wahl Deluxe U-Clip Pet Trimmer
- 7 Color-Coded Attachment Guide Combs (various lengths)
- Durable Storage Case
- Styling Apron
- Pet Styling Comb
- Clipper Blade Oil
- Cleaning Brush
- Red Clipper Blade Guard

Comfortable and regular pet grooming?

We got you!

14-Piece Grooming Kit

Kit includes 7 Attachment Color-Coded Guide Combs, Durable Storage Case, Styling Apron, Pet Styling Comb, and Red Clipper Blade Guard.



Image 3.1: All components of the Wahl Deluxe U-Clip 14-piece grooming kit, including the trimmer, attachment combs, storage case, apron, comb, oil, and cleaning brush.

4. SETUP

1. **Unpack:** Carefully remove all items from the packaging.
2. **Inspect:** Check the trimmer and all accessories for any signs of damage. Do not use if damaged.
3. **Clean Blades:** Before first use, ensure the blades are clean and free of any debris from manufacturing.

Use the provided cleaning brush.

4. **Oil Blades:** Apply 2-3 drops of Wahl clipper oil across the top of the blades and 1 drop on each side of the blade set. Turn the trimmer on for a few seconds to distribute the oil, then wipe off any excess. This ensures smooth operation and prolongs blade life.
5. **Prepare Pet:** Ensure your pet's coat is clean, dry, and thoroughly brushed to remove tangles and mats. This will help the trimmer glide smoothly and prevent blade clogging.

5. OPERATING INSTRUCTIONS

The Deluxe U-Clip features an adjustable blade and attachment combs for various cutting lengths.

5.1 Blade Adjustment

The trimmer's blade can be adjusted to three cutting lengths: #30 (0.8mm), #15 (1.5mm), and #10 (1.8mm). Use the taper lever located on the side of the clipper to change these lengths. Moving the lever up or down will adjust the blade for finer or coarser cuts.



Image 5.1: Illustration of the adjustable taper lever and the three blade settings (#30, #15, #10) for precise cutting lengths.

5.2 Attaching Guide Combs

For longer cutting lengths, attach one of the 7 color-coded guide combs. To attach, align the comb with the blade and push firmly until it clicks into place. Ensure the comb is securely fastened before use. To remove, gently lift the back of the comb and slide it off.

5.3 Grooming Your Pet

1. **Power On:** Plug the trimmer into a suitable electrical outlet and turn it on using the power switch.
2. **Start Slowly:** Begin grooming in an area where the pet is less sensitive, such as the back or sides. Hold the trimmer firmly but gently.
3. **Against the Grain:** For best results, move the trimmer against the direction of hair growth. Use smooth, even strokes.
4. **Sensitive Areas:** Use extra caution around sensitive areas like the face, ears, and paw pads. For these areas, consider using a shorter blade setting or a smaller comb. The Deluxe U-Clip is suitable for touch-ups in these areas.
5. **Monitor Heat:** Periodically check the blade temperature. If the blade becomes hot, turn off the trimmer, allow it to cool, and re-oil the blades.
6. **Breaks:** Take frequent breaks, especially for longer grooming sessions, to allow your pet to rest and to

prevent the trimmer from overheating.



DELUXE U-CLIP



3-IN-1 BLADE
TECHNOLOGY



ADJUSTABLE
TAPER LEVER



POWERFUL
MOTOR

Image 5.2: Close-up view of the Wahl Deluxe U-Clip, highlighting its 3-in-1 blade technology, adjustable taper lever, and powerful motor for efficient grooming.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your trimmer.

6.1 Cleaning

- After each use, unplug the trimmer.
- Remove any attached guide comb.
- Use the cleaning brush to remove loose hair from the blades and the trimmer housing.
- For thorough cleaning, the blade set can be removed by unscrewing the two screws holding it in place. Clean underneath the blades, then reattach securely.
- Wipe the body of the trimmer with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.

6.2 Oiling Blades

Regular oiling is crucial. Apply 2-3 drops of Wahl clipper oil to the blades before and after each grooming session. This reduces friction, prevents rust, and keeps the blades sharp. Run the trimmer for a few seconds to distribute the oil, then wipe off excess.

6.3 Storage

Store the trimmer and all accessories in the provided durable storage case in a cool, dry place, away from children and pets.

7. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on	Not plugged in; Power outlet issue; Damaged cord	Ensure securely plugged in; Test outlet with another device; Inspect cord for damage (do not use if damaged, contact support).
Blades pull hair or cut poorly	Blades are dull; Blades are dirty/clogged; Insufficient oil; Pet's coat is matted/tangled	Clean and oil blades thoroughly; Ensure pet's coat is clean and tangle-free; Replace blades if dull.
Trimmer gets hot quickly	Lack of lubrication; Excessive use without breaks; Dirty blades	Apply more clipper oil; Take breaks during grooming; Clean blades thoroughly.
Excessive noise or vibration	Loose blade screws; Internal issue	Check and tighten blade screws; If problem persists, contact customer support.

If these solutions do not resolve the issue, please contact Wahl Professional customer support.

8. SPECIFICATIONS

- **Model Number:** 09484-300A
- **Power Source:** Corded Electric
- **Blade Material:** Stainless Steel
- **Adjustable Cutting Lengths:** 0.8mm (#30), 1.5mm (#15), 1.8mm (#10)
- **Included Guide Combs:** 7 attachment combs
- **Item Weight:** Approximately 1 pound (16 ounces)
- **Product Dimensions:** 1.3 x 2.4 x 7.4 inches
- **Manufacturer:** Wahl Clipper Corp.

9. WARRANTY AND SUPPORT

Wahl Professional products are manufactured to high standards and are inspected before shipment. This

product is covered by a manufacturer's warranty against defects in material and workmanship. For specific warranty details, including duration and terms, please refer to the warranty card included in your product packaging or visit the official Wahl Professional website.

For technical assistance, replacement parts, or warranty claims, please contact Wahl Professional customer support:

- **Website:** www.wahlpro.com
- **Customer Service:** Refer to the contact information provided on the Wahl Professional website or product packaging.