

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [LarkLeaves](#) /
- › [LarkLeaves L10-Pro-BK Ergonomic Office Chair User Manual](#)

LarkLeaves L10-Pro-BK

LarkLeaves L10-Pro-BK Ergonomic Office Chair User Manual

Model: L10-Pro-BK

INTRODUCTION

Thank you for choosing the LarkLeaves L10-Pro-BK Ergonomic Office Chair. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your chair. Please read this manual thoroughly before assembly and use, and retain it for future reference.



Image: The LarkLeaves L10-Pro-BK ergonomic office chair positioned at a desk in a modern office environment.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the chair:

- Ensure all components are securely fastened before use.
- Do not stand on the chair.
- Do not use the chair as a step stool.
- Avoid placing heavy objects on the chair's backrest or armrests.
- Keep children away from the chair during assembly and adjustment.
- Do not sit on the edge of the seat or armrests.
- Maximum weight recommendation: 140 kg (300 lbs).

PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. The package typically includes:

- Backrest assembly

- Seat assembly with armrests
- Headrest
- Gas lift cylinder
- Star base
- Casters (wheels)
- Footrest assembly
- Neck cushion
- Assembly hardware (screws, washers)
- Assembly tool (Allen wrench)

ASSEMBLY INSTRUCTIONS

Assembly typically requires approximately 90 minutes. Follow the step-by-step instructions provided in the separate assembly guide included with your chair. Ensure all fasteners are tightened securely. A dedicated tool is provided for assembly.

1. Attach the casters to the star base by pushing them firmly into the sockets.
2. Insert the gas lift cylinder into the center hole of the star base.
3. Attach the control mechanism to the underside of the seat using the provided screws.
4. Connect the backrest to the seat assembly using the designated screws.
5. Place the assembled seat and backrest onto the gas lift cylinder.
6. Attach the headrest to the top of the backrest.
7. Install the retractable footrest mechanism to the underside of the seat.
8. Secure the neck cushion to the headrest or backrest as desired.

Note: Some fasteners may include a pre-applied thread-lock compound for enhanced security. Do not overtighten screws.

OPERATING INSTRUCTIONS

The LarkLeaves L10-Pro-BK chair offers multiple adjustment options for personalized comfort. Familiarize yourself with these features to optimize your seating experience.

1. Seat Height Adjustment

Locate the lever on the right side, beneath the seat. Pull the lever upwards to raise the seat. To lower the seat, pull the lever upwards while seated.

Customizable Backrest Tilt Perfect Support for Every Position

3-Level 145° Tilting Back



Image: The seat height adjustment lever and the tilt lock/unlock mechanism are visible on the underside of the seat. The image also illustrates the chair tilting back to 145 degrees.

2. Backrest Tilt and Tension Adjustment

The backrest can recline up to 145 degrees with 3 distinct locking positions. Use the lever on the left side, beneath the seat, to unlock and lock the tilt function. Rotate the round knob at the front, beneath the seat, to adjust the tilt tension, allowing for easier or firmer reclining.


The chair also features a 5-level height adjustable backrest for optimal spinal alignment.

Flexible 2D Lumbar Support Support & 5-Level Height Adjustable Backrest

Ultimate Lumbar Support
Maximum Comfort
Zero Back Strain



5-Level Height
Adjustable Backrest

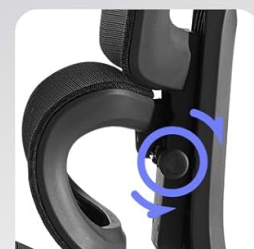

2D Adaptive
Lumbar Support

Image: A side view of the chair highlighting the flexible 2D lumbar support and the mechanism for adjusting the backrest height through 5 levels.

3. Adaptive 3D Headrest

The headrest offers multi-directional adjustments:

- **Height Adjustment:** Move the headrest up or down by 6 cm (2.4 inches).
- **Depth Adjustment:** Move the headrest forward or backward by 4 cm (1.6 inches).
- **Angle Adjustment:** Tilt the headrest back by 45 degrees.

Adaptive 3D Headrest



Image: Close-up of the headrest, illustrating its ability to move up/down, forth/back, and tilt, providing comprehensive neck support.

4. Flexible 2D Lumbar Support

The chair features adaptive 2D lumbar support designed to conform to the natural curve of your spine, providing targeted support and reducing back strain. This support automatically adjusts with your posture.

5. 3D Armrests

The armrests are adjustable in three dimensions (height, depth, and pivot) to support your arms and shoulders in various working positions.

6. Retractable Footrest

Pull out the footrest from beneath the seat when you wish to recline and elevate your legs. Push it back in when not in use.

Cloud-Like Comfort The Ultimate Office Chair Experience



8+h
Comfort



360°
Swivel Chair



Image: A user reclining in the chair with the footrest extended, demonstrating the chair's comfort for extended periods and its 360-degree swivel capability.

7. 360° Swivel

The chair base allows for a full 360-degree rotation, providing flexibility and ease of movement.

8. Non-Slip Coat Hangers

The backrest is equipped with integrated non-slip coat hangers, providing a convenient place to hang garments.

Equipped with Grip-Enhancing Non-Slip Coat Hangers



Image: A close-up of the chair's backrest, illustrating the built-in non-slip coat hangers with a small bag hanging from one.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chair.

- **Cleaning:** Wipe mesh and plastic surfaces with a damp cloth and mild soap. Avoid harsh chemicals. For the neck cushion, spot clean as needed.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Casters:** Clean casters regularly to remove dust and debris that may hinder smooth movement.
- **Mesh Fabric:** While durable, avoid sharp objects that could damage the mesh.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not raise or lower	Gas lift cylinder malfunction or lever not engaged.	Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift may need replacement.
Chair wobbles	Loose screws or uneven floor.	Check and tighten all assembly screws. Ensure the chair is on a flat, even surface.
Casters do not roll smoothly	Debris in casters or damaged casters.	Remove any hair or debris from the caster wheels. Replace damaged casters if necessary.
Backrest does not tilt or lock	Tilt mechanism locked or tension too high.	Ensure the tilt lock lever is disengaged. Adjust the tilt tension knob to a lower setting.

SPECIFICATIONS



Image: A technical diagram illustrating the various dimensions of the chair, including seat height, backrest height, and overall width and depth, along with the maximum weight capacity.

Model Number: L10-Pro-BK

Color: Black

Material: Polyethylene (Mesh), Plastic (Frame)

Product Dimensions (L x W x H): 48.01 x 50.04 x 121.92 cm (18.9 x 19.7 x 48.0 inches)

Item Weight: 19 Kilograms (41.9 lbs)

Maximum Weight Recommendation: 140 Kilograms (300 lbs)

Back Style: Mesh Back

Components Included: Arm support, Headrest, Lumbar Support, Footrest, Neck Cushion

WARRANTY AND SUPPORT

LarkLeaves is committed to providing high-quality products. For specific warranty details, please refer to the warranty card included with your purchase or contact LarkLeaves customer support directly. If you encounter any issues or have questions regarding your L10-Pro-BK chair, please reach out to our customer service team for assistance.

Contact information can typically be found on the product packaging or the official LarkLeaves website.