

[Manuals.plus](#) /

› [Petgravity](#) /

› Speedy Sprint Ball Toy for Cat Type-C Rechargeable Interactive Cats Toy 2 Set User Manual

Petgravity TTQ2410USASET

Petgravity Speedy Sprint Ball Interactive Cat Toy User Manual

Model: TTQ2410USASET

INTRODUCTION

Thank you for choosing the Petgravity Speedy Sprint Ball Interactive Cat Toy. This manual provides detailed instructions for the safe and effective use of your new cat toy. Designed to engage your feline companion with unpredictable movements and two distinct play modes, the Speedy Sprint Ball offers hours of entertainment and exercise.

SAFETY INFORMATION

- Always supervise your pet during play to prevent accidental ingestion of parts.
- Inspect the toy regularly for damage. Discontinue use if any part becomes loose or broken.
- Keep the toy away from water and excessive moisture.
- This toy is designed for indoor use only.
- Ensure the charging port cover is securely closed during play to prevent dust and debris from entering.

PACKAGE CONTENTS

- 2 x Petgravity Speedy Sprint Ball
- Feather accessories
- Type-C charging cable

SETUP

Charging the Toy

Before first use, fully charge the Speedy Sprint Ball. The toy is equipped with a Type-C charging port.

1. Locate the Type-C charging port on the toy.
2. Connect the provided Type-C charging cable to the toy and a 5V/1A charging adapter (not included).
3. During charging, the indicator light will flash blue.

4. Once fully charged (approximately 1.5 hours for up to 90 minutes of play), the indicator light will turn solid green.

Type-C Rechargeable

1.5 Hours of Charge can Supply up to 90min

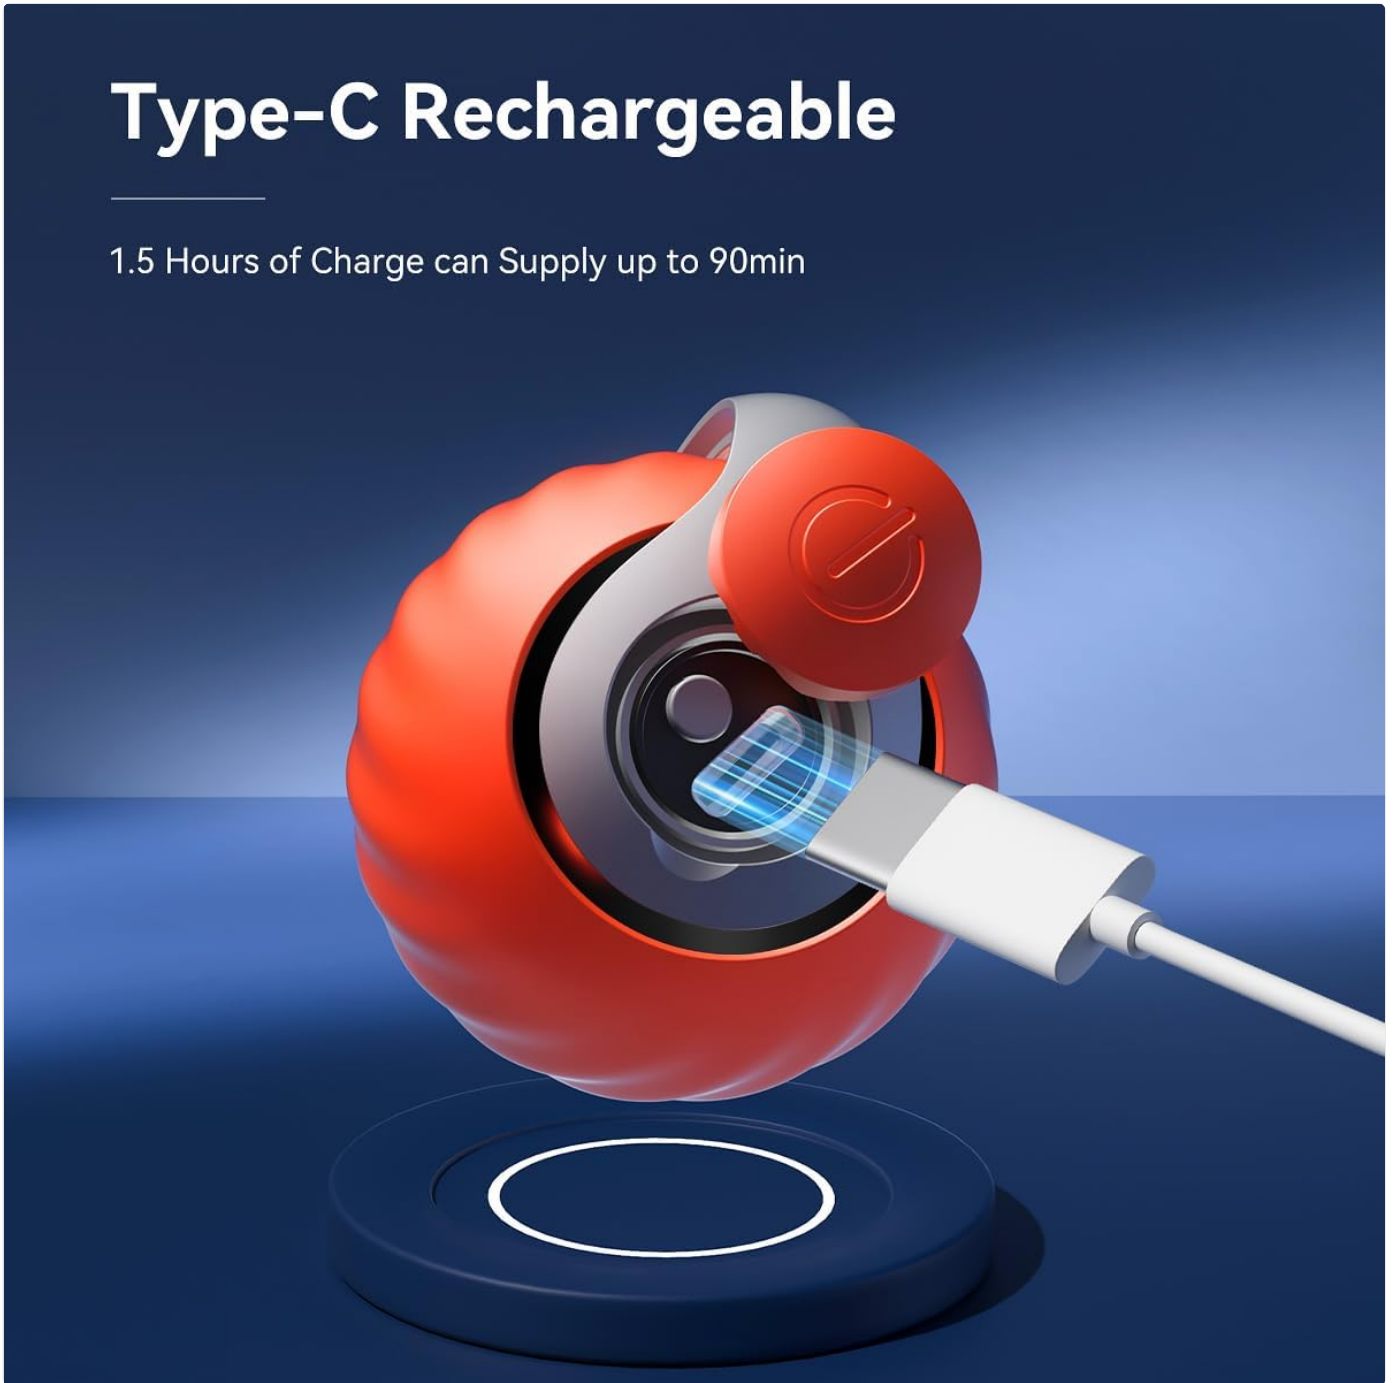 


Image: The Speedy Sprint Ball being charged via its Type-C port. A blue light indicates charging in progress.

Attaching Feather Accessories

The package includes feather accessories that can be attached to the ball to further stimulate your cat's hunting instincts.

1. Gently insert the base of the feather accessory into the designated slot on the toy.
2. Ensure it is securely fastened before allowing your cat to play.

Replacement Accessories Endless Entertainment.



Image: A blue Speedy Sprint Ball with a green feather attachment, illustrating how accessories provide additional entertainment.

OPERATING INSTRUCTIONS

Power On/Off and Mode Switching

- **Short press the power button:** Powers the toy on or off.
- **Long press the power button for 3 seconds:** Switches between operating modes.

Operating Modes:

- **Normal Mode:** Indicated by a **green light** staying on for 3 seconds upon activation. In this mode, the toy runs for 5 minutes and then automatically shuts down.
- **Smart Mode:** Indicated by a **blue light** staying on for 3 seconds upon activation. In this mode, the toy runs for 5 minutes and then enters standby. It can be reactivated by a cat's touch or movement.

Two Modes Available. One Press to Switch

Long press the power button to switch between normal and smart modes.



Image: Visual representation of how to switch between Normal Mode (auto-off in 5 mins) and Smart Mode (auto-standby in 5 mins, reactivate by tapping) by long-pressing the power button.

Adjusting Speed

After powering on, short press the on/off button to switch between speeds.

- **Low-speed:** Indicated by a **light green** light in Normal Mode or **light blue** light in Smart Mode. Recommended for first-time users or kittens.
- **High-speed:** Indicated by a **dark green** light in Normal Mode or **dark blue** light in Smart Mode.

Two Speeds Available

Short press the power button to switch between



Low-speed: Light green/Light blue.



High-speed: Dark green/Dark blue



Image: Illustration of the two speed settings: Low-speed (light green/light blue) and High-speed (dark green/dark blue), adjusted by short-pressing the power button.

Movement and Texture

The Speedy Sprint Ball is designed with a special wave texture on its surface, which contributes to its unpredictable movement patterns, keeping your cat engaged. It rolls flexibly on various surfaces including tile, wooden floors, and carpet.

Wave Texture Full of Power

The sphere is designed with a special wave texture, making the movement direction unpredictable.

 
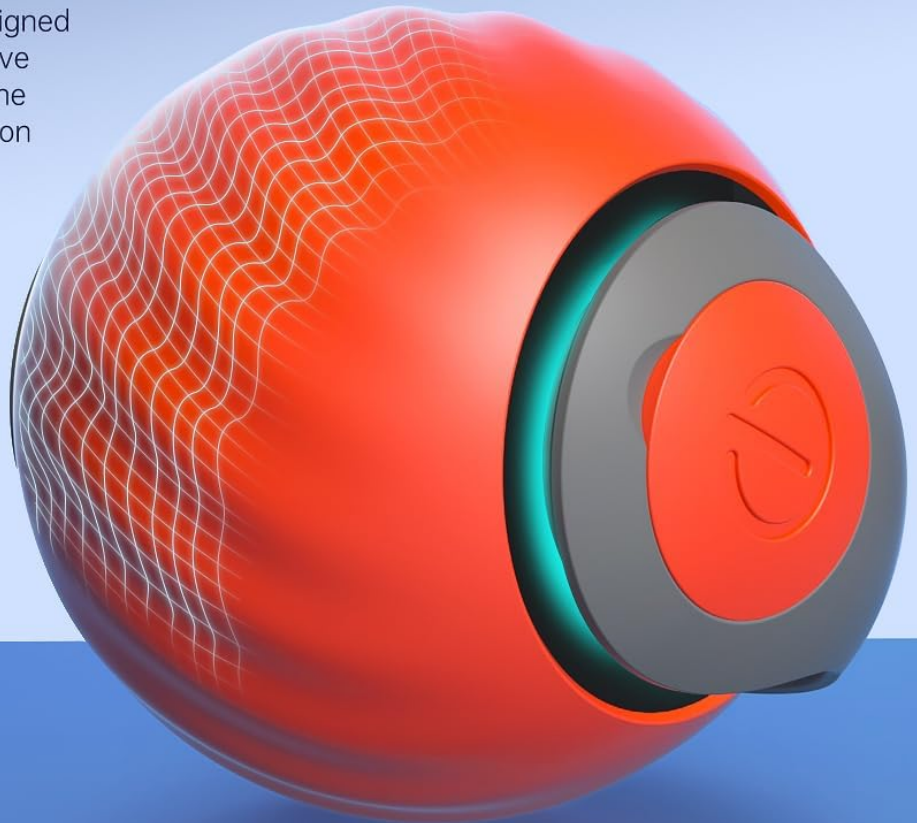 


Image: A detailed view of the Speedy Sprint Ball highlighting its unique wave texture, which aids in unpredictable movement.

Mutiple Scenarios Use

Tile Floor

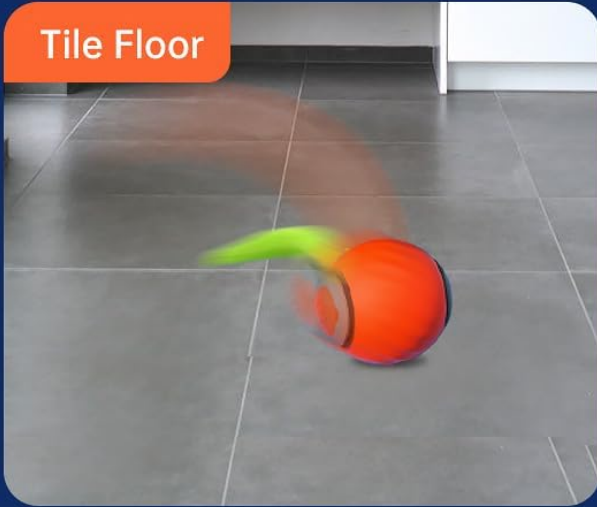

Wooden floor



Carpet



Image: The Speedy Sprint Ball demonstrating its ability to move across multiple surfaces, including tile, wood, and carpet, providing versatile play.

MAINTENANCE

Cleaning

To maintain the toy's performance and hygiene:

- Wipe the exterior of the ball with a soft, damp cloth.
- Do not submerge the toy in water or use harsh cleaning agents.
- Ensure the toy is completely dry before charging or storing.

Storage

Store the Speedy Sprint Ball in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Problem	Indicator Light	Solution
Toy does not turn on or stops moving quickly.	Red light flashing	Low battery. Recharge the toy using the provided Type-C cable.
Toy enters standby mode unexpectedly.	N/A (after 5 mins of inactivity in Smart Mode)	This is normal behavior for Smart Mode. Touch or pat the toy to reactivate it. If in Normal Mode, it will shut down after 5 minutes.
Toy gets stuck or doesn't move smoothly.	N/A	Ensure the play area is clear of obstacles. The toy is designed to navigate various surfaces, but extreme clutter may impede movement. Check for debris in the wheel mechanism.

SPECIFICATIONS

Feature	Detail
Model Number	TTQ2410USASET
Dimensions (LxWxH)	1.97 x 1.97 x 1.97 inches (50mm diameter)
Weight	3.98 ounces
Battery	1 Lithium Polymer (included)
Charging Port	Type-C
Material	Acrylonitrile Butadiene Styrene, Silicone
Recommended Age	Cats of all ages / All Life Stages
Intended Use	Indoor

50mm/
1.96 inches



Image: A visual representation of the Speedy Sprint Ball's dimensions, indicating a diameter of 50mm or 1.96 inches.

WARRANTY AND SUPPORT

Specific warranty information for the Petgravity Speedy Sprint Ball is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact Petgravity customer service directly or refer to the product's purchase page.

You can visit the official Petgravity Store on Amazon for more information:[Petgravity Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question