

## ND8322P

# Generic 8-Channel 1080p NVR (ND8322P) Instruction Manual

## INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Generic 8-Channel 1080p NVR (Network Video Recorder) model ND8322P. This device is designed for small-scale video surveillance installations, offering reliable recording and monitoring capabilities. Please read this manual thoroughly before using the product to ensure proper setup and functionality.

## SAFETY INFORMATION

- Power Supply:** Use only the power adapter supplied with the NVR. Using an incorrect power supply may damage the device and void the warranty.
- Ventilation:** Ensure the NVR is placed in a well-ventilated area. Do not block any ventilation openings.
- Environment:** Avoid exposing the NVR to extreme temperatures, humidity, dust, or direct sunlight.
- Handling:** Handle the NVR with care. Do not drop or subject it to strong vibrations.
- Servicing:** Do not attempt to open or service the NVR yourself. Refer all servicing to qualified personnel.

## PACKAGE CONTENTS

Before proceeding with the installation, please verify that all items listed below are present in your package:

- Generic 8-Channel 1080p NVR (ND8322P) Unit
- Power Adapter
- USB Mouse
- Installation Hardware
- Quick Start Guide (if applicable)

## PRODUCT OVERVIEW

### Key Features

- 8-Channel Support:** Live viewing at 1920 x 1080 resolution, up to 120 fps.
- One-Button Setup:** Easy plug-and-play installation.

- **Local Video Output:** HDMI and VGA options for direct display connection.
- **Video Compression:** Supports H.264 and MJPEG for high-quality playback.
- **Integrated Storage:** Preinstalled 3TB HDD for extensive video storage.
- **Fisheye Dewarp:** One channel supports fisheye dewarping for enhanced viewing.
- **Playback Features:** 1-channel local and 4-channel remote synchronous playback.
- **Mobile Access:** EZConnect and VIVOTEK iViewer app for 24/7 mobile monitoring.
- **User-Friendly Interface:** Control via mouse and keyboard; supports PiP video control.

## Front and Rear Panel Layout

This section describes the physical components and ports of the NVR. For visual reference, please consult the product packaging or manufacturer's website as no product images were available for embedding in this manual. The **front panel** typically includes status indicator lights (power, HDD activity, network), and potentially USB ports for mouse or backup devices.

The **rear panel** houses the primary connection ports, including:

- Power Input
- HDMI Output (for monitor connection)
- VGA Output (for monitor connection)
- Ethernet Port (for network connection)
- USB Ports (for mouse, external storage)
- Audio Input/Output (if available)

## SETUP

---

### Unpacking and Initial Placement

1. Carefully remove the NVR from its packaging.
2. Place the NVR on a flat, stable surface in a location with adequate ventilation. Ensure it is away from direct heat sources, moisture, and strong electromagnetic fields.

### Connecting Peripherals

1. **Connect a Monitor:** Connect a monitor to the NVR using either the HDMI or VGA port.
2. **Connect a Mouse:** Plug the supplied USB mouse into one of the NVR's USB ports.
3. **Connect to Network:** Connect an Ethernet cable from your router or network switch to the NVR's LAN port.
4. **Connect Power:** Plug the power adapter into the NVR's power input, then plug the adapter into a power outlet. The NVR will power on automatically.

### Camera Connection

The ND8322P NVR features a user-friendly one-button setup for IP cameras, simplifying the installation process with its plug-and-play and auto setup functionality. Ensure your IP cameras are powered on and connected to the same network as the NVR. The NVR will automatically detect and configure compatible cameras.

## OPERATING THE NVR

---

## Initial Configuration

Upon first boot, the NVR will guide you through an initial setup wizard. Follow the on-screen prompts to set up basic parameters such as language, date/time, network settings, and create an administrator password. It is crucial to set a strong password for security.

## Live View

After initial setup, the NVR will display the live view of connected cameras. You can switch between single-camera view, multi-camera grid view, and utilize PiP (Picture-in-Picture) video control using the mouse.

## Recording Management

The NVR supports various recording modes, including continuous, scheduled, and motion-detection recording. Access the recording settings through the main menu to configure your preferred recording schedule and parameters for each camera. The preinstalled 3TB HDD provides ample storage for recorded footage.

## Playback and Export

To review recorded footage, navigate to the playback section in the NVR's menu. You can search for recordings by date, time, and event. The NVR supports 1-channel local and 4-channel remote synchronous playback. Footage can be exported to a USB drive for backup or further analysis.

## Mobile Access

For 24/7 mobile monitoring, download and install the EZConnect or VIVOTEK iViewer app on your smartphone or tablet. Follow the in-app instructions to connect to your NVR and view live feeds or playback recorded video remotely.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the NVR. Do not use liquid or aerosol cleaners.
- **Firmware Updates:** Periodically check the manufacturer's website for firmware updates. Keeping your NVR's firmware up-to-date ensures optimal performance and security.
- **Data Backup:** Regularly back up important recorded footage to an external storage device to prevent data loss.
- **Hard Drive Health:** Monitor the health of the internal hard drive through the NVR's system settings. Replace the HDD if any issues are detected.

## TROUBLESHOOTING

---

This section addresses common issues you might encounter with your NVR.

- **No Video Output:** Ensure the monitor is correctly connected and powered on. Check the HDMI/VGA cable. Try restarting the NVR.
- **Cameras Not Displaying:** Verify that cameras are powered, connected to the network, and properly configured in the NVR's settings. Check network cables.
- **No Recording:** Check recording schedules and ensure the hard drive is functioning correctly and has sufficient space.
- **Network Connection Issues:** Verify the Ethernet cable connection. Check your router and network settings.

Ensure the NVR has a valid IP address.

- **Forgot Password:** Refer to the manufacturer's support resources for password reset procedures, as this often requires specific steps to maintain security.

If you encounter issues not covered here, please contact technical support.

## SPECIFICATIONS

Feature	Detail
Model Number	ND8322P
Number of Channels	8
Video Resolution	1080p (1920 x 1080)
Video Compression	H.264, MJPEG
Storage	Preinstalled 3TB HDD
Video Output	HDMI, VGA
Mobile Access	EZConnect, VIVOTEK iViewer app
User Interface	Mouse and Keyboard control, PiP video control
Fisheye Dewarp	1-channel support
Playback	1-channel local, 4-channel remote synchronous
Manufacturer	Vivotek
First Available Date	October 12, 2024

## WARRANTY AND SUPPORT

Specific warranty terms and conditions for the Generic 8-Channel 1080p NVR (ND8322P) are typically provided with your purchase documentation or can be found on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

For technical support, product inquiries, or warranty service, please contact the retailer or the manufacturer directly using the contact information provided with your product or on their official support channels.

## MEDIA INFORMATION

No product images or official product videos were available for embedding in this instruction manual.

