

## LEMEGA MINI GO

# LEMEGA Mini GO DAB Radio User Manual

Model: MINI GO | Brand: LEMEGA

## 1. INTRODUCTION

Thank you for choosing the LEMEGA Mini GO DAB Radio. This compact and portable device allows you to enjoy high-quality digital radio (DAB+) and traditional FM broadcasts. This manual provides essential information for setting up, operating, and maintaining your Mini GO radio to ensure optimal performance and longevity.

Please read this manual thoroughly before using the product and retain it for future reference.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not disassemble, repair, or modify the unit yourself. Refer all servicing to qualified personnel.
- Keep the device away from water or other liquids. If liquid enters the device, discontinue use immediately.
- Use only the specified charging cable (USB Type C) and power adapter (not included) to charge the device.
- Dispose of the battery and device responsibly according to local regulations.

## 3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- LEMEGA Mini GO DAB Radio
- USB Type-C Charging Cable
- Earphones (with 3.5mm jack)
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your LEMEGA Mini GO DAB Radio.



Figure 4.1: Front view of the LEMEGA Mini GO DAB Radio, showing the display, control buttons, and connected earphones. The radio is compact and designed for portability.



Figure 4.2: The LEMEGA Mini GO radio held in a hand, emphasizing its small size and the display indicating "BBC Radio" and "5 Live Breakfast". The image also highlights its DAB+ and FM capabilities with 20 presets for favorite stations.



Figure 4.3: The LEMEGA Mini GO radio placed outdoors on a wooden surface, suggesting its portability. The image prominently features an icon indicating "6hr battery playback," signifying long listening hours and quick charging capability.



Figure 4.4: The LEMEGA Mini GO radio shown in a simulated rainy environment, illustrating its "Ultra Durable" and rugged design suitable for all weather outdoor usability. A "30g" weight is also indicated, highlighting its lightweight nature.



## Multi-Active ready Sports Clip to attach to clothing or bag & XL length earphone.

**Figure 4.5:** A collage demonstrating the "Multi-Active ready" design of the LEMEGA Mini GO radio. It shows individuals engaged in activities like running, hiking, walking a dog, and exercising, with the radio's sports clip attached to clothing or bags, and mentions XL length earphones.

### Controls and Ports:

- **Display Screen:** Shows station information, time, battery level, and menu options.
- **MODE Button:** Switches between DAB+ and FM modes.
- **Navigation Buttons (◀◀ / ▶▶):** Used for tuning, navigating menus, and selecting stations.
- **Play/Pause/Select Button (Center):** Confirms selections or plays/pauses audio.
- **Volume Up/Down:** Integrated with navigation buttons or separate controls (if applicable).
- **3.5mm Audio Jack:** For connecting earphones, which also serve as the antenna.
- **USB Type-C Port:** For charging the internal battery.
- **Sports Clip:** Located on the back for attaching to clothing or bags.

## 5. SETUP

## 5.1 Charging the Battery

1. Connect the supplied USB Type-C cable to the charging port on the LEMEGA Mini GO radio.
2. Connect the other end of the USB cable to a USB power adapter (e.g., smartphone charger, computer USB port) or a powered USB hub.
3. The battery indicator on the display will show charging status. A full charge typically provides up to 6 hours of playback.
4. Once fully charged, disconnect the charging cable.

## 5.2 Connecting Earphones

The earphones serve as the antenna for both DAB+ and FM reception. It is essential to connect them for proper operation.

- Insert the 3.5mm jack of the earphones firmly into the audio jack on the radio.

# 6. OPERATING INSTRUCTIONS

## 6.1 Power On/Off

- To power on, press and hold the central Play/Pause>Select button until the display illuminates.
- To power off, press and hold the central Play/Pause>Select button until the display turns off.

## 6.2 Mode Selection (DAB+ / FM)

- Press the **MODE** button to switch between DAB+ and FM (Frequency Modulation) radio modes. The current mode will be displayed on the screen.

## 6.3 DAB+ Radio Operation

1. Switch to DAB+ mode using the **MODE** button.
2. The radio will automatically perform a full scan for available DAB+ stations upon first use or if no stations are found. This may take a few moments.
3. Once the scan is complete, the first available station will begin playing.
4. Use the **◀◀** and **▶▶** buttons to navigate through the list of available stations.
5. Press the central Play/Pause>Select button to select and listen to a station.
6. The display shows the station name on the top line and program information (e.g., song title, show name) on the second line.

## 6.4 FM Radio Operation

1. Switch to FM mode using the **MODE** button.
2. To auto-scan for FM stations, press and hold the central Play/Pause>Select button. The radio will scan and save available stations.
3. Alternatively, short press the **◀◀** or **▶▶** buttons to auto-tune to the next available station.
4. To manually tune, press and hold the **◀◀** or **▶▶** buttons to adjust the frequency step by step.

## 6.5 Saving and Recalling Presets

The LEMEGA Mini GO supports up to 20 presets for your favorite DAB+ and FM stations.

1. **To Save a Preset:**

- Tune to the desired station.
- Press and hold the central Play/Pause/Select button until "Preset Store" or a similar message appears.
- Use the **◀◀** and **▶▶** buttons to select the desired preset number (1-20).
- Press the central Play/Pause/Select button again to confirm and save the station.

## 2. To Recall a Preset:

- Short press the central Play/Pause/Select button to enter the preset recall mode.
- Use the **◀◀** and **▶▶** buttons to scroll through your saved presets.
- Press the central Play/Pause/Select button to select and play the desired preset.

## 6.6 Volume Control

Volume control is typically integrated with the navigation buttons. While a station is playing:

- Short press the **◀◀** button to decrease volume.
- Short press the **▶▶** button to increase volume.

## 7. MAINTENANCE

Proper care will extend the life of your LEMEGA Mini GO radio.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the radio. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

If you encounter issues with your LEMEGA Mini GO radio, please refer to the following common problems and solutions:

| Problem                          | Possible Cause   | Solution  |
|----------------------------------|--|---|
| No power / Device won't turn on. | Battery is depleted.   | Charge the battery using the USB Type-C cable.  |
| Poor or no radio reception.      | Earphones not connected or not fully inserted. Weak signal area. | Ensure earphones are securely connected. Move to an area with better signal reception. Perform a full scan for DAB+ or FM stations. |
| No sound from earphones.         | Volume too low. Earphones faulty or not connected properly.      | Increase the volume. Check earphone connection. Try a different pair of earphones.  |
| Buttons are unresponsive.        | Temporary software glitch.                                       | Try restarting the device by holding the power button. If unresponsive, allow the battery to fully drain and then recharge.         |

If the problem persists after trying these solutions, please contact LEMEGA customer support.

## 9. SPECIFICATIONS

| Feature            | Detail   |
|--------------------|--|
| Model Number       | MINI GO  |
| Product Dimensions | 37L x 24W x 55H millimetres (1.46L x 0.94W x 2.17H inches) |
| Item Weight        | 100 Grams (approx. 3.53 ounces)                            |
| Colour             | Orange, MINI GO  |
| Connectivity       | USB Type C, 3.5mm Audio (Auxiliary)                        |
| Power Source       | Battery Powered (Rechargeable)                             |
| Material Type      | Plastic  |
| Compatible Devices | MP3 Player, Tablet, Smartphone (for charging)              |
| Radio Type         | DAB+, FM   |
| Presets            | 20 (DAB+ & FM combined)                                    |
| Battery Playback   | Up to 6 hours  |

## 10. WARRANTY AND SUPPORT

LEMEGA products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official LEMEGA website.

Please have your product model number (MINI GO) and purchase details ready when contacting support.