

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEMEGA](#) /

› [LEMEGA Mini Go Portable DAB/FM Radio User Manual](#)

LEMEGA MINI GO

LEMEGA Mini Go Portable DAB/FM Radio User Manual

Model: MINI GO

1. INTRODUCTION

Welcome to your LEMEGA Mini Go Portable DAB/FM Radio. This manual provides essential instructions for setting up, operating, and maintaining your device. Please read it thoroughly to ensure optimal performance and longevity of your radio.

Package Contents

- 1 x LEMEGA Mini Go Portable DAB/FM Radio
- 1 x USB-C Charging Cable
- 3 x Pairs of Earphones (S/M/L sizes)
- 1 x User Manual

2. PRODUCT OVERVIEW

The LEMEGA Mini Go is a compact and lightweight portable radio designed for personal listening. It supports both DAB/DAB+ and FM radio bands and features a rechargeable battery for extended use.



Image 2.1: LEMEGA Mini Go Portable DAB/FM Radio. This image displays the compact pink radio unit alongside its black wired earphones, illustrating its small size and included accessories.

Device Features

- **Compact Design:** Weighing approximately 30g, it is designed for portability.
- **DAB/DAB+ and FM Radio:** Access a wide range of digital and analog radio stations.
- **Rechargeable Battery:** Provides up to 6 hours of playback on a single charge.
- **Integrated Antenna:** Earphones serve as the radio antenna for optimal signal reception.
- **Sport Clip:** Adjustable clip for secure attachment to clothing or bags.
- **Lock Function:** Prevents accidental button presses during activity.
- **20 Presets:** Store your favorite DAB and FM stations for quick access.
- **Digital Display:** Clear screen showing station information, time, and battery level.

3. SETUP

3.1. Charging the Radio

Before first use, fully charge your LEMEGA Mini Go radio. Use the provided USB-C cable to connect the radio to a USB power source (e.g., computer USB port, USB wall adapter, or power bank).

- The battery indicator on the digital display will show charging status.
- A full charge provides up to 6 hours of listening time.



Image 3.1: LEMEGA Mini Go radio highlighting 6-hour battery playback. The image shows the pink radio with earphones, emphasizing its long battery life for extended listening.

3.2. Connecting Earphones

The included earphones serve as the antenna for your radio. For optimal reception, ensure they are fully plugged into the 3.5mm earphone jack and extended.

- Select the earphone size (S, M, L) that provides the most comfortable and secure fit.

3.3. Initial Power On

Press and hold the **MODE** button for a few seconds to turn on the radio. Upon first power-on, the radio will typically enter DAB mode and automatically scan for available stations.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- To turn on: Press and hold the **MODE** button.
- To turn off: Press and hold the **MODE** button again.

4.2. Mode Selection (DAB/FM)

- Short press the **MODE** button to switch between DAB and FM radio modes.



Image 4.1: LEMEGA Mini Go radio in hand, emphasizing DAB+ and FM capabilities. The display shows 'BBC Radio 5 Live Breakfast', indicating active radio playback.

4.3. Scanning for Stations

- **DAB Mode:** The radio will automatically scan for DAB stations upon first use. To initiate a manual scan, navigate to the 'Full Scan' option in the menu (if available) or switch modes and back.
- **FM Mode:** Use the **Previous/Rewind** or **Next/Fast Forward** buttons to tune to the next available station.

4.4. Tuning and Navigation

- Use the **Previous/Rewind** (◀) and **Next/Fast Forward** (▶) buttons to browse through available stations.
- Press the **SELECT** button to confirm a station selection.

4.5. Saving and Recalling Presets

The radio allows you to save up to 20 favorite stations for quick access.

- **To Save a Preset:** Tune to the desired station. Press and hold the **PRESET** button. Use the navigation buttons to select a preset number (1-20). Press **SELECT** to confirm.
- **To Recall a Preset:** Short press the **PRESET** button. Use the navigation buttons to scroll through your saved presets. Press **SELECT** to listen to the selected preset.

4.6. Volume Control

- Use the **Volume Up** and **Volume Down** buttons to adjust the listening volume.

4.7. Lock Function

To prevent accidental button presses, slide the lock switch (usually located on the side of the device) to the locked position. The display may show a lock icon. Slide it back to unlock the controls.

4.8. Display Information

The digital display provides various information:

- Current station name and program information.
- Current time and date.
- Battery level indicator.
- Signal strength indicator.

5. MAINTENANCE

5.1. Cleaning

- Wipe the radio's surface with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the finish.

5.2. Battery Care

- Recharge the battery regularly, even if the radio is not used frequently, to maintain battery health.
- Avoid exposing the radio to extreme temperatures (hot or cold), as this can affect battery performance and lifespan.
- Do not attempt to replace the internal battery yourself. Contact customer support if battery issues arise.

5.3. Storage

- When not in use for extended periods, store the radio in a cool, dry place away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter any issues with your LEMEGA Mini Go radio, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Radio does not power on.	Battery is depleted.	Connect the radio to a power source using the USB-C cable and allow it to charge.
No signal or poor reception.	Earphones not properly connected or extended; weak signal area.	Ensure earphones are fully plugged in and their cable is extended. Try moving to an area with better reception. Perform a full station scan.
No sound from earphones.	Volume is too low or muted; earphones not connected.	Increase the volume. Ensure earphones are securely plugged into the jack. Test with another pair of earphones if available.
Buttons are unresponsive.	Lock function is engaged.	Slide the lock switch to the unlocked position.

If the problem persists after trying these solutions, please contact LEMEGA customer support for further assistance.

7. SPECIFICATIONS

Brand	LEMEGA
Model	MINI GO
Tuning Technology	DAB/DAB+/FM
Power Source	Rechargeable Battery
Battery Life	Up to 6 hours
Connectivity	3.5mm Earphone Jack (Antenna integrated)
Dimensions (L x W x H)	37mm x 24mm x 55mm
Weight	Approx. 30g
Included Components	USB-C Cable, Earphones (3 sizes), User Manual

8. WARRANTY AND SUPPORT

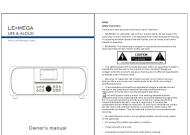
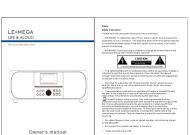
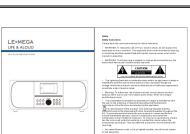
8.1. Warranty Information

Your LEMEGA Mini Go radio is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

8.2. Customer Support

For technical assistance, warranty service, or any questions regarding your LEMEGA Mini Go radio, please contact LEMEGA customer support. Refer to the contact information provided on the product packaging or the official LEMEGA website.

Related Documents - MINI GO

	<p><u>LEMEGA M5P Music System User Manual - CD, DAB, Internet Radio, Bluetooth</u></p> <p>Comprehensive user manual for the LEMEGA M5P Music System. Learn how to set up, operate, and troubleshoot your CD player, DAB radio, internet radio, Bluetooth streamer, and more. Includes safety instructions, control descriptions, connectivity options, and technical specifications.</p>
	<p><u>LEMEGA MSY6 All-in-One Music System Owner's Manual</u></p> <p>Comprehensive owner's manual for the LEMEGA MSY6 All-in-One Music System, covering safety instructions, features, operation, troubleshooting, and technical specifications.</p>
	<p><u>LEMEGA MSY6 All-in-One Music System Owner's Manual</u></p> <p>Comprehensive owner's manual for the LEMEGA MSY6 All-in-One Music System, covering safety instructions, setup, operation of CD, DAB, FM, Bluetooth, USB playback, and technical specifications.</p>
	<p><u>LEMEGA IR4S Internet Radio: Guide to Storing and Recalling Presets</u></p> <p>A user-friendly guide for the LEMEGA IR4S Internet Radio, detailing how to store and recall radio station presets for both quick access (1-2) and extended lists (3-20).</p>
	<p><u>LEMEGA M3P Smart Radio with Bluetooth User Manual</u></p> <p>This user manual provides comprehensive instructions for the LEMEGA M3P Smart Radio with Bluetooth, covering setup, features, operation of various modes (Internet Radio, DAB, FM, Bluetooth, Spotify Connect), alarms, sleep functions, software updates, troubleshooting, and technical specifications.</p>
	<p><u>LEMEGA MSY6 All-in-One Music System Owner's Manual</u></p> <p>This owner's manual provides comprehensive instructions for the LEMEGA MSY6 All-in-One Music System, covering safety, setup, operation of FM, DAB, CD, Bluetooth, and USB playback, as well as troubleshooting and technical specifications.</p>