

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [ChunHee](#) /

› ChunHee Smart Dog Door Bells User Manual - Model CB09

ChunHee CB09

ChunHee Smart Dog Door Bells User Manual

Model: CB09

INTRODUCTION

Thank you for choosing the ChunHee Smart Dog Door Bells. This system is designed to facilitate communication between you and your dog, enabling them to signal when they need to go outside for potty breaks or to come back inside. By using this manual, you will learn how to set up, operate, and maintain your dog doorbell system effectively.



Image: The ChunHee Smart Dog Door Bells system, featuring two white receivers with blue LED rings and three black dog buttons with a yellow dog icon. A beagle is shown pressing one of the buttons.

PRODUCT OVERVIEW

Components

- **Receiver(s):** Plugs into a standard wall outlet, emits sound and light signals.
- **Dog Button(s) (Transmitter):** Battery-powered, touch-sensitive, for dog interaction.
- **Mounting Accessories:** Reusable Velcro adhesive for installation.
- **User Manual:** This guide.

Key Features

- **Customized Ringtones:** 32 selectable sounds and voice commands (e.g., "outside," "potty," "hungry").
- **Adjustable Volume:** 5 levels, ranging from 0 to 111 decibels.
- **Touch Sensitive:** Large, responsive touch area suitable for all dog sizes.

- **Long Battery Life:** Up to 4 years for the dog button.
- **Easy Installation:** Wireless, plug-and-play design with adhesive mounting.
- **Weatherproof:** IP55 rating, suitable for outdoor use in various conditions (-4°F to 140°F).

NEW
version
ChunHee

Why Choose Us?



Smart Dog Door Bell



0-110dB

5-Level Volume



32 Ringtones

Tones options + voice commands



3-year usage time

Battery Replacement



Smooth Surface

One-Piece Design



Traditional Dog Doorbell



Non-Adjustable



Single Ringtones



Bell Falling Off,
Rusting



Claws Stuck
in Bell

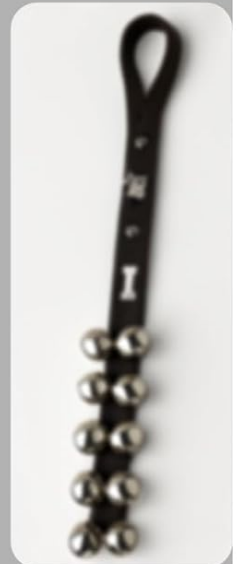 


Image: A graphic comparing the ChunHee Smart Dog Door Bell's features (0-110dB, 5-level volume, 32 ringtones, 3-year usage time, smooth surface) with limitations of traditional dog doorbells.

32 SOUNDS + VOICE COMMANDS - NO OTHER BELL HAS THIS!

Clear commands dogs understand!

NEW
version
ChunHee



Smart Voice Options



Just Boring Chime(Single Ringtone)



Image: A comparison showing a Golden Retriever puppy interacting with the ChunHee Smart Dog Door Bell, which offers voice commands, next to a black and white image of a puppy with a traditional, single-tone chime.

SETUP INSTRUCTIONS

1. Receiver Installation

1. Plug the receiver into a standard electrical outlet in a central location where the sound can be easily heard throughout your home.

Includes Training Guidance

NEW
version
ChunHee



ChunHee
Dog Door bells

CB09 Series User Manual

Help dogs learn to use the dog doorbell faster

Image: The ChunHee receiver plugged into a wall socket, illustrating its "Plug and Play" nature with features like 32 chimes, LED indicator, memory function, and 0-110dB volume.

2. Dog Button (Transmitter) Installation

1. Choose a suitable location for the dog button, such as near the door your dog uses to go outside. Ensure it's at a height easily accessible by your dog's paw or nose.
2. Clean the surface where you intend to mount the button.
3. Peel off the backing from the reusable Velcro adhesive.
4. Attach the adhesive to the back of the dog button, ensuring not to cover the screw holes if present.
5. Press the dog button firmly onto the chosen surface (door, wall, or even on the floor).

Easy to install

using the adhesive patch

Note: Do not cover the screws

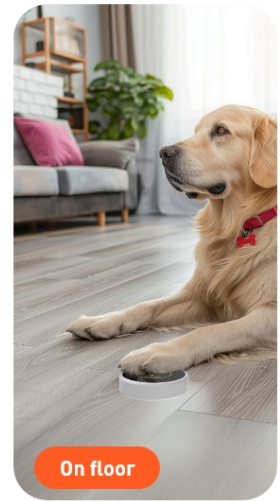
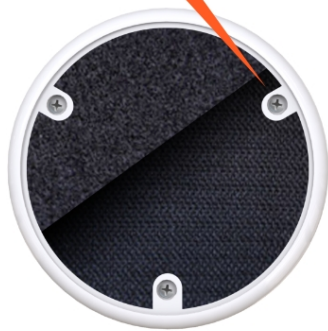


Image: Examples of easy installation for the dog button using an adhesive patch, demonstrating placement on a door, glass, and floor. A note advises not to cover the screws.

3. Pairing the Button with the Receiver

If your button and receiver are not already paired, or if you wish to add more buttons, follow these steps:

1. Plug the receiver into a socket.
2. Press the "Forward" or "Backward" button on the receiver to select your desired melody.
3. Press and hold the "Volume" button on the receiver for approximately 3 seconds until it makes a "Ding" sound and the receiver indicator flashes.
4. Within 8 seconds, touch the dog button (transmitter). The receiver will make a "Ding Ding" sound, and its indicator will flash, confirming successful pairing.

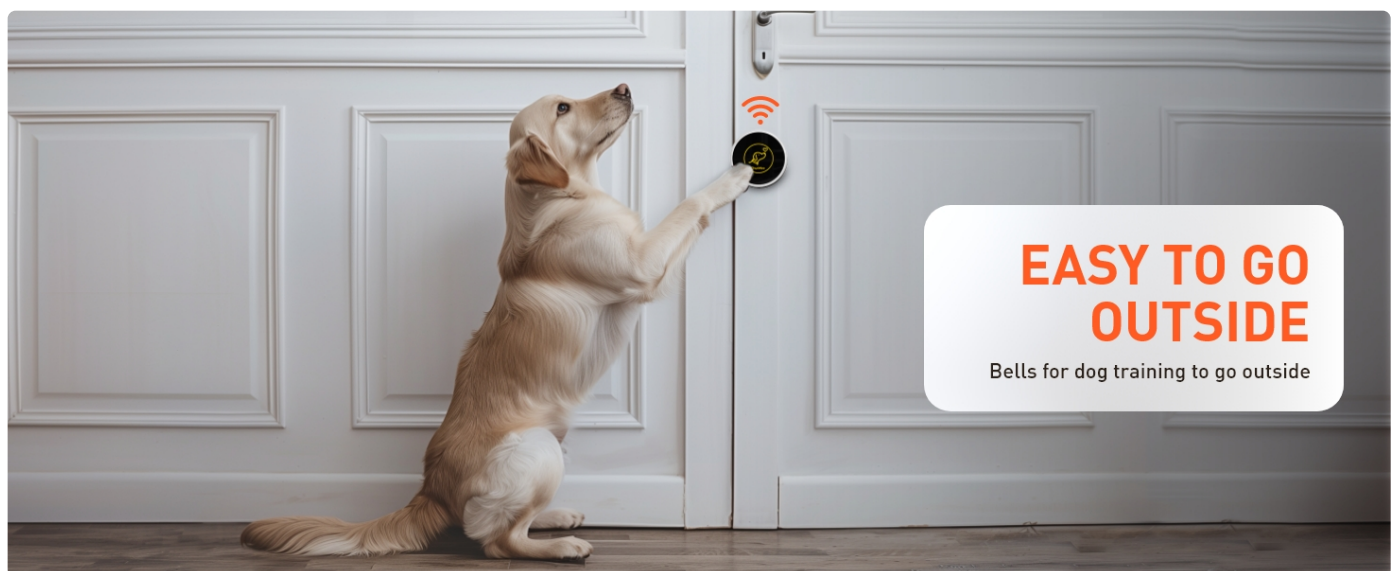


Image: A step-by-step guide illustrating how to pair the dog button with the receiver. It shows plugging in the receiver, selecting a melody, holding the volume button, and then touching the transmitter.

OPERATING INSTRUCTIONS

Adjusting Ringtones and Volume

- **Changing Ringtones:** Use the "Forward" and "Backward" buttons on the receiver to cycle through the 32 available melodies and voice commands.

- **Adjusting Volume:** Press the "Volume" button on the receiver to select one of the 5 volume levels.

How Your Dog Uses the System

Once trained, your dog will simply touch the large, sensitive area of the dog button with their paw or nose. This action sends a wireless signal to the receiver, which then plays the selected chime or voice command and flashes its LED indicator, alerting you to your dog's request.



Image: A corgi observing the dog button, emphasizing its sensitive touch and the yellow triggering area, which is roughly the size of a finger joint.

TRAINING GUIDE

The ChunHee Smart Dog Door Bells system includes a training guide to help your dog quickly learn to use the doorbell. Consistent training is key to success.

Basic Training Steps:

1. **Introduce the Button:** Place the button near the door. Encourage your dog to touch it with their paw or nose. You can use a treat to lure them.
2. **Associate with Going Outside:** Each time your dog touches the button, immediately open the door and take them outside, even if it's just for a moment. Praise and reward them.
3. **Consistency:** Repeat this process consistently. Every time your dog needs to go out, guide them to the button.
4. **Coming Back In:** You can also train your dog to ring the bell when they want to come back inside.



Image: A person assisting a white dog in pressing the ChunHee dog button, with a user manual titled "ChunHee Dog Door bells" in the foreground, emphasizing that training guidance is provided.

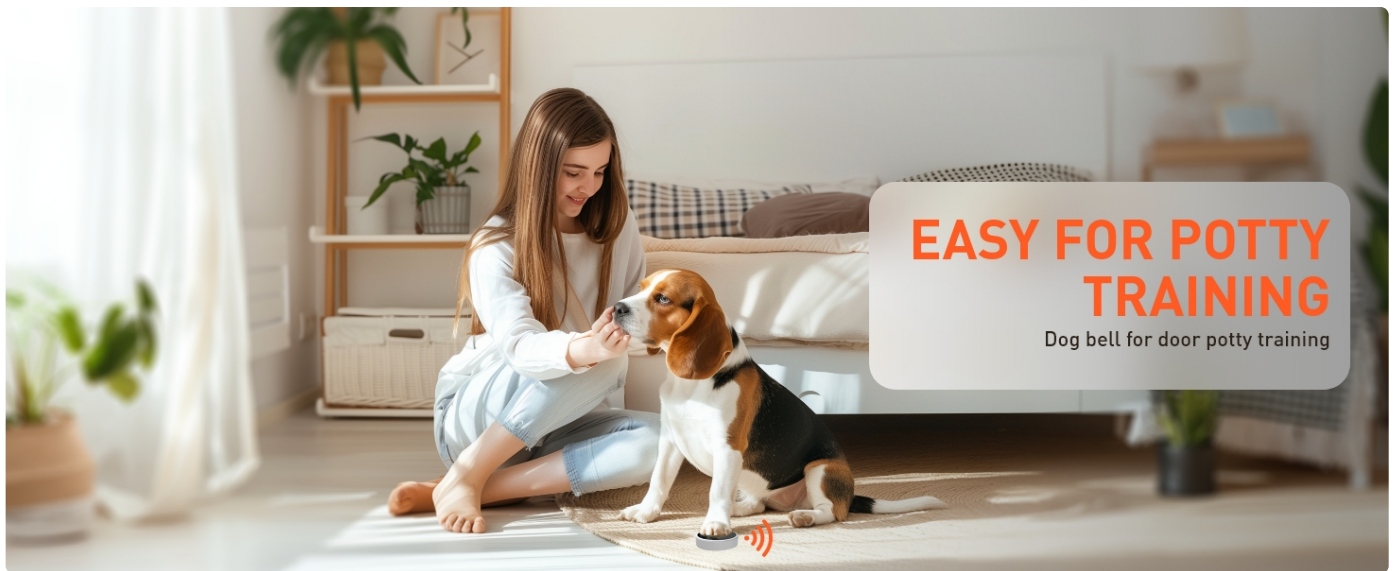


Image: A beagle sitting calmly next to a ChunHee dog button placed on the floor, illustrating its use for potty training.



Image: A Golden Retriever standing on its hind legs, pressing the ChunHee dog button mounted on a door, demonstrating how dogs can easily signal to go outside.

MAINTENANCE

Battery Replacement

The dog button uses a CR2032 battery, which typically lasts for 2-4 years. When the button's performance declines or it stops responding, it's time to replace the battery.

1. Carefully open the back cover of the dog button.
2. Remove the old CR2032 battery.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Close the back cover securely.

How to add the button to the receiver



STEP1

Plug the receiver into a socket.



STEP2

Press the "Forward" or "Backward" button on the receiver to select your favorite melody.



STEP3

Press and hold the "Volume" button on the receiver for 5s, until it makes a "Ding" sound and the receiver indicator flashes.



STEP4

Touch the transmitter quickly within 8s after step3, the receiver makes a "Ding-Ding" sound, and the indicator flashes.

Image: A visual comparison highlighting the ChunHee dog button's use of a long-lasting CR2032 battery (2-3 years) against other brands that require more frequent changes of 12V 23A batteries.

Cleaning

Wipe the surfaces of the receiver and dog button with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the dog button is dry before re-mounting, especially if used outdoors.

Weather Resistance

The dog button is IP55 weatherproof, designed to withstand rain and varying temperatures from -4°F to 140°F. However, for optimal longevity, avoid prolonged exposure to extreme weather conditions.

Plug and Play



32 chimes

LED indicator

Memory function

0-110dB Volume

NEW version
ChunHee

Easy to install

using the adhesive patch

Note:Do not cover the screws



Image: A Golden Retriever sitting on a wet porch during rainfall, with a ChunHee dog button mounted on the door frame, demonstrating the product's IP55 weatherproof rating and ability to function between -4°F and 140°F.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Button not ringing receiver	- Low or dead battery in the dog button. - Button and receiver are not paired. - Obstruction or distance issues.	- Replace the CR2032 battery in the dog button. - Re-pair the button and receiver (refer to "Pairing the Button with the Receiver" section). - Ensure the button is within range of the receiver and there are no major metal obstructions.

Problem	Possible Cause	Solution
Receiver "ghost rings" or rings continuously	- Interference from other wireless devices. - Faulty button or receiver.	- Try moving the receiver to a different outlet or location away from other electronics. - Re-pair the button and receiver. If the issue persists, contact customer support.
Sound is too low or too loud	Volume setting needs adjustment.	Press the "Volume" button on the receiver to cycle through the 5 volume levels.

SPECIFICATIONS

Feature	Detail
Brand	ChunHee
Model Number	CC15WH-CB09BL 3-2 US (CB09 Series)
Item Weight	0.4 Kilograms (14.1 ounces)
Package Dimensions	5.2 x 4.06 x 3.94 inches
Ringtones	32 (including voice commands)
Volume Levels	5 (0-111 dB)
Button Battery Type	CR2032
Button Battery Life	Up to 4 years
Weatherproof Rating	IP55
Operating Temperature	-4°F to 140°F
First Available Date	October 14, 2024

WARRANTY AND SUPPORT

ChunHee products are designed for reliability and performance. For any questions, concerns, or technical support regarding your Smart Dog Door Bells, please contact ChunHee customer service. Refer to the product packaging or the official ChunHee website for specific warranty details and contact information. You can visit the [ChunHee Store on Amazon](#) for more information and support.

SAFETY INFORMATION

- Keep the product away from extreme heat sources and open flames.
- Do not attempt to disassemble or repair the product yourself. Contact customer support for assistance.
- Ensure the receiver is plugged into a properly functioning electrical outlet.
- Keep batteries out of reach of children and pets. Dispose of used batteries responsibly.
- This product is intended for pet training purposes. Do not use it for any other unintended applications.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DK1WS6KJ>

More documents and user manuals: <https://manuals.plus/>