

## Elite Gourmet EHB1324

# Elite Gourmet EHB1324 Cordless, Rechargeable Hand Blender Instruction Manual

Model: EHB1324

## 1. INTRODUCTION

---

Thank you for purchasing the Elite Gourmet EHB1324 Cordless, Rechargeable Hand Blender. This versatile appliance is designed to simplify your blending and mixing tasks, offering convenience and efficiency in your kitchen. Please read this instruction manual thoroughly before first use to ensure safe operation and optimal performance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- To protect against electrical shock, do not immerse the motor unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but only when the unit is not running.
- Blades are sharp. Handle carefully.

- To prevent overheating, operate the hand blender in one-minute intervals or less.
- Do not use with non-stick coated cookware.

### **3. PRODUCT COMPONENTS**

---

Familiarize yourself with the parts of your Elite Gourmet Hand Blender:

- Motor Unit (with control buttons and speed dial)
- Blending Shaft (detachable, stainless steel)
- Stainless Steel Blades
- Splash Guard
- Power Button
- Safety Lock Button
- Variable 5-Speed Dial
- Battery Indicator Lights
- USB-C Charging Port

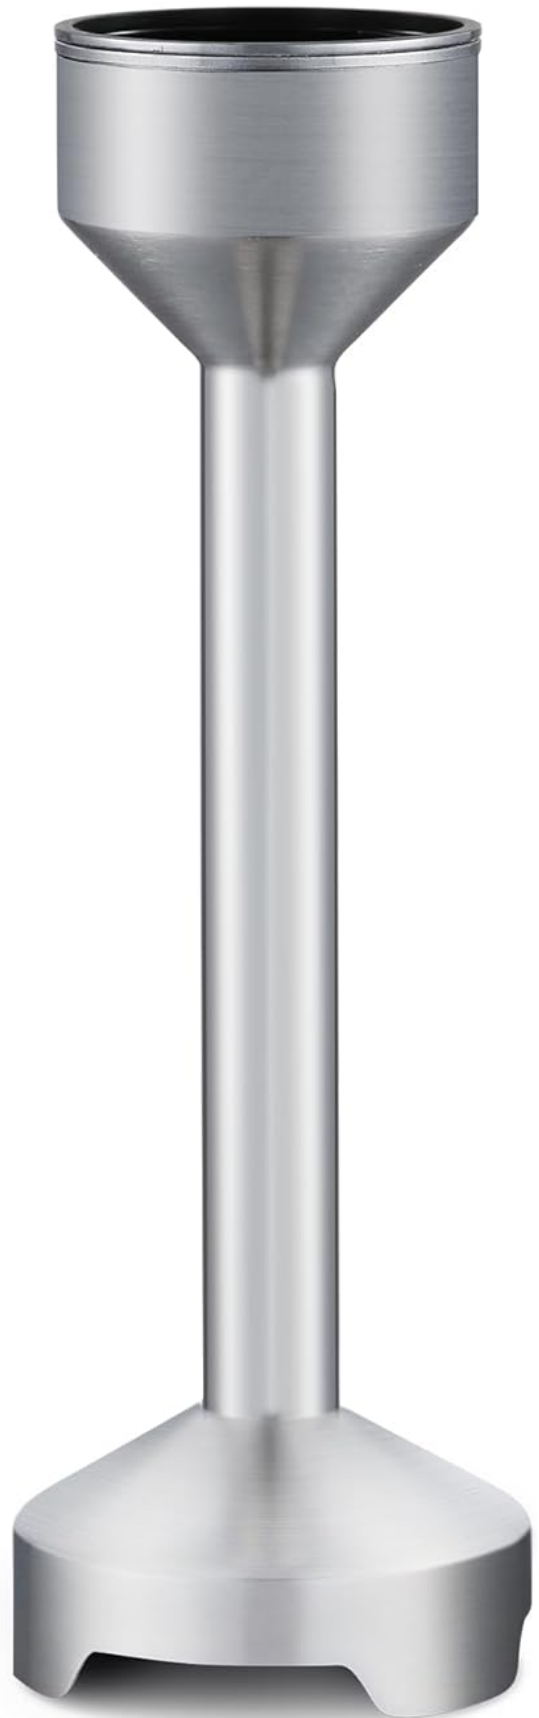


Figure 1: Elite Gourmet EHB1324 Cordless, Rechargeable Hand Blender.

# Discover the freedom of **CORDLESS BLENDING**



Figure 2: Control panel featuring variable speed dial, power button, and safety lock.

## 4. SETUP

1. Before first use, clean all parts that will come into contact with food. Refer to the 'Cleaning and Maintenance' section for detailed instructions.
2. Ensure the motor unit is fully charged before initial operation.
3. To assemble, align the blending shaft with the motor unit and twist clockwise until it locks securely into place. You should hear a click.



## Detachable Stainless-Steel Blade Assembly

Figure 3: Detachable blending shaft for easy assembly and cleaning.

## 5. CHARGING INSTRUCTIONS

---

The Elite Gourmet Hand Blender is equipped with a 2000mAh Li-ion rechargeable battery.

1. Locate the USB-C charging port on the motor unit.
2. Connect the provided charging cable to the port and plug the other end into a compatible USB power source (not included).
3. The battery indicator lights will illuminate to show the charging status. A full charge typically takes less than 2 hours.
4. When fully charged, the battery provides up to 30 minutes of continuous use, depending on the viscosity of the food being blended.
5. Recharge the battery when only one or no LED lights are observed on the battery indicator.

# CORDLESS & RECHARGEABLE

Rechargeable Li-ion 2000mAh Power Source



Figure 4: Battery indicator lights on the motor unit.

## 6. OPERATING INSTRUCTIONS

---

- 1. Preparation:** Ensure the blending shaft is securely attached to the motor unit. Place the ingredients to be blended into a suitable container. The hand blender is designed to fit into most mixing bowls, pots, beakers, or cookware.
- 2. Power On:** Press and hold the Power Button to activate the blender. The safety lock ensures accidental activation is prevented.
- 3. Adjust Speed:** Use the variable 5-speed dial located at the top of the motor unit to select your desired blending speed. Start with a lower speed for delicate ingredients and gradually increase for tougher tasks.
- 4. Blending:** Immerse the blending shaft into the ingredients. Move the blender up and down gently to ensure all ingredients are processed evenly. The stainless steel blades and splash guard are designed for efficient blending and minimal splatter.
- 5. Recommended Uses:** This hand blender is ideal for preparing gourmet soups, guacamole, smoothies, shakes, cake batter, salsas, sauces, marinades, salad dressings, and homemade baby food.
- 6. Overheating Prevention:** To prevent overheating and prolong the life of your appliance, operate the

hand blender in intervals of one minute or less. Allow the unit to cool down if it feels warm.

7. **Power Off:** Release the Power Button to stop the blender.



## Blends right in the pot, cup, or bowl

for healthy drinks, shakes,  
sauces, soups, and more!

Figure 5: Blending directly in various containers for convenience.

Figure 6: Examples of dishes that can be prepared with the hand blender.

## 7. CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will ensure the longevity of your hand blender.

1. **Disassembly:** To clean, first ensure the blender is turned off and disconnected from any charging cable. Press the release buttons on the side of the motor unit and twist the blending shaft counter-clockwise to detach it.
2. **Blending Shaft:** The stainless steel blending shaft and blades can be hand washed with warm, soapy water or placed in the dishwasher for thorough cleaning. Handle blades with extreme care as they are sharp.
3. **Motor Unit:** The motor unit should never be immersed in water or other liquids. Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

4. **Drying:** Ensure all parts are completely dry before reassembling or storing.



Figure 7: Stainless steel blades and splash guard for effective blending and easy cleaning.

## 8. STORAGE

---

For compact storage, the blending shaft can be detached from the motor unit. Store the appliance and its components in a dry place, away from direct sunlight and out of reach of children.

## 9. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is depleted. Blending shaft not properly attached. Safety lock not disengaged.	Charge the battery fully. Ensure blending shaft is securely locked. Press and hold the power button firmly.

Problem	Possible Cause	Solution
Blender stops during operation.	Overheating. Battery is low. Ingredients are too dense.	Allow the unit to cool down. Recharge the battery. Reduce the amount of ingredients or add more liquid.
Ingredients are not blending smoothly.	Incorrect speed setting. Insufficient liquid. Blades are stuck.	Increase the speed using the dial. Add more liquid to the mixture. Turn off the blender, clear any obstructions, then resume.

## 10. SPECIFICATIONS

---

- **Brand:** Elite Gourmet
- **Model:** EHB1324
- **Power Source:** Battery Powered (2000mAh Li-ion)
- **Number of Speeds:** 5 (Variable)
- **Controls Type:** Push Button and Knob
- **Material Type Free:** BPA Free
- **Item Weight:** 1.83 pounds
- **Product Dimensions:** 2.3"D x 16.5"W x 2.3"H
- **Capacity:** 5 Cups (for compatible containers)
- **Warranty Type:** Limited warranty
- **UPC:** 717056138754

## 11. WARRANTY AND SUPPORT

---

This Elite Gourmet EHB1324 Hand Blender comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Elite Gourmet website.

If you encounter any issues or have questions about your product that are not addressed in this manual, please contact Elite Gourmet Customer Support for assistance.