

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FLINGSPORT](#) /

› [FLINGSPORT Portable Cornhole Board Set \(24"x15"\) Instruction Manual](#)

FLINGSPORT FS-2523

FLINGSPORT Portable Cornhole Board Set (24"x15") Instruction Manual

Model: FS-2523

INTRODUCTION

Thank you for choosing the FLINGSPORT Portable Cornhole Board Set. This manual provides essential information for the proper setup, operation, maintenance, and care of your cornhole game set. Please read these instructions carefully before use to ensure a safe and enjoyable experience.

PRODUCT COMPONENTS

The FLINGSPORT Portable Cornhole Board Set includes the following items:

- Two (2) 24 x 15 inch MDF wood cornhole boards
- Eight (8) 7 oz canvas bean bags (4 red, 4 blue)
- One (1) carrying bag

What's in the box?



TRAVEL BAG



4 BLUE | 4 RED BEAN BAGS



DETAILED AND EXCITING PLAY GUIDE




2 FOLDABLE CORNHOLE BOARDS



Image: The complete contents of the FLINGSPORT Portable Cornhole Board Set, including two boards, eight bean bags, and a carrying bag.

SETUP INSTRUCTIONS

- Unpack the Set:** Carefully remove all components from the carrying bag and packaging.
- Unfold the Boards:** Each cornhole board is designed to fold for portability. Gently unfold each board until it lies flat.
- Extend the Legs:** Locate the foldable plastic legs on the underside of each board. Extend the legs outwards until they lock securely into place, raising the board to the correct playing height.
- Position the Boards:** Place the two cornhole boards facing each other on a flat, stable surface. For official play, the front edge of each board should be 27 feet apart. Adjust distance for casual play as desired.
- Prepare Bean Bags:** Remove the bean bags from their pouch. You are now ready to play.

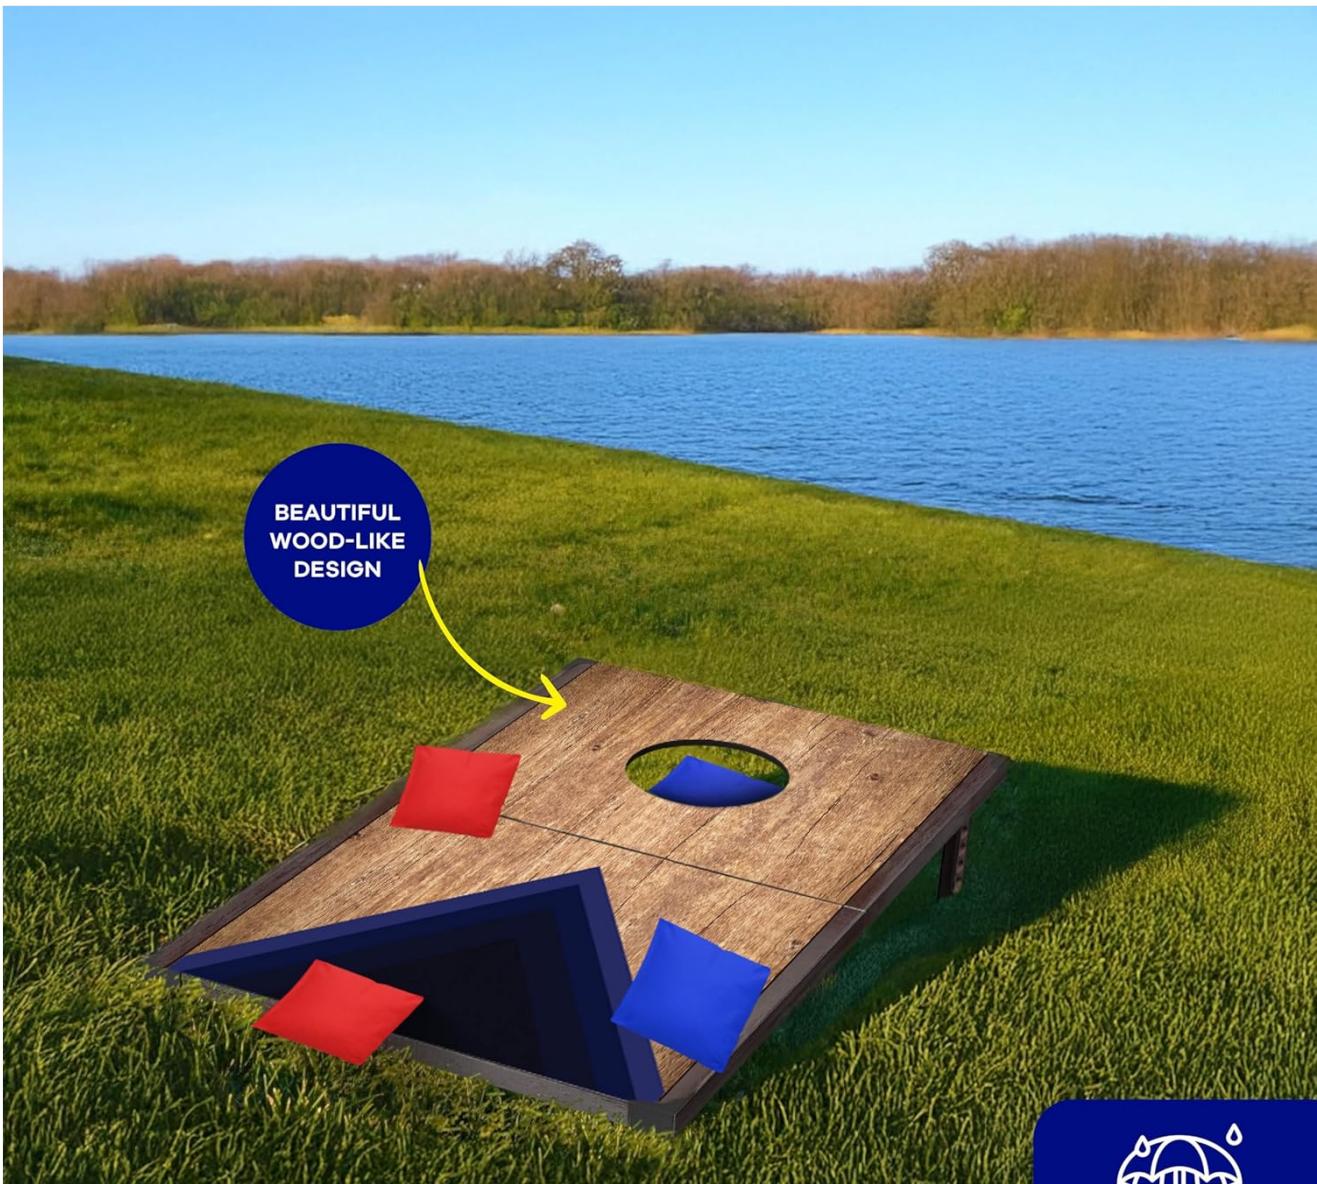

CRAFTED FROM HIGH-QUALITY MDF WOOD



Image: A FLINGSPORT cornhole board set ready for play on a grassy lawn by a lake, demonstrating a typical outdoor setup.

Your browser does not support the video tag.

Video: This video demonstrates the setup process for the FLINGSPORT Portable Cornhole Board Set, showing how to unfold the boards and extend the legs for play.

OPERATING INSTRUCTIONS (How to Play)

Cornhole is a game of skill and strategy, typically played by two or four players. The objective is to toss bean bags onto the opponent's board or into the hole to score points.

Basic Rules:

- Players take turns tossing bean bags at the opposite board.
- A bag that lands on the board scores 1 point.
- A bag that goes through the hole scores 3 points.
- Points are tallied at the end of each round using cancellation scoring (e.g., if one team scores 5 points and the other scores 3, the net score for the round is 2 points for the higher-scoring team).

- The first team to reach or exceed 21 points wins the game.

Gameplay Tips:

- Practice your throwing technique to improve accuracy.
- Experiment with different throwing styles (e.g., flat toss, arc toss) to find what works best for you.
- Aim for the hole for maximum points, but landing on the board is also valuable.
- Consider blocking your opponent's bags or knocking their bags off the board to gain an advantage.



Outdoor Entertainment

Bring the party to the backyard or park with this portable set

Image: A family enjoying a game of cornhole in a backyard, demonstrating the game in action with players tossing bean bags.

MAINTENANCE

- **Cleaning:** Wipe down the cornhole boards with a damp cloth to remove dirt or debris. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the cornhole set in its carrying bag in a dry place when not in use. This protects the boards and bean bags from dust and moisture.
- **Moisture Warning:** The boards are made from engineered wood and are **NOT WATERPROOF**. Avoid

prolonged exposure to rain, dew, or high humidity to prevent damage. If the boards get wet, dry them immediately.

- **Bean Bag Care:** The canvas bean bags are durable but should be kept dry. If they become dirty, spot clean with a mild detergent and air dry.



Image: A person carrying the folded FLINGSPORT cornhole board set, highlighting its portable and convenient design for transport and storage.

TROUBLESHOOTING

- **Board Instability:** Ensure the foldable legs are fully extended and locked into place. Check that the playing surface is level and firm.
- **Bean Bags Not Sliding:** The board surface is designed for a smooth slide. If bags are not sliding as expected, ensure the boards are clean and free of debris.
- **Damage During Transport:** Always use the provided carrying bag to protect the boards and bean bags during transport. Avoid dropping or impacting the set.

SPECIFICATIONS

Brand	FLINGSPORT
Model Name	Cornhole Board Set
Part Number	FS-2523
Material	Engineered Wood
Board Dimensions (L x W x H)	24 x 15 x 7.7 inches
Folded Dimensions (L x W)	15 x 12 inches
Bean Bag Weight	7 oz each
Number of Players	2-4
Color	Rustic
Specific Uses	Indoor, Outdoor



Canvas material bean bags

Double stitched to ensure long lasting enjoyment!

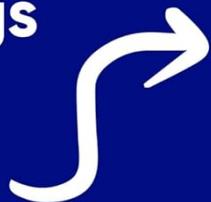


Image: A FLINGSPORT cornhole board with bean bags, illustrating the 24-inch length and 15-inch width of the playing surface.

WARRANTY INFORMATION

FLINGSPORT warrants this product to be free from defects in material and workmanship for a period of 90 days from the date of purchase. Your order number is required for any warranty claim. This warranty does not apply to goods purchased from a non-authorized dealer or reseller.

For warranty claims or inquiries, please contact FLINGSPORT customer service with your order details.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your FLINGSPORT Portable Cornhole Board Set, please do not hesitate to contact our customer support team. We are committed to ensuring your satisfaction. Please refer to your purchase platform or product packaging for the most current contact information.