

Daewoo DMM-0710MS

Daewoo DMM-0710MS Microwave Oven User Manual

Model: DMM-0710MS

1. INTRODUCTION

Thank you for purchasing the Daewoo DMM-0710MS Microwave Oven. This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before use and keep it for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions before using the appliance.
- Do not operate the oven if it is damaged.
- Ensure proper ventilation.
- Do not heat sealed containers.
- Supervise children closely when the microwave is in use.
- Only use utensils suitable for microwave ovens.
- Do not attempt to service or repair the oven yourself. Contact qualified service personnel.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Daewoo DMM-0710MS Microwave Oven.



Figure 1: Front view of the Daewoo DMM-0710MS Microwave Oven. The image shows the gray microwave oven with a metallic finish door and control panel on the right side.

Control Panel Features

- **Display Screen:** Shows time, cooking settings, and indicators.
- **Number Pad (0-9):** Used to enter cooking times, weights, and other numerical values.
- **Power Level:** Adjusts the microwave power output.
- **Time Cook:** Sets cooking duration.
- **Defrost:** Initiates defrosting by time or weight.
- **Kitchen Timer:** Functions as a standalone timer.
- **Start:** Begins the cooking or defrosting process.
- **Stop/Cancel:** Stops operation or clears settings.

3. SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials. Check for any damage. Do not remove the light brown mica sheet attached to the oven cavity to protect the magnetron.
2. **Placement:** Place the oven on a flat, stable surface strong enough to hold its weight. Ensure adequate ventilation by leaving at least 4 inches (10 cm) of space around the sides, back, and top of the oven. Do not block air vents.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the oven.

4. OPERATING INSTRUCTIONS

Basic Microwave Cooking

1. Place food in a microwave-safe container and put it in the oven.
2. Close the oven door.

3. Press the "Time Cook" button.
4. Use the number pad to enter the desired cooking time.
5. (Optional) Press "Power Level" and use the number pad to select a power level if not using full power.
6. Press "Start" to begin cooking.

Defrosting by Time and Weight

The Daewoo DMM-0710MS offers convenient defrosting options.

1. Place the frozen food in the oven.
2. Press the "Defrost" button.
3. **For Defrost by Weight:** Use the number pad to enter the weight of the food.
4. **For Defrost by Time:** Press "Defrost" again (if applicable) and use the number pad to enter the desired defrosting time.
5. Press "Start". The oven will automatically adjust power levels for optimal defrosting.

Using the Kitchen Timer

The kitchen timer functions independently of the microwave cooking function.

1. Press the "Kitchen Timer" button.
2. Use the number pad to enter the desired time.
3. Press "Start". The timer will count down without activating the microwave.

Child Lock Feature

To prevent unintended operation, especially by children, activate the child lock.

- **To Activate:** Press and hold the "Stop/Cancel" button for approximately 3 seconds until a lock indicator appears on the display.
- **To Deactivate:** Press and hold the "Stop/Cancel" button again for approximately 3 seconds until the lock indicator disappears.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

- **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Interior:** Clean the interior cavity with a damp cloth after each use. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Turntable:** The glass turntable and roller ring can be removed and washed in warm soapy water or a dishwasher.
- **Door Seals:** Keep the door seals and adjacent parts clean to ensure proper sealing.
- Always unplug the microwave before cleaning.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and

solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Child lock activated.	Ensure plug is secure; Close door firmly; Deactivate child lock.
Food not heating	Incorrect cooking time/power level; Microwave-safe dish not used.	Adjust time/power; Use appropriate cookware.
Turntable not rotating	Turntable not properly seated; Obstruction.	Re-seat turntable and roller ring; Remove any obstructions.
Display shows error code	Internal malfunction.	Unplug the oven for a few minutes, then plug back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Technical details for the Daewoo DMM-0710MS Microwave Oven.

Feature	Detail
Brand	Daewoo
Model Number	DMM-0710MS
Capacity	0.7 Cubic Feet
Wattage	1000 KW
Product Dimensions (D x W x H)	14.96"D x 19.29"W x 11.81"H
Item Weight	11 Kilograms (24.2 pounds)
Color	Gray
Material	Metal
Special Feature	Child Safety Lock
Installation Type	Countertop

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Daewoo customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official Daewoo website or contact their customer support line.