



Manuals.plus /

- › FanttikOutdoor /
- › FanttikOutdoor Zeta L8 Max Camping Chair Instruction Manual

## FanttikOutdoor Zeta L8 Max

# FanttikOutdoor Zeta L8 Max Camping Chair Instruction Manual

Model: Zeta L8 Max | Brand: FanttikOutdoor

## INTRODUCTION

---

Thank you for choosing the FanttikOutdoor Zeta L8 Max Camping Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new camping chair. Please read all instructions carefully before use and retain this manual for future reference.

## IMPORTANT SAFETY INFORMATION

---

- Do not exceed the maximum weight limit of 250 lbs. Exceeding this limit may cause the chair to tip over or break, leading to injury.
- Ensure all parts are securely assembled before use.
- Use on stable, level ground to prevent tipping.
- This camping chair is suitable for patio, outdoor, and other scenes, used for camping, hiking, or watching games. It is not intended for indoor formal dining.

## SETUP INSTRUCTIONS

---

Follow these steps to assemble your FanttikOutdoor Zeta L8 Max Camping Chair:

1. **Unpack Components:** Remove all parts from the carrying bag. You should have the aluminum frame, the chair fabric, and the adjustable headrest.
2. **Assemble the Frame:** The aluminum frame features elastic cords that guide the poles into place. Connect all frame sections by inserting the poles into their corresponding connectors until they snap securely. Ensure all joints are fully engaged and stable.
3. **Attach Chair Fabric:**
  - Locate the two longer poles of the frame, which form the backrest.

- Slide the top sleeves of the chair fabric over the top ends of the backrest poles.
- Next, slide the bottom sleeves of the chair fabric over the bottom ends of the front legs. It may require a slight stretch to fit the last pole.
- Ensure all four corners of the chair fabric are securely attached to the frame poles.

4. **Attach Headrest:** The headrest features elastic straps. Simply slide these straps over the top of the chair's backrest to secure the pillow in your desired position.



**MULTI-ANGLE ADJUSTABLE**  
**ROCK AND RECLINE IN COMFORT**



**Image:** The fully assembled FanttikOutdoor Zeta L8 Max Camping Chair, ready for use.



**Image:** Visual guide illustrating the step-by-step assembly process of the camping chair frame and fabric attachment.

Your browser does not support the video tag.

**Video:** Official product video demonstrating the quick and easy setup of the FantikOutdoor Zeta L8 Max Camping Chair.

## OPERATING INSTRUCTIONS

---

### Multi-Angle Adjustable Recline

The Zeta L8 Max features a free-style backrest adjustment. To recline, simply apply gentle pressure with your legs to shift your weight backward. The scientifically designed 115° tilt allows for comfortable multi-angle positioning. To return to an upright position, shift your weight forward.



6000 high density polyester with PU coating

Armrest

Soft Padded

## SOFA-LEVEL COMFORT

**Image:** A person demonstrating the multi-angle adjustable recline feature, showing the chair tilting to a comfortable 115° angle.

### **Adjustable Headrest**

The included headrest can be adjusted up or down along the top of the backrest to ensure a personalized and comfortable fit for various users. Simply slide it to your preferred height.



Image: Close-up view of the adjustable headrest, highlighting its ability to slide for personalized comfort.

### Versatile Mesh Storage Bag

The chair is equipped with a mesh storage bag located on the side. This bag is ideal for holding small personal items such as your phone, keys, or a small water bottle, keeping them easily accessible while you relax.



## VERSATILE MESH STORAGE BAG

**Image:** A person utilizing the versatile mesh storage bag on the side of the chair to hold a mobile phone.

### MAINTENANCE

---

#### Cleaning Instructions

- **Fabric:** Hand wash the polyester oxford fabric with mild soap and cold water. Do not bleach. Air dry thoroughly before storing.
- **Frame:** Wipe the aluminum frame with a damp cloth as needed. Avoid abrasive cleaners.

#### Storage

When not in use, disassemble the chair and store it in its compact carrying bag. Store in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.



WEIGHTS ONLY



**LIGHTWEIGHT & PORTABLE**

Image: The camping chair disassembled and packed into its compact carrying bag, alongside the chair's dimensions.

## SPECIFICATIONS

---

<b>Brand</b>	FanttikOutdoor
<b>Model Name</b>	Zeta L8 Max
<b>Product Dimensions</b>	25.2"D x 25.2"W x 38.1"H
<b>Item Weight</b>	4 pounds
<b>Maximum Weight Recommendation</b>	250 Pounds
<b>Material</b>	Aluminum, Polyester Oxford Fabric
<b>Frame Material</b>	7075 Aerospace-grade Aluminum
<b>Reclining Position Count</b>	3 (Multi-Angle Adjustable)
<b>Special Feature</b>	Lightweight, Foldable, Adjustable Headrest, Storage Bag
<b>Product Care Instructions</b>	Hand Wash



## ADJUSTABLE HEADREST

COMFORT HEADREST ENSURES A PERSONALIZED FIT

**Image:** Detailed view of the 7075 aerospace-grade aluminum frame, highlighting its strength and durability.

### TROUBLESHOOTING

- **Chair feels unstable:** Ensure all frame poles are fully inserted into their connectors and the chair fabric is securely attached at all four corners. Verify the chair is placed on a flat, stable surface.
- **Difficulty reclining:** Apply gentle, even pressure with your legs to initiate the recline. Avoid sudden movements. If the mechanism feels stiff, check for any obstructions in the pivoting joints.
- **Difficulty disassembling/packing:** Ensure all fabric sleeves are fully removed from the poles before attempting to collapse the frame. Follow the reverse of the assembly steps.