

[manuals.plus](#) /› [CANYON](#) /› [CANYON CNS-CMSW04B Bluetooth Optical Mouse User Manual](#)

## CANYON CNS-CMSW04B

# CANYON CNS-CMSW04B Bluetooth Optical Mouse User Manual

Model: CNS-CMSW04B

## 1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your CANYON CNS-CMSW04B Bluetooth Optical Mouse. Please read this manual carefully before using the device to ensure proper functionality and longevity.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- CANYON CNS-CMSW04B Bluetooth Optical Mouse
- 1x AA Battery (included)
- User Manual (this document)

## 3. PRODUCT OVERVIEW

The CANYON CNS-CMSW04B is a universal, ambidextrous Bluetooth optical mouse designed for comfortable and efficient use. It features three buttons and an optical sensor with 1200 DPI.



**Figure 1:** Top-down view of the CANYON CNS-CMSW04B Bluetooth Optical Mouse, showing the left button, right button, and scroll wheel/middle button.



**Figure 2:** Angled view of the CANYON CNS-CMSW04B Bluetooth Optical Mouse, highlighting its ergonomic, ambidextrous design.

## **Key Features:**

- Bluetooth 5.0 connectivity for wide compatibility
- 1200 DPI optical sensor for precise tracking
- Intelligent energy-saving system to extend battery life
- Ambidextrous design suitable for both left and right-handed users
- Three durable buttons with a 3 million click lifespan
- Non-slip plastic body for a secure grip
- Powered by one standard AA battery

## 4. SETUP

---

### 4.1 Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover by sliding or lifting it.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.



Figure 3: Product packaging, indicating the inclusion of a battery and key features relevant to setup.

## 4.2 Bluetooth Pairing

1. Ensure the mouse has a fresh battery installed and is powered on. (If an on/off switch is present, typically on the bottom, ensure it is in the 'ON' position).
2. On your computer or device (e.g., laptop, tablet), navigate to the Bluetooth settings.
3. Enable Bluetooth and initiate a search for new devices.
4. The mouse should appear in the list of available devices, typically as "CANYON MW-04" or a similar identifier. Select it to begin the pairing process.
5. Once pairing is successful, the mouse is ready for use.

## 5. OPERATING INSTRUCTIONS

## 5.1 Basic Functionality

- **Left Button:** Performs the primary click function, such as selecting items or opening links.
- **Right Button:** Performs the secondary click function, typically opening a context menu with additional options.
- **Scroll Wheel:** Allows for vertical scrolling through documents and web pages. Pressing the scroll wheel often acts as a middle click, which can open links in new tabs or enable auto-scrolling.

## 5.2 DPI (Dots Per Inch)

The CNS-CMSW04B mouse operates at a fixed optical resolution of 1200 DPI. This setting provides a balanced cursor speed and precision suitable for general computing tasks.

## 6. MAINTENANCE

---

### 6.1 Cleaning

- Disconnect the mouse from your device by turning off Bluetooth or removing the battery.
- Use a soft, dry, lint-free cloth to gently wipe the surface of the mouse.
- For more persistent dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaning solution. Avoid excessive moisture, especially near openings.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the mouse's finish.

### 6.2 Battery Replacement

When the mouse performance degrades, the cursor becomes erratic, or it stops responding, it is likely due to a low battery. Replace the AA battery by following the instructions provided in Section 4.1. The intelligent energy-saving system helps prolong battery life, but periodic replacement is necessary.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Mouse not responding	Low or depleted battery; Mouse not paired; Bluetooth disabled on device	Replace the AA battery; Re-pair the mouse via Bluetooth settings; Ensure Bluetooth is enabled on your computer/device
Intermittent connection or lag	Bluetooth interference; Mouse too far from device; Low battery	Move the mouse closer to the connected device; Ensure no strong interference sources (e.g., Wi-Fi routers, other Bluetooth devices) are nearby; Replace the battery
Cursor movement is erratic or imprecise	Dirty optical sensor; Unsuitable surface for optical tracking	Clean the optical sensor on the underside of the mouse with a soft cloth; Use the mouse on a clean, non-reflective, and opaque mouse pad or surface
Mouse does not appear in Bluetooth device list	Mouse not in pairing mode; Battery issue	Ensure mouse is powered on and has a fresh battery; Consult your device's manual for specific Bluetooth pairing instructions if needed

## 8. SPECIFICATIONS

---

Feature	Detail
Model	CNS-CMSW04B
Brand	CANYON
Connectivity	Bluetooth 5.0
Sensor Type	Optical
DPI	1200 DPI
Number of Buttons	3
Button Life	3 million clicks
Power Supply	1x AA Battery
Battery Cell Composition	Alkaline
Item Weight	47 Grams
Approximate Dimensions (L x W x H)	13 x 10 x 5 cm (based on parcel dimensions)

## 9. WARRANTY AND SUPPORT

For detailed warranty information, technical support, or service inquiries regarding your CANYON CNS-CMSW04B mouse, please visit the official CANYON website or contact the retailer from whom you purchased the product. It is recommended to retain your purchase receipt as proof of purchase for any warranty claims.