

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kappesberg](#) /

› [Kappesberg G746-cn Kitchen Sink Cabinet: 1 Door, 4 Drawers, 120cm - Assembly and Care Manual](#)

Kappesberg G746-cn

Kappesberg G746-cn Kitchen Sink Cabinet: 1 Door, 4 Drawers, 120cm - Assembly and Care Manual

Model: G746-cn | Brand: Kappesberg

1. PRODUCT OVERVIEW

The Kappesberg G746-cn is a versatile kitchen sink cabinet designed to provide ample storage and functionality. This unit features one door and four drawers, offering organized space for your kitchen essentials. Constructed from durable wood with a Nogal finish, it measures approximately 120cm in width, 88cm in height, and 52cm in depth. Please note that this model is supplied without a countertop, allowing for customization with your preferred sink and surface.



Image 1.1: The Kappesberg G746-cn kitchen sink cabinet integrated into a modern kitchen design.



Image 1.2: Detailed view of the cabinet's dimensions, including overall width (120cm), height (88cm), depth (52cm), and individual drawer heights.

2. SAFETY INSTRUCTIONS

- Always follow assembly instructions carefully to prevent injury or damage.
- Ensure all fasteners are securely tightened. Periodically check and re-tighten as needed.
- Do not overload drawers or shelves. Distribute weight evenly.
- For stability, it is recommended to secure the cabinet to a wall using appropriate hardware (not included). This prevents tipping, especially in households with children.
- Keep small parts and assembly tools out of reach of children during assembly.
- Avoid placing hot items directly on the cabinet surface without protection.
- Do not stand or climb on the cabinet.

3. SETUP AND ASSEMBLY

Assembly of the Kappesberg G746-cn cabinet requires two people and basic tools. Please ensure you have sufficient space and all components before beginning.

3.1. Required Tools (Not Included)

- Phillips head screwdriver
- Hammer
- Measuring tape
- Level
- Drill (for wall mounting, if applicable)

3.2. Unpacking and Part Identification

1. Carefully unpack all components from the packaging.
2. Lay out all wooden panels, hardware, and accessories on a clean, soft surface to prevent scratches.
3. Refer to the included assembly diagram (if provided in packaging) to identify each part. Verify that all components are present and undamaged.

3.3. Assembly Steps (General Guidelines)

1. **Assemble the Base Structure:** Begin by connecting the side panels to the bottom panel using the provided dowels and cam locks/screws. Ensure the structure is square and stable.
2. **Install Back Panel:** Slide or nail the back panel into the designated grooves or attach it to the rear of the cabinet frame.
3. **Install Shelves:** Insert shelf supports into the pre-drilled holes at your desired height and place the shelves.
4. **Assemble Drawers:**
 - Attach the drawer sides to the front and back panels.
 - Slide the drawer bottom into the grooves.
 - Secure the drawer runners to the drawer sides and the cabinet interior.
 - Attach drawer handles.
5. **Install Door:**
 - Attach hinges to the door and then to the cabinet frame.
 - Adjust hinges to ensure proper door alignment and smooth operation.
 - Attach the door handle.
6. **Final Placement and Leveling:** Position the cabinet in its desired location. Use a level to ensure it is perfectly horizontal. Adjust feet (if present) or use shims as needed.
7. **Wall Mounting (Recommended):** For enhanced stability and safety, especially in homes with children, secure the cabinet to the wall using appropriate wall anchors and screws (not supplied). Consult a professional if unsure about suitable hardware for your wall type.



Image 3.1: The internal structure of the Kappesberg G746-cn cabinet, with drawers and door open, illustrating component layout.

4. OPERATING INSTRUCTIONS

The Kappesberg G746-cn cabinet is designed for straightforward use, providing convenient storage for your kitchen items.

- **Drawers:** The four drawers operate on smooth runners. Pull the handles gently to open and push to close. Avoid forcing drawers if they feel stiff; check for obstructions.
- **Door:** The single door opens outwards. Use the handle to open and close. Ensure the door closes completely to keep contents secure and dust-free.
- **Storage:** Utilize the internal shelves and drawers to organize cookware, dinnerware, utensils, and other kitchen supplies. Distribute weight evenly across shelves and within drawers to maintain stability and prevent damage.



Image 4.1: The cabinet showcasing its storage capacity with various kitchen items neatly organized within its drawers and shelves.

5. MAINTENANCE AND CARE

Proper care will extend the life and maintain the appearance of your Kappesberg G746-cn cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner specifically designed for wood furniture. Dry immediately with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or ammonia-based products, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or water damage to the wood.
- **Heat and Moisture:** Protect the cabinet from excessive heat and moisture. Use coasters or mats under hot dishes or wet items.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.
- **Hardware:** Periodically check all screws, hinges, and drawer runners. Tighten any loose fasteners to ensure continued stability and smooth operation.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Drawers are Stiff or Not Closing Properly:**
 - Check for obstructions inside the drawer or along the runners.
 - Ensure the drawer runners are clean and free of debris.
 - Verify that the drawer is correctly seated on its runners.
 - Check if the cabinet itself is level. An unlevel cabinet can cause drawers to stick.

- **Door is Misaligned or Not Closing Fully:**

- Adjust the hinges. Most hinges have screws that allow for vertical, horizontal, and depth adjustments. Refer to the hinge manufacturer's instructions if specific adjustments are needed.
- Ensure the cabinet is level.

- **Cabinet Feels Unstable:**

- Ensure all assembly screws are tightened.
- Verify the cabinet is on a level surface.
- Consider securing the cabinet to the wall using appropriate anti-tip hardware.

7. SPECIFICATIONS

Feature	Detail
Model	G746-cn
Brand	Kappesberg
Type	Kitchen Sink Cabinet (without countertop)
Color	Nogal
Material	Wood
Dimensions (W x H x D)	120 cm x 88 cm x 52 cm (approximate, based on image)
Number of Doors	1
Number of Drawers	4
Assembly Required	Yes
GTIN (EAN)	7909875937745

8. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or contact Kappesberg customer service directly. Kappesberg offers various extended warranty options for failures and defects, which may be purchased separately.

If you require assistance with assembly, have questions about product features, or need to report a missing/damaged part, please contact Kappesberg customer support through their official website or the contact information provided in your product packaging.

Manufacturer: Kappesberg

Website: www.kappesberg.com.br (Note: This is a placeholder link, please refer to official documentation for correct contact details.)

