

[Manuals.plus](#) /

› [Samsung](#) /

› Samsung DW60DG550FSRBZ 14-Place Stainless Steel Dishwasher User Manual

Samsung DW60DG550FSRBZ

Samsung DW60DG550FSRBZ 14-Place Stainless Steel Dishwasher User Manual

Model: DW60DG550FSRBZ

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Samsung 14-Place Stainless Steel Dishwasher. Please read it thoroughly before using your appliance and keep it for future reference.

2. PRODUCT OVERVIEW

The Samsung DW60DG550FSRBZ dishwasher is designed for deep and quiet cleaning, featuring a 14-place setting capacity. It includes a Hygiene function with high-temperature rinsing and an Auto Cycle function that detects soil levels for optimal cleaning.



Figure 1: Front view of the Samsung DW60DG550FSRBZ Dishwasher with the door slightly open, revealing the control panel.



Figure 2: Detailed view of the dishwasher's control panel, featuring a digital display and various program selection buttons.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended to have a qualified technician perform the installation.

3.1 Unpacking

Carefully remove all packaging materials and internal components. Inspect the dishwasher for any damage incurred during transit. Keep packaging materials away from children.

3.2 Placement

The dishwasher can be installed freestanding or built-in under a countertop. Ensure the chosen location has

access to water supply, drainage, and a suitable electrical outlet (220V).

3.3 Water Connection

Connect the water inlet hose to a cold water supply tap. Ensure all connections are tight to prevent leaks. The water consumption is approximately 10.05 liters per cycle.

3.4 Drainage Connection

Connect the drain hose to your household drainage system. Ensure the hose is properly secured and free from kinks to allow for efficient water discharge.

3.5 Electrical Connection

Plug the dishwasher into a grounded 220V electrical outlet. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

Follow these steps for optimal washing results:

1. **Load the Dishwasher:** Arrange dishes, cutlery, and cookware in the racks, ensuring they do not block the spray arms.
2. **Add Detergent:** Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
3. **Select Program:** Choose a wash program suitable for the soil level of your dishes. Available cycles include Automatic, Hygiene, Sensor, and Normal.
4. **Select Options (Optional):** Use extra functions like the Hygiene function for high-temperature rinsing (70°C) or the Half Load setting for smaller loads.
5. **Start Cycle:** Close the dishwasher door firmly and press the Start button.

4.1 Wash Programs

- **Automatic Cycle:** Detects the soil level and automatically selects the ideal cleaning cycle, optimizing water and energy consumption.
- **Hygiene Function:** Elevates water temperature to 70°C during the final rinse for deep cleaning and sanitization.
- **Half Load:** Allows washing smaller quantities of dishes by using only a selected zone, saving water and energy.

5. LOADING THE DISHWASHER

Proper loading ensures thorough cleaning and prevents damage to dishes.



Figure 3: Empty interior of the dishwasher, showing the upper and lower racks ready for loading.



Figure 4: Dishwasher interior loaded with various dishes, demonstrating optimal placement for a full cycle.



Figure 5: Side view of the dishwasher with racks extended, highlighting the spacious design for easy loading and unloading.

5.1 Upper Rack

Ideal for delicate items such as glasses, cups, and small bowls. Place items upside down to ensure proper cleaning and drainage.

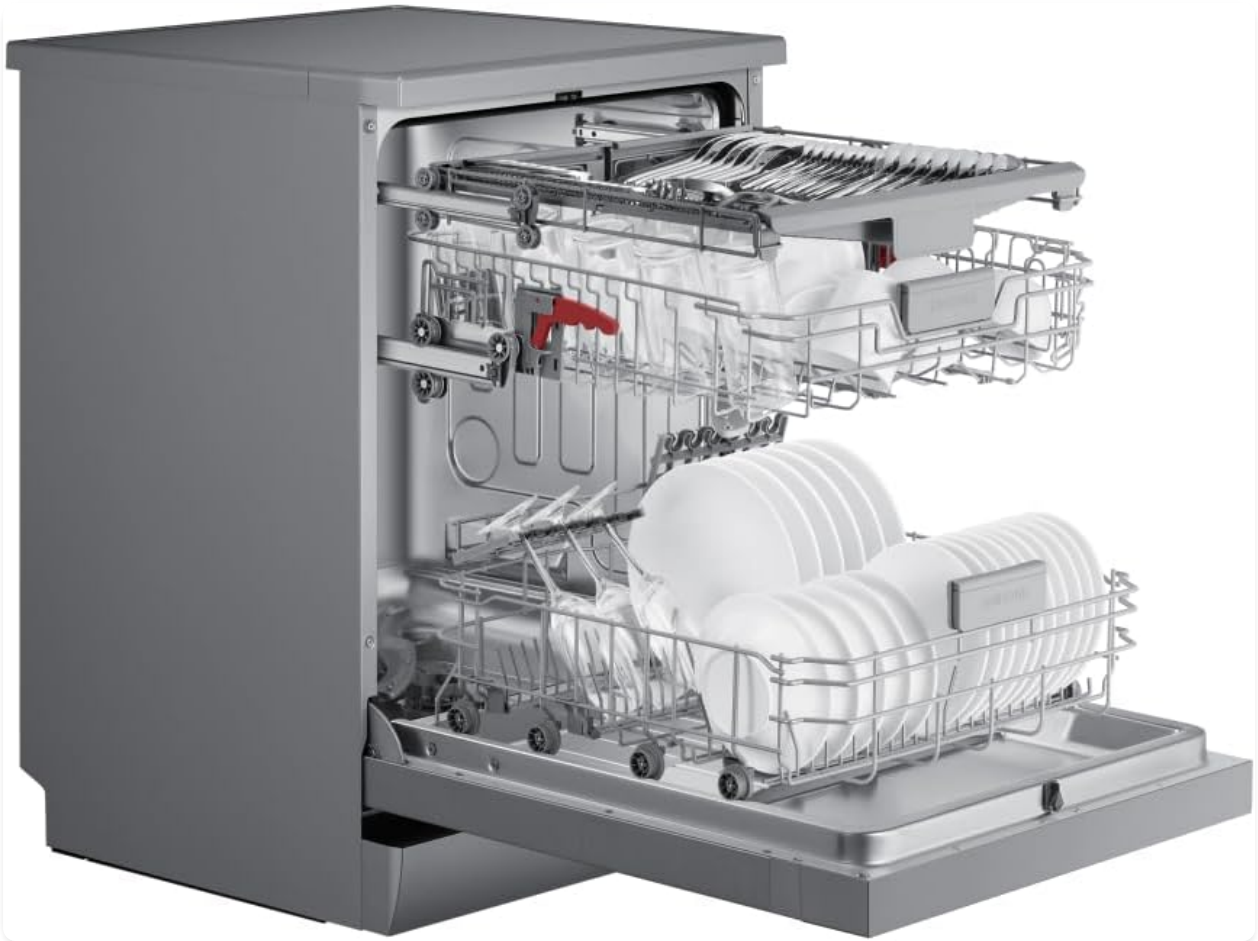


Figure 6: Upper rack filled with glasses and small bowls, demonstrating correct placement.

5.2 Lower Rack

Designed for larger and heavily soiled items like dinner plates, pots, pans, and serving dishes. Ensure items do not obstruct the spray arm rotation.

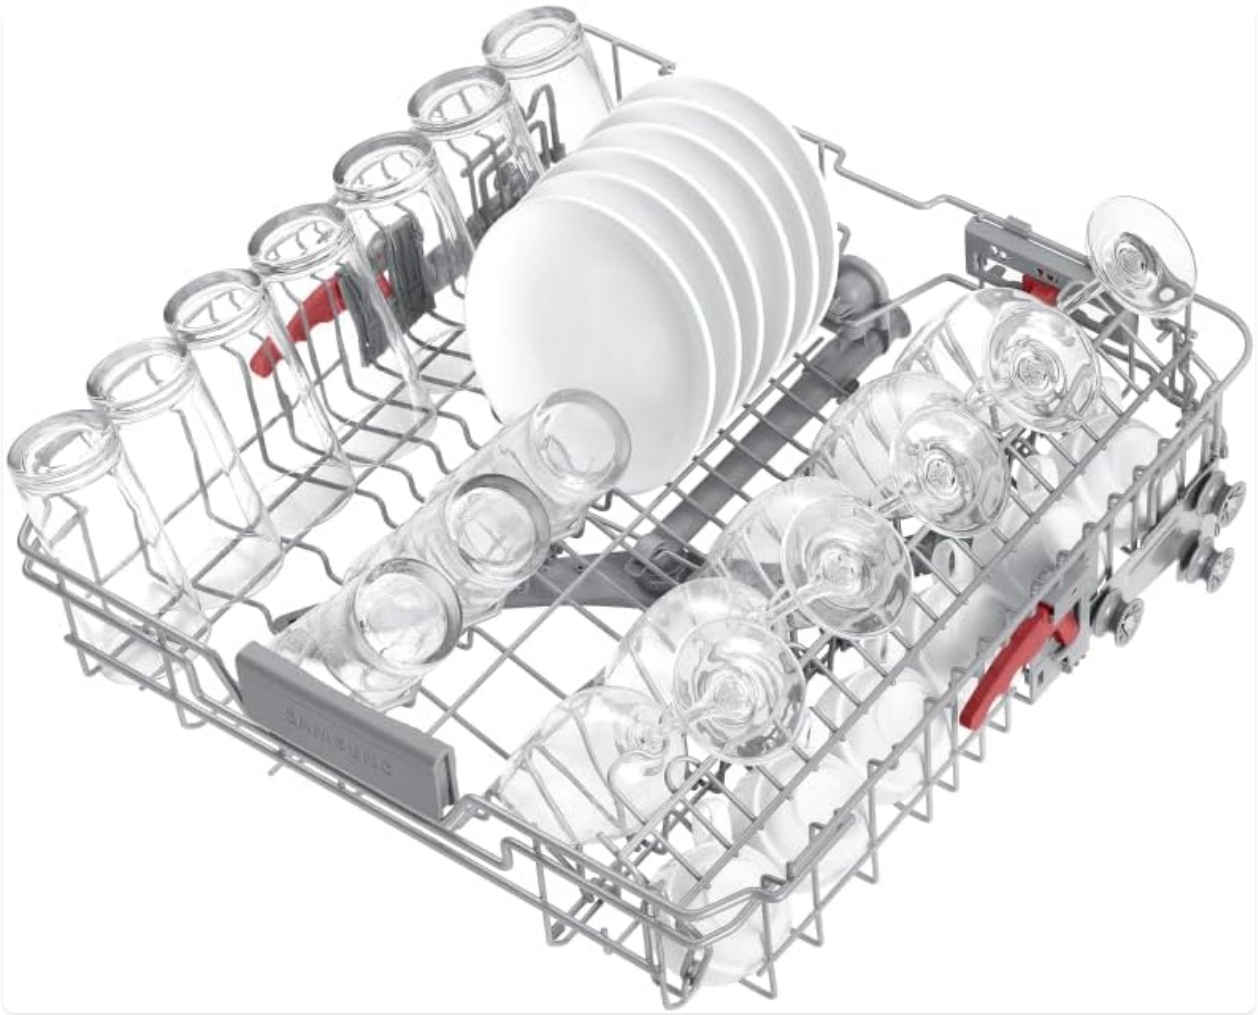


Figure 7: Lower rack loaded with dinner plates, showing how to maximize space and cleaning efficiency.

5.3 Cutlery Basket

Place forks, spoons, and knives in the designated cutlery basket, handles down for forks and spoons, and handles up for knives for safety.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

6.1 Cleaning the Filters

The dishwasher has a filter system that needs regular cleaning. Remove the filter assembly, rinse it under running water to remove food particles, and reassemble it. Clean at least once a week.

6.2 Cleaning the Spray Arms

Periodically check the spray arms for clogged nozzles. Use a thin wire or toothpick to clear any blockages. Ensure they rotate freely.

6.3 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its finish.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

- **Dishwasher not starting:** Check if the power cord is securely plugged in and the door is fully closed. Ensure the water supply is turned on.
- **Dishes not clean:** Verify that the spray arms are not blocked and can rotate freely. Ensure dishes are loaded correctly and not overcrowded. Check detergent levels.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the filter system.
- **Unusual noise:** Ensure dishes are not rattling against each other or blocking the spray arms.

8. SPECIFICATIONS

Feature	Specification
Brand	Samsung
Model Number	DW60DG550FSRBZ
Installation Type	Freestanding
Product Dimensions (D x W x H)	60P x 60L x 85A centimeters
Capacity	14 Place Settings
Water Consumption	10.05 Liters
Voltage	220 Volts
Control Type	Push Button
Special Features	Auto Cycle Function, Hygiene Function (high temperature rinse), Deep and Silent Cleaning
Material (Basket/Rack)	Stainless Steel
Item Weight	54500 Grams
Color	Stainless Steel

9. WARRANTY AND SUPPORT

This Samsung dishwasher comes with a **1-year warranty**. For technical assistance, repairs, or warranty claims, please contact Samsung customer support. Refer to your purchase documentation for specific contact details and warranty terms.