

[Manuals.plus](#) /

› [Pagani Design](#) /

› Pagani Design 1644 Chronograph Watch User Manual

Pagani Design PD-1644

Pagani Design 1644 Chronograph Watch User Manual

Model: PD-1644

1. INTRODUCTION

Thank you for choosing the Pagani Design 1644 Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, maintenance, and troubleshooting of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

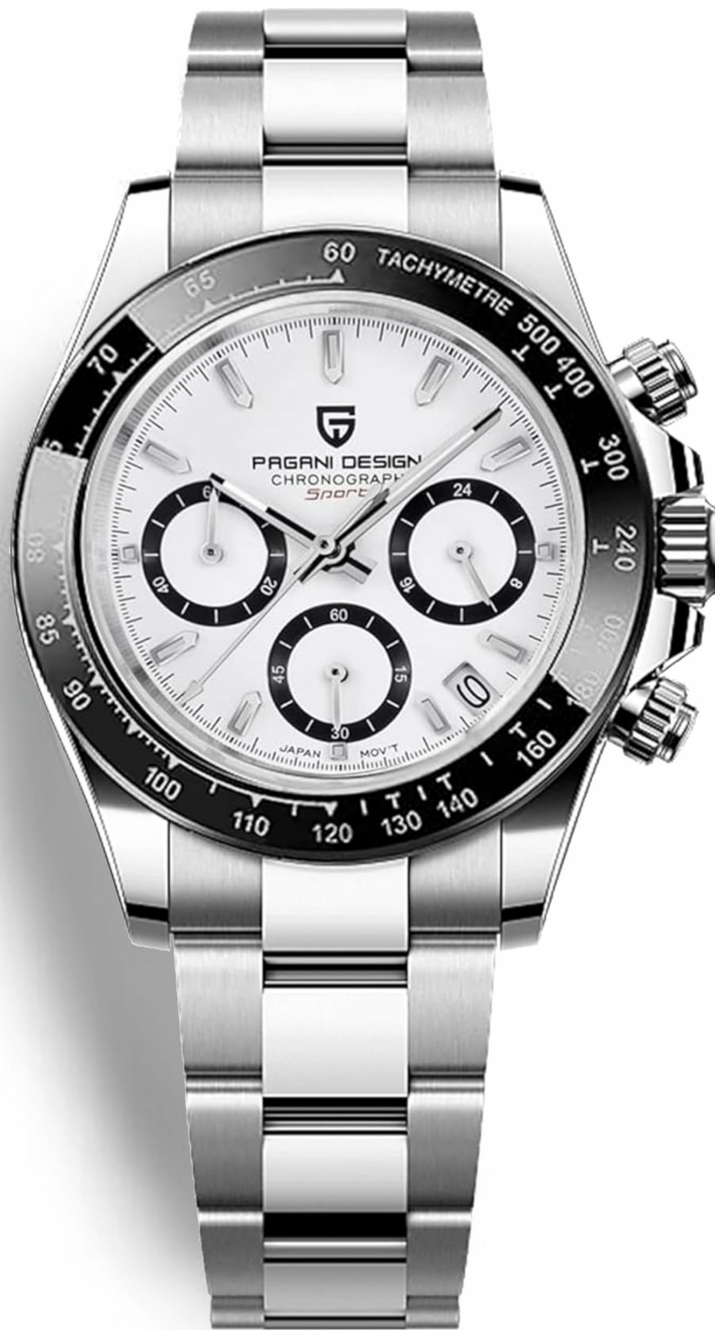


Image 1.1: The Pagani Design 1644 Chronograph Watch, showcasing its classic design with a stainless steel bracelet and white dial.

2. PRODUCT OVERVIEW

The Pagani Design 1644 is a classic men's chronograph watch featuring a reliable Japanese VK63 quartz movement. It is constructed with a durable stainless steel case and bracelet, a ceramic bezel, and a scratch-resistant sapphire crystal. The watch is designed for daily wear and offers water resistance up to 100 meters.

Key Features:

- **Movement:** Japanese VK63 Quartz Chronograph for precise timekeeping.
- **Case & Bracelet:** High-quality stainless steel for durability and comfort.
- **Bezel:** Ceramic bezel for enhanced scratch resistance.
- **Crystal:** Sapphire glass for superior clarity and scratch protection.
- **Water Resistance:** 100 meters (10 ATM), suitable for swimming and showering.
- **Functions:** Chronograph (stopwatch) with luminous hands and markers for visibility in low light.



Image 2.1: Close-up view of the watch dial, showing the chronograph subdials and luminous markers.

3. SETUP

3.1 Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (middle knob on the right side of the watch) to position 2 (first click) to set the date, or position 3 (second click) to set the time.
2. **Set the date (if applicable):** In position 2, turn the crown clockwise or counter-clockwise to adjust the date.
3. **Set the time:** In position 3, turn the crown to move the hour and minute hands. Ensure to set the correct AM/PM by observing if the date changes when passing midnight.
4. **Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch.

3.2 Adjusting the Bracelet

The stainless steel bracelet can be adjusted by removing or adding links. A small screwdriver is typically included for this purpose. If you are unsure, it is recommended to have a professional watchmaker adjust the bracelet to prevent damage.

1. Identify the removable links, usually indicated by small arrows on the underside of the bracelet.
2. Use the provided tool to push out the pins in the direction of the arrows.
3. Remove the desired number of links.
4. Reconnect the bracelet by inserting the pins in the opposite direction.



Image 3.1: Rear view of the watch, showing the stainless steel case back and the deployment clasp, which can be adjusted by removing links.

4. OPERATING THE CHRONOGRAPH

Your Pagani Design 1644 watch features a fully functional chronograph. The chronograph is controlled by the two pushers located above and below the crown.



Image 4.1: Close-up of the watch's right side, highlighting the crown and the two chronograph pushers.

1. **Start/Stop:** Press the upper right pusher (A) to start the chronograph. The large central second hand will begin to move. Press pusher (A) again to stop the chronograph.
2. **Reset:** While the chronograph is stopped, press the lower right pusher (B) to reset all chronograph hands (central second hand and subdials) to their zero positions.
3. **Subdials:** The subdials typically measure elapsed minutes and hours, while the central second hand measures elapsed seconds. Refer to the dial markings for specific subdial functions.

5. MAINTENANCE

5.1 Water Resistance

Your watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for everyday use, including splashes, rain, and recreational swimming. However, it is **not recommended** for diving or hot baths/showers, as extreme temperature changes and steam can compromise the seals. Always ensure the crown is fully pushed in before exposing the watch to water.

5.2 Cleaning

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For stainless steel parts, a slightly damp cloth can be used, followed by a dry one. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or seals. A cleaning cloth is included with your purchase.

5.3 Luminous Features

The hands and markers of your watch feature luminous material, allowing for readability in low-light conditions. Exposure to light will charge the luminous elements, which will then glow in the dark for a period.



Image 5.1: The watch dial displaying its luminous hands and markers in a dark environment.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in.	Replace battery; Push crown fully into position 1.
Chronograph hands do not reset to zero	Requires calibration.	Consult a watch professional for adjustment.
Water inside the watch	Crown not fully pushed in; Seals compromised.	Ensure crown is always pushed in; Seek professional repair immediately.

7. SPECIFICATIONS

Feature	Detail
Model Number	PD-1644
Movement Type	Japanese VK63 Quartz Chronograph
Case Material	Stainless Steel
Band Material	Stainless Steel
Dial Window Material	Sapphire Glass
Case Diameter	40 Millimeters
Water Resistance Depth	100 Meters (10 ATM)
Item Weight	120 Grams
Special Features	Chronograph, Luminous Hands/Markers

8. WARRANTY AND SUPPORT

Your Pagani Design 1644 watch comes with a limited warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. Additionally, you may benefit from a 30-day return policy from the date of purchase, subject to the retailer's terms.

For any questions, technical assistance, or warranty claims, please contact the retailer or authorized service center where you purchased the watch. Ensure to keep your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question