



[Manuals.plus](#) /

- › [EDISON ELECTRIC](#) /
- › Edison Electric Tea Preparation Set Instruction Manual (Model B0DK4WSMBD)

EDISON ELECTRIC B0DK4WSMBD

Edison Electric Tea Preparation Set Instruction Manual

Model: B0DK4WSMBD | Brand: EDISON ELECTRIC

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use, maintenance, and troubleshooting of your Edison Electric Tea Preparation Set. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Edison Electric Tea Preparation Set, featuring a sleek black stainless steel kettle and a transparent glass teapot, designed for modern kitchens.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any

manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.

COMPONENTS

Your Edison Electric Tea Preparation Set includes the following main components:

- **Electric Kettle:** Stainless steel body with a 1.7-liter capacity for rapid water boiling.
- **Glass Teapot:** Transparent glass teapot with a 1.0-liter capacity, ideal for brewing and serving tea.
- **Power Base:** The base unit that supplies power to the kettle and teapot, featuring a power cord.
- **Tea Infuser (if included):** A removable infuser for loose leaf tea (check packaging for confirmation).

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to its maximum level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues. Wash the glass teapot and infuser (if applicable) with warm soapy water and rinse thoroughly.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power base into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Using the Electric Kettle:

1. **Fill the Kettle:** Open the kettle lid and fill with fresh cold water. Do not fill below the minimum mark or above the maximum mark (1.7 liters).
2. **Place on Base:** Ensure the kettle is securely placed on its power base.
3. **Boil Water:** Press the power switch (usually located on the handle or base). The indicator light will illuminate, indicating the kettle is heating.
4. **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
5. **Pouring:** Carefully lift the kettle from the base and pour the hot water. Be cautious of steam.

Brewing Tea with the Glass Teapot:

1. **Add Tea:** Place your desired amount of loose leaf tea or tea bags into the teapot's infuser (if using) or directly into the teapot.
2. **Add Hot Water:** Carefully pour boiled water from the kettle into the glass teapot.

3. **Steep:** Allow the tea to steep for the recommended time according to your tea type.
4. **Serve:** Remove the infuser (if used) and serve the freshly brewed tea.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your tea preparation set.

- **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle and power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior Cleaning (Kettle):** For general cleaning, rinse the inside of the kettle with water.
- **Teapot Cleaning:** The glass teapot and infuser can be washed with warm soapy water. Rinse thoroughly and dry.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a solution of one part white vinegar to two parts water.
 - Boil the solution and let it stand for at least 30 minutes, or longer for heavy buildup.
 - Discard the solution and rinse the kettle thoroughly with fresh water several times.
 - Alternatively, use a commercial descaling product designed for kettles, following the manufacturer's instructions.
- **Do not immerse the kettle or power base in water.**

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not activated; kettle not properly seated on base; power outage.	Ensure plug is firmly in outlet. Press power switch. Re-seat kettle on base. Check household circuit breaker.
Water takes too long to boil.	Limescale buildup; overfilling the kettle.	Descal the kettle (refer to Maintenance section). Do not fill above the maximum level.
Kettle switches off before boiling.	Limescale buildup; kettle is empty or underfilled.	Descal the kettle. Ensure water level is between MIN and MAX marks.
Water leaks from kettle.	Kettle overfilled; lid not properly closed.	Do not fill above the MAX mark. Ensure the lid is securely closed.

SPECIFICATIONS

Brand	EDISON ELECTRIC
Model	B0DK4WSMBD
Power	2350 Watts
Kettle Capacity	1.7 Liters
Teapot Capacity	1.0 Liters (estimated from product title, please verify)
Material	Stainless Steel, Glass
Color	Black

Special Features	Water level indicator, Rapid boil, Convenient capacity
Product Dimensions	35L x 40W x 35H cm (approximate, based on package dimensions)
Item Weight	3.71 Kilograms

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

This Edison Electric Tea Preparation Set is covered by a **2-year extended warranty**. For warranty claims, technical support, or service inquiries, please contact your retailer or the EDISON ELECTRIC customer service department.

Please have your model number (B0DK4WSMBD) and proof of purchase ready when contacting support.