



Manuals.plus /

› PINDOWS /

› PINDOWS PDS-647 Men's Analog Quartz Chronograph Watch Instruction Manual

PINDOWS PDS-647

PINDOWS PDS-647 Men's Analog Quartz Chronograph Watch Instruction Manual

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your PINDOWS PDS-647 analog quartz chronograph watch.

1. PRODUCT OVERVIEW

The PINDOWS PDS-647 is an analog quartz chronograph watch designed for reliability and functionality. It features a round dial, a durable PMMA dial window, and a genuine leather strap with a pin buckle. The watch is equipped with a stopwatch function and is water-resistant up to 30 meters.



Image 1.1: Front view of the PINDOWS PDS-647 watch, showcasing the white dial, chronograph subdials, and brown leather strap.

Key Features:

- **Analog Quartz Movement:** Provides accurate timekeeping with minimal deviation.
- **Chronograph Function:** Integrated stopwatch for measuring elapsed time.
- **30M Water Resistance:** Suitable for daily use, including splashes, rain, and cold bathing. Not intended for underwater button operation or hot water environments.
- **Durable Construction:** Features a high-hardness, scratch-resistant PMMA dial window and an alloy steel case.
- **Luminous Display:** HD lighting technology absorbs light energy for a long-lasting glow in low-light conditions.

2. SETUP AND INITIAL USE

2.1 Setting the Time

1. Pull the crown (center knob) out to the second click position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back into its normal position to start the watch.

2.2 Adjusting the Strap

The genuine leather strap features a pin buckle for easy adjustment. Thread the strap through the buckle and secure the pin into the desired hole for a comfortable fit on your wrist.



Image 2.1: Side view of the watch, illustrating the crown (center) and chronograph pushers (top and bottom).

3. OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** With the chronograph stopped, press the bottom pusher (B) to reset all chronograph hands to their zero positions.

Note: Ensure the crown is fully pushed in before operating the chronograph pushers to maintain water resistance.

4. CARE AND MAINTENANCE

4.1 Water Resistance

Your PINDOWS PDS-647 watch is 30M water-resistant. This means it is suitable for daily use, including accidental splashes, rain, and cold showers. **Do not press any buttons underwater.** Avoid exposure to hot water or steam, as this can compromise the watch's seals and water resistance.

4.2 Cleaning

- Wipe the watch case and dial window with a soft, dry cloth.
- For the leather strap, avoid excessive moisture. If it gets wet, allow it to air dry naturally. Do not use harsh chemicals or abrasive materials.

4.3 Battery Replacement

When the watch stops or the second hand moves erratically, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

4.4 Storage

Store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields when not in use.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in	Replace battery (professional service recommended); Push crown fully into normal position.
Chronograph hands do not reset to zero	Requires calibration; Internal mechanism issue	Consult a watch technician for calibration or repair.
Water inside the watch	Water resistance compromised; Buttons pressed underwater	Immediately take to a professional watch repair service to prevent further damage.

6. SPECIFICATIONS



Image 6.1: Back view of the watch, displaying the stainless steel case back with model number and water resistance markings.

- **Model:** PDS-647
- **Movement:** Analog Quartz
- **Dial Window Material:** PMMA (Polymethyl methacrylate)
- **Case Material:** Alloy Steel
- **Strap Material:** Genuine Leather
- **Clasp Type:** Pin Buckle
- **Water Resistance:** 30 Meters (3 ATM)
- **Dial Diameter:** 1.81 inches (approx. 46 mm)
- **Case Thickness:** 0.55 inches (approx. 14 mm)
- **Strap Length:** 8.4 inches (approx. 21.3 cm)
- **Weight:** 5.29 ounces (approx. 150 grams)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

PINDOWS watches are manufactured with attention to quality. For specific warranty details regarding your PDS-647 watch, please refer to the warranty card included in your product packaging or visit the official PINDOWS

website. The warranty typically covers manufacturing defects under normal use.

7.2 Customer Support

Should you encounter any issues or have questions not covered in this manual, please contact PINDOWS customer service. Contact information can usually be found on the product packaging, the official PINDOWS website, or through your retailer.

"We strive to provide our customers with a satisfactory shopping experience. If you have any problems or are dissatisfied with your watch, please feel free to contact us. We offer you professional service."