

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GarveeHome](#) /

› [GarveeHome 36-inch French Door Refrigerator \(Model PHO_121H0NER\) User Manual](#)

GarveeHome PHO_121H0NER

GarveeHome 36-inch French Door Refrigerator User Manual

Model: PHO_121H0NER

1. INTRODUCTION

Thank you for choosing the GarveeHome 36-inch French Door Refrigerator. This appliance is designed to provide efficient and versatile food storage with its generous 21 cubic feet capacity, dedicated wine cabinet, and advanced cooling features. This manual provides essential information for the safe installation, operation, and maintenance of your new refrigerator. Please read all instructions carefully before using the appliance and retain this manual for future reference.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded 115V, 60Hz electrical outlet. Do not use extension cords or ungrounded adapters.
- **Ventilation:** Maintain adequate clearance around the refrigerator for proper air circulation and heat dissipation. Refer to the placement guidelines in the Setup section.
- **Child Safety:** Do not allow children to play with, operate, or crawl inside the refrigerator. Old refrigerators must be properly disposed of to prevent child entrapment.
- **Flammable Materials:** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Service:** Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

3. PRODUCT OVERVIEW

The GarveeHome French Door Refrigerator features a sophisticated design with multiple compartments for optimized storage.

Key Components:

- **Fresh Food Compartment:** Upper section with adjustable glass shelves and crisper drawers.
- **Freezer Compartment:** Lower left section for frozen goods, includes an ice maker.
- **Wine Cabinet:** Lower right section with wooden shelves for wine storage.
- **Digital Control Panel:** Located on the upper left door for temperature adjustments and mode selection.

- **LED Lighting:** Illuminates the interior of all compartments.



Figure 3.1: Interior view of the refrigerator with all compartments open. The upper section displays fresh food, the lower left is the freezer, and the lower right is the wine cabinet.

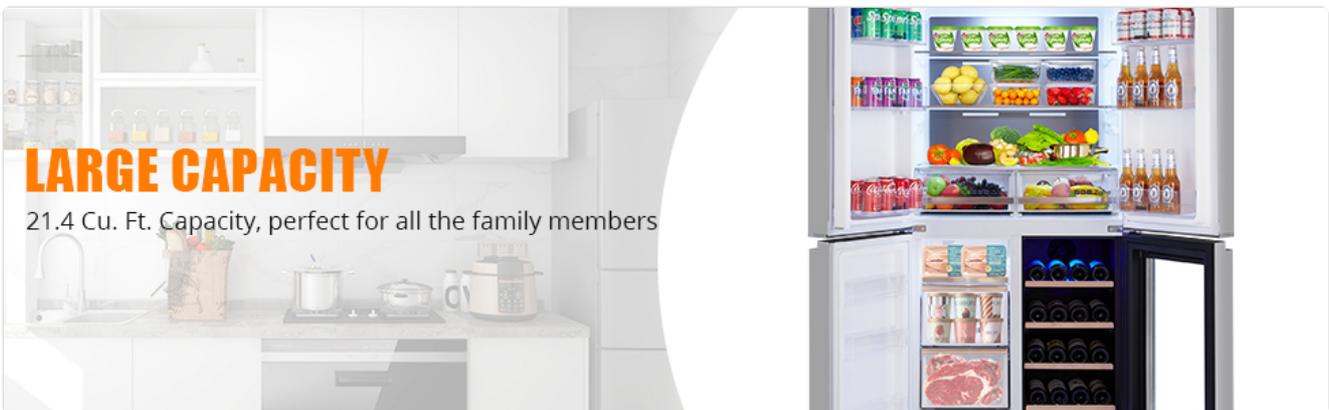


Figure 3.2: Close-up details of the refrigerator, highlighting adjustable bottom feet for leveling, the internal fan for the wine zone, a spacious crisper drawer, and the digital control panel with an 'Economic Mode' button.

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Dispose of packaging responsibly. Ensure no parts are missing or damaged. Keep the plastic film away from children.

4.2 Placement and Leveling

Place the refrigerator on a flat, stable surface away from direct sunlight, heat sources, and moisture. Allow at least 4 inches (10 cm) of space behind and on the sides of the refrigerator for proper ventilation. Use the adjustable bottom feet to level the appliance. Proper leveling ensures efficient operation and prevents door misalignment.

4.3 Electrical Connection

Before plugging in, ensure the voltage and frequency indicated on the rating plate match your household power supply. Connect the refrigerator to a dedicated, grounded 115V, 60Hz electrical outlet. Do not use multi-sockets or extension cords.

4.4 Initial Power-On

After placement, wait at least 2-4 hours before plugging in the refrigerator to allow refrigerants to settle. Once plugged in, the refrigerator will begin cooling. Allow 24 hours for the appliance to reach its optimal operating temperature before loading with food.



Figure 4.1: Dimensions of the GarveeHome refrigerator, indicating its compact size and large capacity. Height is 71.65 inches, depth is 28.35 inches, and width is 35.63 inches.

5. OPERATING INSTRUCTIONS

Your GarveeHome refrigerator features an intuitive digital control panel for easy management of settings.

5.1 Digital Control Panel

The control panel, located on the upper left door, allows you to adjust temperatures for the fresh food, freezer, and wine cabinet sections, as well as activate special functions.

5.2 Temperature Adjustment

Press the 'Zone Select' button to cycle through the fresh food, freezer, and wine cabinet zones. Use the 'Temperature Up' and 'Temperature Down' buttons to set your desired temperature for the selected zone. The digital display will show the current and set temperatures.

5.3 Using the Fresh Food Zone

The fresh food compartment offers 13.6 cubic feet of storage. It includes three adjustable glass shelves and two crisper drawers. Adjust shelves to accommodate items of various sizes. The crisper drawers are ideal for maintaining the freshness of fruits and vegetables.

5.4 Using the Freezer Compartment

The freezer compartment provides 3.71 cubic feet of storage. It features a quick-freeze setting for rapidly freezing newly added items. The built-in ice maker automatically produces ice. Ensure the water supply line is connected and turned on for ice production.

5.5 Using the Wine Cabinet

The dedicated wine cabinet can accommodate up to 34 standard wine bottles on its wooden shelves. Adjust the temperature to your preferred setting for optimal wine preservation. The internal fan ensures even cooling throughout the cabinet.



Figure 5.1: The wine cabinet section of the refrigerator, demonstrating its capacity to store multiple bottles on dedicated wooden shelves.

5.6 Special Features

- **Soft Door Alarm:** An audible alarm will sound if a door is left open for an extended period, helping to conserve energy and maintain internal temperatures.
- **Economic Mode (Eco):** Press the 'Eco' button on the control panel to activate energy-saving mode. The 'Eco' icon

will illuminate, indicating reduced power consumption. Press again to deactivate.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your refrigerator.

6.1 Cleaning the Interior

Unplug the refrigerator before cleaning. Wash interior surfaces with a solution of mild soap and warm water. Rinse thoroughly and dry. Remove shelves and drawers for easier cleaning. Avoid abrasive cleaners or solvents.

6.2 Cleaning the Exterior

Wipe the exterior with a soft cloth dampened with mild soap and water. The fingerprint-proof stainless steel finish requires minimal effort to keep clean. Avoid harsh chemicals or abrasive pads that could scratch the surface.

6.3 Defrosting

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting of the fresh food and freezer compartments.

6.4 Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain internal temperatures for as long as possible. Avoid opening the doors unnecessarily.

6.5 Vacation Care

For short vacations, leave the refrigerator operating normally. For long vacations, unplug the appliance, empty all contents, clean thoroughly, and leave the doors slightly ajar to prevent odors and mold growth.

7. TROUBLESHOOTING

Review this section before calling for service. It may save you time and expense.

Problem	Possible Cause	Solution
Refrigerator not operating	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature too warm	Temperature setting too high; door left open; excessive food load; poor ventilation.	Adjust temperature setting; ensure doors are closed; allow space for air circulation; reduce food load.
Excessive noise	Refrigerator not level; items vibrating inside; normal operating sounds.	Level the appliance using adjustable feet; rearrange items; some sounds (e.g., refrigerant flow, compressor) are normal.
Water on floor	Drain tube clogged; door not sealing properly.	Clear drain tube; check door gasket for obstructions or damage.
Door alarm sounds	Door left open too long.	Close the door completely.

8. SPECIFICATIONS

Technical details for the GarveeHome 36-inch French Door Refrigerator, Model PHO_121H0NER.

Feature	Detail
Brand	GarveeHome
Model Number	PHO_121H0NER
Product Dimensions (D x W x H)	37.8" x 30.51" x 73.62"
Item Weight	277.78 Pounds
Total Capacity	21 Cubic Feet
Fresh Food Capacity	13.6 Cubic Feet
Freezer Capacity	3.71 Cubic Feet
Number of Doors	4
Configuration	French Door
Defrost System	Automatic
Voltage	115V
Special Feature	Low Noise Operation
Installation Type	Built-In

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For technical support, parts, or service inquiries, please contact GarveeHome customer service through the official GarveeHome website or your point of purchase. Please have your model number (PHO_121H0NER) and purchase date available when contacting support.