

Manuals.plus /

› Electactic /

› Electactic 10-Cup Drip Coffee Maker Instruction Manual

Electactic CM1443A-UL

Electactic 10-Cup Drip Coffee Maker

INSTRUCTION MANUAL

Model: CM1443A-UL

PRODUCT OVERVIEW

The Electactic 10-Cup Drip Coffee Maker is designed for convenience and quality, allowing you to enjoy freshly brewed coffee with ease. Featuring a 24-hour programmable timer, touch screen controls, and two strength levels, it caters to your personal coffee preferences. The large 55oz (1.5 liter) water tank is suitable for multiple servings, making it ideal for households, offices, or entertaining guests. A warming plate keeps coffee hot for up to 2 hours, and the reusable filter promotes sustainability.



Image: The Electactic 10-Cup Drip Coffee Maker, showcasing its sleek design and capacity, ready to brew.

PRODUCT COMPONENTS

Before initial use, ensure all components are present and undamaged:

- **Programmable Coffee Brewer:** The main unit with control panel and warming plate.
- **10-Cup Glass Carafe:** Glass pot with handle and lid for collecting brewed coffee.
- **Permanent Filter:** Reusable mesh filter basket for coffee grounds.
- **Integrated Scoop:** For measuring coffee grounds.
- **Removable Water Reservoir:** Clear tank for water, located at the back of the unit.
- **Water Tank Cover:** Lid for the water reservoir.
- **Funnel:** Component that holds the reusable filter.



Image: An exploded view illustrating all individual components of the coffee maker, including the reusable filter, top cover, funnel, carafe, control panel, warming plate, water tank cover, water tank, and spoon.

SETUP INSTRUCTIONS

1. **Unpack and Clean:** Carefully remove all packaging materials. Wash the glass carafe, permanent filter, and water reservoir in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
2. **Position the Coffee Maker:** Place the coffee maker on a flat, stable, heat-resistant surface near an electrical outlet. Ensure adequate clearance around the unit.
3. **Fill the Water Tank:** Remove the water tank cover. Fill the removable water reservoir with fresh, cold water up to the desired level (max 10 cups). Replace the water tank cover.
4. **Add Coffee Grounds:** Place the permanent filter into the funnel. Add your desired amount of coffee grounds into the filter. For optimal flavor, use the integrated scoop.
5. **Place Carafe:** Ensure the glass carafe is correctly positioned on the warming plate.
6. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet. The display will illuminate.



Step 1: Fill the Water Tank



Step 2: Add Coffee Powder into the Filter



Step 3: Place Carafe on the Warming Plate



Step 4: One Touch Brewing

Image: A visual guide showing the four main setup steps: filling the water tank, adding coffee powder to the filter, placing the carafe on the warming plate, and initiating one-touch brewing.

OPERATING INSTRUCTIONS

Setting the Clock

To set the current time, press the 'h' button for hours and 'min' button for minutes on the touch screen. The display will show the set time. The clock operates in a 24-hour format.

Brewing Coffee

1. Ensure the water tank is filled and coffee grounds are in the filter.
2. Press the brew button (often indicated by a coffee bean icon) to start brewing. The indicator light will illuminate.
3. The coffee maker will automatically stop brewing once the water tank is empty.

Adjusting Coffee Strength

The coffee maker offers two strength options: regular and strong. Press the strength button (often indicated by a coffee cup icon) on the touch screen to toggle between the two levels. Select your preferred strength before starting the brew cycle.

2 Coffee Strength Options



Image: The coffee maker's display showing options for Classic Strength and Rich Strength coffee, allowing users to customize their brew.

24-Hour Programmable Timer

To set a delayed brew time:

1. Prepare the coffee maker with water and coffee grounds as usual.
2. Press the '24h' button. The display will show a blinking time.
3. Use the 'h' and 'min' buttons to set your desired brew start time.
4. Press the '24h' button again to confirm. The indicator light will show that the timer is set. The coffee maker will automatically start brewing at the programmed time.

24-Hour Programmable Advance Brew

Wake Up with the Aroma of Fresh Coffee



Image: The coffee maker highlighting its 24-hour programmable advance brew feature, allowing users to wake up to fresh coffee.

Keep Warm Function

After brewing, the coffee maker's warming plate will automatically keep the coffee hot for up to 2 hours. After 2 hours, the coffee maker will automatically shut off for safety and energy saving.

Keep Coffee Hot for 2 Hours

Before Auto Shut Off



Image: The coffee maker with a visual representation of its warming plate keeping coffee hot for up to 2 hours before automatic shut-off.

Auto Pause Feature

The coffee maker features an auto-pause function that allows you to temporarily remove the carafe to pour a cup of coffee before the brewing cycle is complete. The brewing will pause for approximately 30 seconds and resume once the carafe is returned to the warming plate. Do not remove the carafe for longer than 30 seconds to prevent overflow.

A Must-Have for Coffee Enthusiast



Image: The coffee maker illustrating its auto-pause feature, allowing users to pour a cup within 30 seconds during the brewing process.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

Daily Cleaning

- **Carafe and Filter:** After each use, wash the glass carafe and reusable permanent filter in warm, soapy water. Rinse thoroughly and dry. These parts are also dishwasher safe (top rack only).
- **Exterior:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling (Monthly or as Needed)

Mineral deposits from water can build up over time, affecting performance. The coffee maker features an auto-clean function indicator. After a couple of months of use, the 'cleaning' light will flash to remind you to descale the coffee maker.

1. Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio).
2. Place an empty carafe on the warming plate.
3. Press and hold the 'clean' button (often indicated by a water droplet icon) for 3 seconds to start the descaling cycle.
4. The coffee maker will run a cleaning cycle. Once complete, discard the vinegar solution.
5. Run 2-3 cycles with fresh, clean water to rinse out any remaining vinegar residue.

Easy to Clean

Removable Water Tank and Filter Basket



After a couple months of use, the "cleaning" light will flash to remind you descale the coffee maker.



Image: The coffee maker disassembled to show the removable water tank and filter basket, emphasizing ease of cleaning. A note indicates the 'cleaning' light will flash to remind users to descale.

TROUBLESHOOTING

• Coffee Not Brewing:

- Ensure the coffee maker is plugged in and the power outlet is functional.
- Check if the water reservoir is filled with water.
- Verify that the carafe is correctly placed on the warming plate.
- If a delayed brew timer is set, ensure the current time is accurate and the timer is activated.

• Coffee Tastes Weak/Too Strong:

- Adjust the amount of coffee grounds used.
- Utilize the coffee strength selection feature (regular/strong).
- Ensure the water filter (if applicable) is clean or replaced.

• Water Overflowing:

- Do not overfill the water reservoir beyond the 'MAX' line.
- Ensure the carafe is properly seated and not removed for too long during the auto-pause function.

• 'Cleaning' Light Flashing:

- This indicates it's time to descale the coffee maker. Follow the descaling instructions in the Maintenance section.

SPECIFICATIONS

Feature	Detail
Brand	Electactic
Model Name	Drip Coffee Maker
Model Number	CM1443A-UL
Color	Black
Product Dimensions	6.54"D x 12.68"W x 12.99"H
Item Weight	5.17 pounds
Capacity	10-Cup (55oz / 1.5 Liters)
Special Features	Adjustable Brew Strength, Auto Clean Function, Auto Shut-Off, Programmable, Removable Tank
Filter Type	Reusable
Operation Mode	Fully Automatic
Voltage	120V

WARRANTY AND SUPPORT

Electactic provides a limited warranty for this product against defects in material and workmanship under normal use. Please refer to the product packaging or contact customer service for specific warranty terms and conditions.

For any questions regarding missing parts, damaged products, product assembly, operation, or warranty claims, please contact Electactic customer service. Phone numbers provided in the original product manual are: 213-4467172 or 661-4358826.

Please retain your purchase receipt as proof of purchase for warranty purposes.