

[Manuals.plus](#) /

› [CHROX](#) /

› CHROX H96 MAX M7 Android 13.0 TV Box User Manual

CHROX

CHROX H96 MAX M7 Android 13.0 TV Box User Manual

Model: H96 MAX M7 | Version: 1.0

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your CHROX H96 MAX M7 Android 13.0 TV Box. Please read this manual carefully before using the device to ensure proper functionality and safety. The CHROX H96 MAX M7 is a versatile multimedia device designed to transform your television into a smart entertainment hub, supporting 8K/4K video playback, dual-band Wi-Fi, and Bluetooth connectivity.

SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the device or personal injury:

- Handle the device with care to avoid drops and impacts.
- Ensure the product is securely assembled before use.
- Do not expose the device to water, moisture, or extreme temperatures.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Keep the device away from heat sources and direct sunlight.

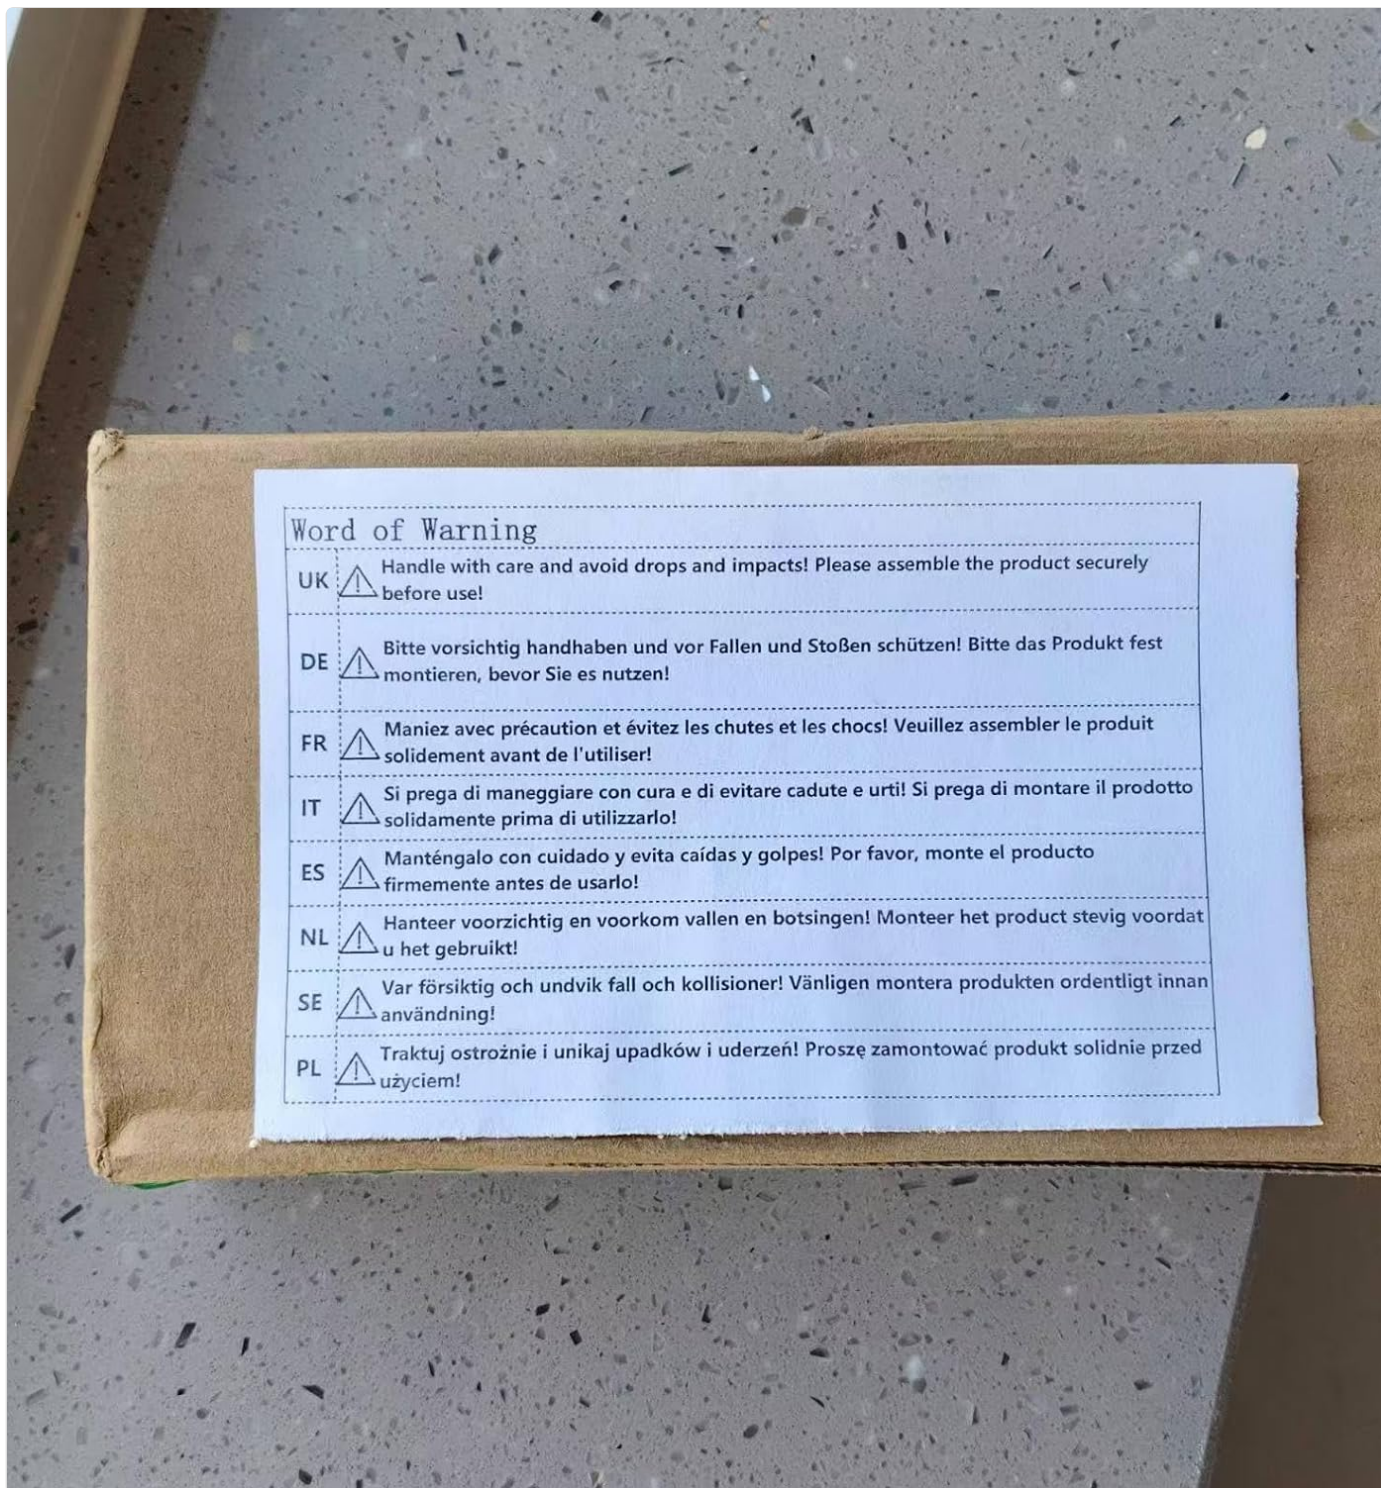


Image: Multilingual warning label emphasizing careful handling and secure assembly.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x CHROX H96 MAX M7 TV Box
- 1 x Remote Control
- 1 x HD Cable (HDMI)
- 1 x Power Adapter
- 1 x User Manual (this document)

PACKAGE CONTENTS




HOME THEATRE



REMOTE CONTROLS



PACKAGING BOX

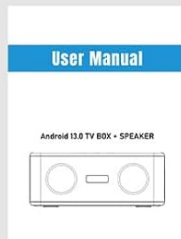

MANUAL



HD CABLE



POWER ADAPTER

Image: All components included in the CHROX H96 MAX M7 package.

PRODUCT OVERVIEW

The CHROX H96 MAX M7 TV Box features a compact design with various ports for connectivity. Familiarize yourself with the device's layout:



Image: The CHROX H96 MAX M7 TV Box and its accompanying remote control.

Ports and Interfaces:

- **USB 3.0:** 1 port for high-speed data transfer.
- **USB 2.0:** 1 port for standard connectivity.
- **HDMI 2.0a:** For connecting to your TV or display, supporting 4K@60Hz output.
- **AV Port:** For older televisions or audio output.
- **Micro SD Card Reader:** For expanding storage.
- **DC 5V/2.5A Power Input:** For connecting the power adapter.
- **LAN Ethernet:** 10/1000M standard RJ-45 port for wired network connection.
- **SPDIF:** For digital audio output.

SETUP GUIDE

1. Connecting to Your Television

1. Connect one end of the provided HD Cable (HDMI) to the HDMI port on the CHROX TV Box.

2. Connect the other end of the HDMI cable to an available HDMI input port on your television or display. Note the HDMI input number (e.g., HDMI 1, HDMI 2) for later selection.

2. Powering On the Device

1. Connect the power adapter to the DC 5V/2.5A input port on the CHROX TV Box.
2. Plug the power adapter into a wall outlet.
3. The device will automatically power on, or you may need to press the power button on the remote control.

3. Initial Setup and Network Configuration

1. Turn on your television and select the correct HDMI input source using your TV's remote control.
2. Follow the on-screen prompts for initial setup, which typically include selecting your language, time zone, and connecting to a network.
3. For Wi-Fi connection: Select your Wi-Fi network from the list, enter the password, and confirm.
4. For wired Ethernet connection: If an Ethernet cable is connected, the device should automatically detect the network.

When used as a TV BOX

- ① Press the remote control on/off key to enter AUX-in mode, the Green indicator light is on
- ② Green light is always on, the TV BOX can be used normally



Image: The CHROX H96 MAX M7 TV Box connected to a television, demonstrating its use as a TV box.

OPERATING INSTRUCTIONS

Navigating the Interface

Use the provided remote control to navigate the Android 13.0 interface. The directional buttons allow you to move between icons and menus, while the "OK" button confirms selections. The "Back" button returns to the previous screen, and the "Home" button takes you to the main screen.

Using as a TV Box

Once connected to your TV and powered on, the device functions as a smart TV box. You can access pre-installed applications, download new apps from the Google Play Store, browse the internet, and stream content. The green indicator light on the device signifies that the TV Box function is active and operating normally.

VERSATILE COMPATIBILITY

When used as a TV box, sound is output through the device and can be connected to a monitor.



Image: The CHROX H96 MAX M7 TV Box connected to a computer monitor, showcasing its ability to output sound through the device and connect to various displays.

Using as a Bluetooth Speaker

The CHROX H96 MAX M7 can also function as a standalone Bluetooth speaker. To activate this mode:

1. Ensure the device is connected to a power supply.
2. Press the power/on-off key on the remote control to enter AUX-in mode. The blue indicator light will illuminate, indicating it has entered Bluetooth pairing mode.
3. On your mobile phone or other Bluetooth-enabled device, search for "H96 MAX" or a similar device name in the Bluetooth settings.
4. Select the device to pair. Once paired, you can play music from your mobile device through the CHROX H96 MAX M7 speaker.

When used as a speaker

① Access to power supply

② Blue light on, enter Bluetooth mode
Music playback with mobile phone control



Image: The CHROX H96 MAX M7 operating as a Bluetooth speaker, receiving audio from a smartphone.

CAN BE USED AS A SPEAKER

BT5.1 Music can be played using mobile phone controlled devices

0-10m
unfettered



Image: The CHROX H96 MAX M7's Bluetooth 5.1 capability, allowing music playback from mobile devices within a 0-10 meter range.

Media Playback

The device supports a wide range of media formats and resolutions, including 8K and 4K video playback with H.265 decoding for efficient streaming. You can play media from connected USB drives, Micro SD cards, or network sources.



Image: Key features of the H96 Max M7, including Android 13, 8K video support, Rockchip RK3528 processor, Bluetooth 5.1, and dual-band Wi-Fi.

MAINTENANCE

To ensure the longevity and optimal performance of your CHROX H96 MAX M7 TV Box, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure the device is placed in a well-ventilated area to prevent overheating. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight.
- **Software Updates:** Periodically check for and install system updates to ensure the latest features and security patches.

TROUBLESHOOTING

If you encounter issues with your CHROX H96 MAX M7 TV Box, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Device not turning on	Power adapter not connected or faulty; power outlet issue.	Ensure the power adapter is securely connected to the device and a working power outlet. Try a different outlet.
No display on TV	Incorrect HDMI input selected; loose HDMI cable; TV Box not powered on.	Verify the TV is on the correct HDMI input. Check HDMI cable connections. Ensure the TV Box is powered on.
Wi-Fi connection issues	Incorrect password; router too far; network interference.	Double-check Wi-Fi password. Move the device closer to the router. Restart your router and the TV Box.
Remote control not responding	Low battery; obstruction; pairing issue.	Replace batteries. Ensure no obstructions between remote and device. Re-pair the remote if applicable (refer to device settings).
Slow performance/App crashes	Too many apps running; low storage; outdated software.	Close background apps. Clear cache/data for problematic apps. Check for system updates. Consider a factory reset if issues persist (backup data first).

SPECIFICATIONS

Detailed technical specifications for the CHROX H96 MAX M7 Android 13.0 TV Box:

Feature	Detail
Operating System	Android 13.0
CPU	RK3528 Quad-Core 64bit Cortex-A53
GPU	Penta-Core Mali-450
SDRAM	4GB (as per product variant)
ROM FLASH	32GB (as per product variant)
Wi-Fi	2.4G/5G Dual-band WIFI, 802.11 a/b/g/n/ac/ax (WiFi 6)
Bluetooth	BT 5.0
LAN Ethernet	10/1000M Standard RJ-45
USB Ports	1x USB 3.0, 1x USB 2.0
HDMI Output	HDMI 2.0a for 4K@60Hz (Supports 8K/4K video)
Video Decoder Support	4K VP9, H.265/H.264, 1080P (VC-1, MPEG-1/2/4, VP6/8)
HDR Support	HDR10
Media Formats	Avi/Ts/Vob/Mkv/Mov/ISO/wmv/asf/flv/dat/mpg/mpeg
Music Formats	MP3/WMA/AAC/WAV/OGG/DDP/HD/FLAC/APE

Feature	Detail
Photo Formats	HD JPEG/BMP/GIF/PNG/TIFF
Languages	English/French/German/Spanish/Italian etc. multilateral languages
Model Number	4GB32GB-66167808

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided by your retailer or visit the official CHROX support website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 CHROX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question