

- Manuals.plus /
- › MIRASTON /
- › MIRASTON 4.5-Quart Compact Air Fryer Instruction Manual

MIRASTON 4.5Quart Compact Air Fryer

MIRASTON 4.5-Quart Compact Air Fryer Instruction Manual

Model: 4.5Quart Compact Air Fryer (Touchscreen Type)

- Overview
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support
- Safety Information
- Product

INTRODUCTION

Thank you for choosing the MIRASTON 4.5-Quart Compact Air Fryer. This appliance utilizes 360° hot air circulation technology to cook a variety of foods with less oil, providing crispy and tender results. This manual provides essential information for safe operation, maintenance, and optimal use of your new air fryer.



Image: MIRASTON 4.5-Quart Compact Air Fryer.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance to prevent personal injury or property damage. Keep this manual for future reference.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Always unplug the appliance when not in use and before cleaning.
- Do not block any air vents.
- Do not place the appliance against a wall or other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches above the appliance.

- Hot air is released through the air outlet openings; keep your hands and face at a safe distance.
- The basket and accessories become hot during use. Always use oven mitts or the handle to remove them.

PRODUCT OVERVIEW

The MIRAston 4.5-Quart Compact Air Fryer features a smart touchscreen interface and a spacious cooking basket. Its compact design makes it suitable for various kitchen sizes.



Image: Air Fryer with various cooked foods, illustrating its versatility.

Key Components:

- **Main Unit:** Houses the heating element and control panel.
- **Control Panel:** Smart touchscreen with digital display for time, temperature, and preset functions.
- **Frying Basket:** 4.5-quart capacity, non-stick, and dishwasher-safe.
- **Crisper Rack:** Removable, non-stick, and dishwasher-safe, designed to allow air circulation for even cooking.

- **Handle:** Cool-to-touch handle for safe removal of the frying basket.



Image: Product dimensions for placement reference.

SETUP AND FIRST USE

Unboxing:

Carefully remove all packaging materials, stickers, and labels from the air fryer. Ensure all components are present: main unit, frying basket, and crisper rack.

Initial Cleaning:

Before first use, clean the frying basket and crisper rack with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the main unit with a damp cloth. Do not immerse the main unit in water.

Placement:

Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances, ensuring adequate ventilation (at least 4 inches clearance on all sides and top).

Preheating (Optional):

For best results, preheat the air fryer for 3-5 minutes before adding food. This helps achieve optimal crispiness.

Video: Demonstrates unboxing, initial setup, and basic operation of the air fryer.

OPERATING INSTRUCTIONS

Power On/Off:

Plug the air fryer into a grounded electrical outlet. The power button will illuminate. Press the power button to turn the appliance on or off.

Adjusting Time and Temperature:

Use the 'TEMP/TIME' button to toggle between temperature and time settings. Use the '+' and '-' buttons to adjust the values. The temperature range is 80°F to 400°F.

Using Preset Functions:

The air fryer features a smart touchscreen with several preset cooking programs for common foods. Simply tap the icon corresponding to your desired food (e.g., fries, shrimp, fish, steak, chicken, bacon, vegetables, toast, dehydrate). The air fryer will automatically set the optimal time and temperature. You can adjust these settings manually after selecting a preset if needed.

8 in 1

ONE-TOUCH DIGITAL CONTROLS



FRENCH FRIES



CHICKEN WING



SHRIMP



CAKE



EGG TART



MEAT



FISH



NUT

Image: Close-up of the touchscreen control panel with various food presets.

Shake Reminder:

For certain recipes, the air fryer will provide a 'Shake' reminder during the cooking cycle to ensure even cooking and crispiness. Simply remove the basket, shake the contents, and reinsert the basket to resume cooking.

Pause/Resume:

The air fryer automatically pauses when the basket is removed and resumes when it is reinserted. You can also manually pause/resume cooking using the play/pause button on the control panel.

Video: Demonstrates cooking an orange cake in the air fryer, showcasing its baking capabilities.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

Cleaning the Frying Basket and Crisper Rack:

The non-stick, BPA-free frying basket and crisper rack are dishwasher-safe. For manual cleaning, wash them with hot water, dish soap, and a non-abrasive sponge. Ensure all food residue is removed.



Image: Air fryer basket and rack being placed in a dishwasher for easy cleaning.

Cleaning the Main Unit:

Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water. Clean the interior with a damp cloth and mild detergent if necessary, ensuring it is completely dry before next use.

Storage:

Before storing, ensure the air fryer is unplugged, clean, and completely dry. Store it in a cool, dry place.

TROUBLESHOOTING

- If you encounter any issues with your air fryer, please refer to the following common problems and solutions:
- **Appliance does not turn on:** Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functioning.
 - **Food is not cooked evenly:** Ensure the basket is not overloaded. Shake or flip food halfway through cooking. Adjust cooking time or temperature as needed.
 - **Food is not crispy:** Ensure food is not overcrowded in the basket. Lightly spray or brush food with oil for extra crispiness.
 - **White smoke coming from the appliance:** This may be caused by grease from previous use. Clean the basket and crisper rack thoroughly. If cooking fatty foods, place a piece of aluminum foil under the crisper rack to catch excess oil.
 - **Air fryer pauses unexpectedly:** Ensure the frying basket is fully inserted into the main unit. The appliance has a safety feature that pauses operation if the basket is not correctly seated.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand	MIRASTON
Model	4.5Quart Compact Air Fryer (Touchscreen Type)
Capacity	4.5 Quarts
Output Wattage	1400 Watts
Voltage	120 Volts
Product Dimensions	12.5"D x 10"W x 12"H
Item Weight	7.3 Pounds
Special Features	Automatic Shut-Off, Temperature Control, Timer
Material	Plastic, Stainless Steel
Nonstick Coating	Yes
Dishwasher Safe Parts	Basket and Rack

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official MIRASTON website. Keep your proof of purchase for warranty claims.

Customer Service: For any questions or concerns, please feel free to contact us. We are committed to providing excellent customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DK774WJ4>

More documents and user manuals: <https://manuals.plus/>