

Soohow TS008

Soohow Mid Century Modern TV Stand User Manual

Model: TS008

Safety	Contents	Assembly	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty
& Support								

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Limit:** Do not exceed the maximum weight limit of **250 lbs (113 kg)** on the TV stand. Overloading can cause the unit to collapse, leading to serious injury or property damage.
- **Assembly:** Ensure proper assembly by carefully following the provided instructions. All parts must be securely fastened before use.
- **Stability:** Place the TV stand on a flat, level, and stable surface. Uneven surfaces can compromise stability.
- **Children:** Keep children away from the assembly area. Small parts can be a choking hazard. Do not allow children to climb on or play with the TV stand.
- **Tools:** Use only the tools specified in the assembly instructions.

Product Details

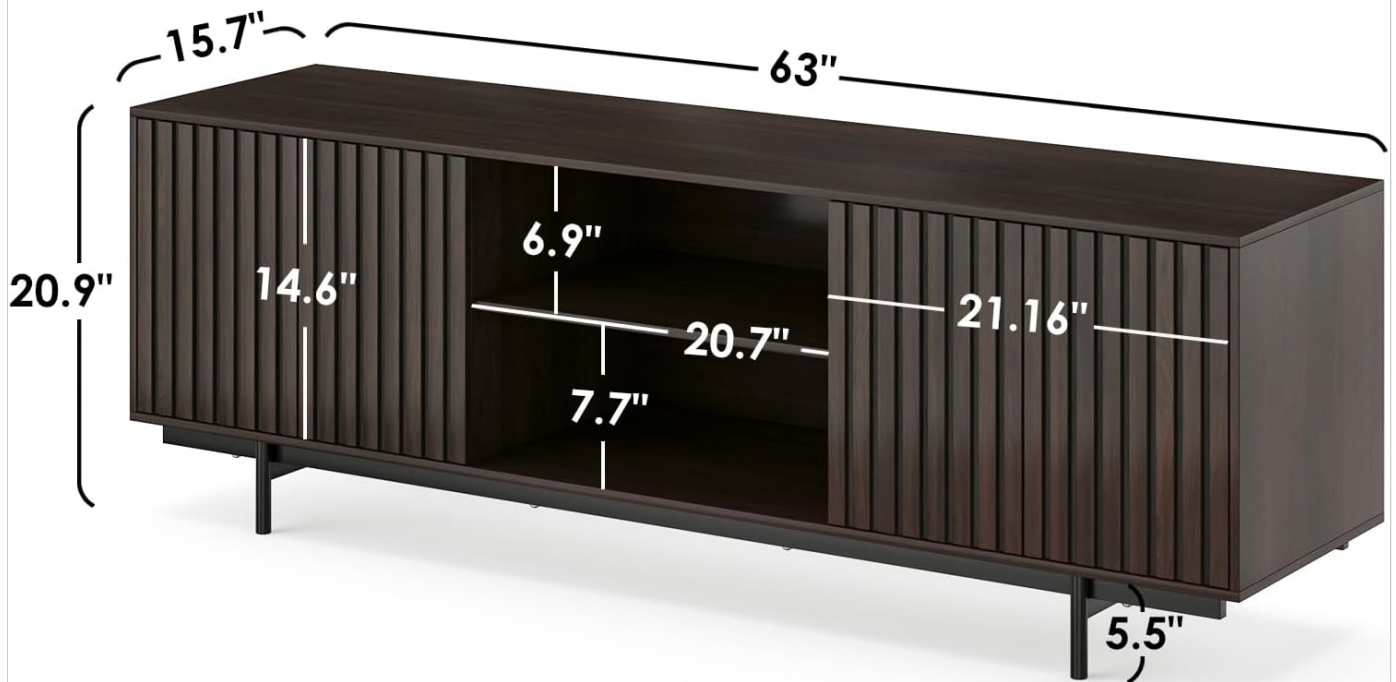


Image 1.1: Product dimensions and maximum weight capacity of 250 lbs. The stand measures 63 inches wide, 20.9 inches high, and 15.7 inches deep.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Fluted TV Stand components
- Installation Kit (hardware)
- Installation Tool

3. ASSEMBLY INSTRUCTIONS

Assembly is required for this TV stand. A detailed instruction manual and all necessary installation tools are included in the package. Please follow the step-by-step guide provided with your product for a smooth assembly process.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify each part using the provided parts list in the separate instruction manual.
3. Follow the sequential steps in the manual to connect the pieces using the supplied hardware and tools.
4. Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. Once assembled, gently lift and place the TV stand in its desired location. Do not drag.

Video 3.1: Official product video demonstrating the Soohow Mid Century Modern TV Stand, including its features and aesthetic.

4. SETUP

Proper placement and setup ensure optimal performance and safety of your TV stand.

- **Location:** Choose a suitable location in your living room or bedroom that is flat and stable. Avoid direct sunlight or areas with high humidity.
- **TV Placement:** This TV stand is designed to accommodate TVs up to 75 inches. Ensure the TV base fits securely on the top surface and does not overhang excessively.
- **Cable Management:** Utilize the open back design of the central compartments for easy cable routing and management to keep your entertainment area tidy.

Suitable for TV size up to 75"

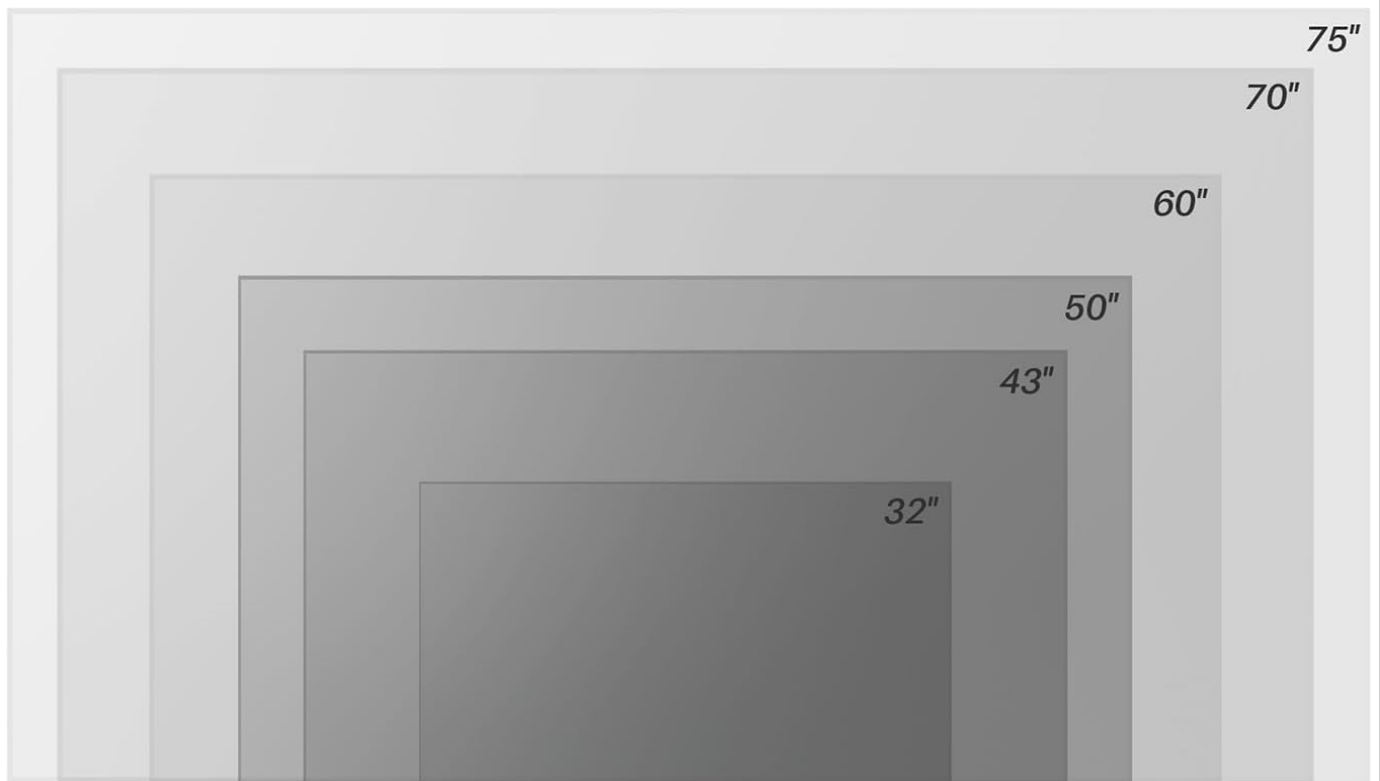


Image 4.1: Visual guide indicating the TV stand is suitable for TV sizes up to 75 inches.

5. OPERATING INSTRUCTIONS

The Soohow TV stand features convenient storage and a unique door mechanism.

- **Pop-Up Door Design:** The side compartments feature a pop-up door mechanism. To open, gently push the door inward. It will pop out slightly, allowing you to slide it open. To close, slide the door back into place and push gently until it clicks and sits flush.
- **Adjustable Shelves:** The three spacious compartments include removable shelves. These shelves can be adjusted or removed to customize storage space for various items such as media devices, books, or decorative objects.
- **Storage Capacity:** Use the central open shelves for frequently accessed items or display, and the side compartments for concealed storage.



Image 5.1: Demonstration of the Pop-Up Door Design. Lightly press the door, and it will pop out for easy access.



Green plant



Books



Photo frame



Small ornament



Game console



Set-top box



Router



Remote control

Image 5.2: Example of storage space utilization for media devices and other items.

6. MAINTENANCE

To ensure the longevity and appearance of your Soohow TV stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the wood finish.
- **Spills:** Clean up spills immediately to prevent staining.
- **Protection:** While the stand is scratch-resistant, use coasters or protective pads under items that might scratch the surface.
- **Inspection:** Periodically check all fasteners and tighten them if necessary to maintain structural integrity.



Rustic Slated Door



Smooth / Waterproof
/ Scratch-Resistant



Push-to-Open Door

Image 6.1: Details showcasing the material attributes: rustic slatted door, smooth, waterproof, and scratch-resistant finish.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Missing Parts or Damage:** If you notice any damage or missing parts upon receiving your TV stand, please contact our dedicated support team immediately using the instructions provided in your manual.
- **Unstable Stand:** Ensure the stand is placed on a level surface. Check all assembly screws and tighten them if loose.
- **Doors Not Operating Smoothly:** Verify that the door tracks are clear of debris. Ensure the pop-up mechanism is correctly aligned.
- **Difficulty with Assembly:** Re-read the assembly instructions carefully. If issues persist, contact customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Soohow

Model Number	TS008
Color	Light Walnut
Material	Wood, Metal
Product Dimensions (L x W x H)	63" x 15.7" x 20.9" (160 cm x 40 cm x 53 cm)
Weight Capacity	250 lbs (113 kg)
Number of Doors	2 (Pop-Up Design)
Number of Shelves	3 (Removable/Adjustable)
Number of Compartments	3
Recommended TV Size	Up to 75 inches
Features	Heavy Duty, Rust Resistant, Scratch Resistant, Stain Resistant
Assembly Required	Yes
Product Care	Wipe with Damp Cloth

9. WARRANTY AND SUPPORT

Soohow is committed to the quality of this TV stand. We offer a 30-day easy return policy.

- Quality Assurance:** If you encounter any issues such as damage or missing parts upon delivery, please contact our customer support team immediately.
- Customer Support:** Our dedicated support team is ready to assist you and ensure you receive prompt and effective assistance. Refer to the contact information provided in your product packaging or on the Soohow official website.
- Returns:** This product is eligible for 30-day easy returns. Please refer to the return policy details provided at the point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DK77HTXX>

More documents and user manuals: **<https://manuals.plus/>**