

IR Replacement Remote

Instruction Manual: IR Replacement Remote Control

For SQQBZZ QKK JEKERO 1703 Portable DVD DISC Player

PRODUCT OVERVIEW

This document provides essential information for the IR Replacement Remote Control, designed for use with SQQBZZ QKK JEKERO 1703 Portable DVD DISC Players. This remote serves as a direct infrared replacement. Please ensure your original remote matches the appearance of this replacement for compatibility.



Front view of the IR Replacement Remote Control, showing all buttons and their labels. The remote is black with white and blue buttons.



An angled view of the remote control, highlighting its ergonomic design and button layout from a slightly elevated perspective.



A different angled view of the remote control, providing another perspective of its button arrangement and overall shape.

SETUP

This replacement remote control does not require any programming or setup. It is designed to function immediately upon battery installation.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the release tab (if present) to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Rear view of the remote control, showing the battery compartment cover in its closed position.



An angled rear view of the remote control, providing a different perspective of the battery compartment area.



A third angled rear view of the remote control, showing the contours and design of the back casing.



The remote control with its battery compartment open, revealing the empty slots for two AAA batteries.



An angled view of the remote control with the battery compartment open, showing the battery slots and the detached cover.

Once batteries are installed, point the remote control directly at your SQQBZZ QKK JEKERO 1703 Portable DVD DISC Player. Press the desired function button to operate the player.

Key Functions Overview

Button	Function
POWER	Turns the DVD player on or off.
MUTE	Mutes or unmutes the audio output.
SUBTITLE	Cycles through available subtitle tracks.
USB	Switches input to USB mode.
ZOOM	Adjusts the screen zoom level.
REPEAT	Repeats the current track or chapter.
A-B	Repeats a specific section between points A and B.
LED ON/OFF	Controls the LED indicator on the player.
SETUP	Accesses the system setup menu.
PLAY	Starts or resumes playback.
STOP	Stops playback.
OK	Confirms selections in menus.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
BACK	Returns to the previous menu or screen.
MENU	Accesses the main menu.
MODE	Switches between different playback modes.
PROGRAM	Enters program mode for custom playback sequences.
Number Pad (0-9, 10+)	Direct input for track numbers or time.
VOL+ / VOL-	Adjusts the volume up or down.
SLOW	Initiates slow-motion playback.
Fast Forward / Rewind	Fast forwards or rewinds playback.
Previous / Next Track	Skips to the previous or next track/chapter.
COPY	Initiates copying function (if supported by player).
PBC	Activates Playback Control (PBC) for VCDs.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the DVD player's infrared sensor.
 - Confirm the remote is pointed directly at the player.
- **Some functions not working:**
 - This is an IR replacement remote. While it is designed to be compatible, some advanced or specific functions of your original remote may not be fully replicated.
 - Verify that your DVD player model (SQQBZZ QKK JEKERO 1703) is indeed compatible with this replacement remote.

SPECIFICATIONS

Feature	Detail
Product Type	IR Replacement Remote Control
Compatible Models	SQQBZZ QKK JEKERO 1703 Portable DVD DISC Player
Power Source	2 x AAA Batteries (not included)
Color	Black
Manufacturer	Easytry
ASIN	B0DK77TP4B

WARRANTY AND SUPPORT

This product is a replacement remote control. Please refer to the original product's documentation for warranty information regarding your SQQBZZ QKK JEKERO 1703 Portable DVD DISC Player.

For support regarding this replacement remote, please contact the seller or manufacturer, Easytry, directly. No specific warranty information for the remote itself is provided by the seller.

Note: This remote is an infrared replacement. It may not offer all the exact same functions as your original remote. Please ensure your current remote matches the appearance of this replacement before purchase.