

[Manuals.plus](#) /

› [WORKPRO](#) /

› WORKPRO X 20V 2-in-1 Electric Hedge Trimmer User Manual

WORKPRO WX125332

WORKPRO X 20V 2-in-1 Electric Hedge Trimmer User Manual

Model: WX125332

INTRODUCTION

Thank you for choosing the WORKPRO X 20V 2-in-1 Electric Hedge Trimmer. This versatile tool is designed for efficient grass trimming and hedge sculpting, powered by a 20V 2.0Ah battery with a convenient PowerBank function. Please read this manual carefully before operation to ensure safe and effective use of your new tool. Keep this manual for future reference.

General Safety Warnings

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and sturdy footwear, during operation.
- Keep children and bystanders away from the operating area.
- Ensure the work area is clear of debris, wires, and other obstacles.
- Do not operate the tool in wet conditions or near flammable liquids or gases.
- Before performing any maintenance, cleaning, or blade changes, always remove the battery.
- Inspect the blades for damage before each use. Replace damaged blades immediately.

COMPONENTS INCLUDED

Your WORKPRO X 20V 2-in-1 Electric Hedge Trimmer package includes the following items:

- Main Unit (Hedge Trimmer Body)
- 20V 2.0Ah Lithium-ion Battery with Digital Display and PowerBank Function
- Grass Trimming Blade (14.5 cm cutting width)
- Hedge Trimming Blade (20 cm cutting length)
- Type-C Charging Cable

- Storage Bag
- User Manual



Figure 1: Overview of the WORKPRO X 20V 2-in-1 Electric Hedge Trimmer with both grass and hedge trimming blades, and the battery unit.

SETUP

1. Battery Charging

The 20V 2.0Ah battery features a digital display and supports Type-C fast charging. A 30W PD charger (not included) is recommended for optimal charging speed. The battery can also function as a power bank for other devices via its USB-C and USB-A outputs.

- Connect the provided Type-C charging cable to the battery's Type-C port and to a compatible USB power

adapter (not included).

- The digital display on the battery will show the charging progress. A full charge typically takes approximately 1.5 hours.
- To use as a power bank, connect your device to the USB-C or USB-A output ports on the battery.



Figure 2: The 20V 2.0Ah battery featuring a digital display and USB-C/USB-A ports for charging and PowerBank functionality.

2. Blade Installation and Removal

The tool is designed for quick and easy blade changes between the grass trimming blade and the hedge trimming blade.

1. **Removal:** Ensure the battery is removed. Press the two release buttons located on the sides of the blade housing. Gently pull the installed blade forward to detach it from the main unit.
2. **Installation:** Align the desired blade (grass or hedge) with the slot on the main unit. Push the blade firmly into place until you hear a click, indicating it is securely locked. Ensure the release buttons pop back out.

Your browser does not support the video tag.

Video 1: Demonstrates the quick and easy process of changing blades on the WORKPRO X 2-in-1 Electric Hedge Trimmer.

OPERATING INSTRUCTIONS

1. Safety Features: Double Lock System

The WORKPRO X hedge trimmer is equipped with a double-switch safety system to prevent accidental startup. To operate the tool, you must simultaneously press both the safety lock button (on top of the handle) and the trigger switch (under the handle).



Figure 3: Illustration of the double-switch safety system, requiring both buttons to be pressed for operation.

2. Grass Trimming

Attach the grass trimming blade for precise cutting of lawn edges and small areas. The grass blade offers a cutting width of 14.5 cm.

- Ensure the grass trimming blade is securely installed and the battery is inserted.
- Hold the tool firmly with both hands, if applicable, or one hand if designed for single-hand use, ensuring a stable grip.
- Activate the double-switch safety system and guide the blade along the grass edges or desired areas.
- Move the tool slowly and steadily for a clean cut.

3. Hedge Trimming / Sculpting

Attach the hedge trimming blade for shaping hedges, shrubs, and bushes. This blade provides a cutting length of 20 cm and can cut branches up to 8 mm in diameter.

- Ensure the hedge trimming blade is securely installed and the battery is inserted.
- Activate the double-switch safety system.
- Guide the blade along the hedge, maintaining a consistent angle for an even trim.
- Avoid cutting branches thicker than 8 mm to prevent damage to the blades and motor.
- Be mindful of hard objects such as stones or metal fences, as these can dull or damage the blades.

TAILLE-HERBES

Largeur de coupe maximale de 145 mm

MODE DE COUPE 2-IN-1

CISAILLE SCULPTE-HAIE

Longueur de coupe maximale de 200 mm

Diamètre de coupe maximal de 8 mm

Figure 4: The tool demonstrating its 2-in-1 functionality for both grass and hedge trimming.

4. Optimal Performance

The tool features a high-performance motor operating at 1200 rpm, providing efficient cutting. The 2.0Ah battery offers approximately 45 minutes of runtime on a full charge, depending on the load.



Figure 5: Visual representation of the tool's motor performance and battery duration.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your tool.

- **Cleaning:** After each use, remove the battery and carefully clean the blades and housing. Use a brush to remove debris and a damp cloth to wipe down surfaces. Do not use harsh chemicals or abrasive cleaners.
- **Blade Care:** Periodically apply a light machine oil to the blades to prevent rust and ensure smooth operation. Store blades with their protective covers when not in use.
- **Storage:** Store the tool and its components in the provided storage bag, in a dry, secure place, out of reach of children. Ensure the battery is partially charged (around 50%) for long-term storage to prolong its lifespan.



Figure 6: The included storage bag, suitable for organizing the tool and its accessories.

TROUBLESHOOTING

If you encounter issues with your WORKPRO X hedge trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Tool does not start	Battery not charged or improperly inserted; Safety lock not engaged correctly.	Ensure battery is fully charged and securely inserted. Press both the safety lock and trigger simultaneously.

Problem	Possible Cause	Solution
Poor cutting performance	Dull or dirty blades; Cutting material too thick; Battery low.	Clean and lubricate blades. Sharpen or replace blades if dull. Do not attempt to cut material exceeding 8mm. Recharge battery.
Excessive vibration or noise	Loose blade; Damaged blade; Internal issue.	Check if the blade is securely installed. Inspect blade for damage and replace if necessary. If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	WX125332
Battery Type	20V 2.0Ah Lithium-ion (included)
Charging Time	Approx. 1.5 hours (with 30W PD charger, not included)
No-Load Speed	1200 rpm
Grass Blade Cutting Width	14.5 cm
Hedge Blade Cutting Length	20 cm
Max. Cutting Diameter (Hedge)	8 mm
Product Dimensions (L x W x H)	26.5 x 7.3 x 15 cm
Weight	3.08 kg
Blade Material	High Carbon Steel
Housing Material	Acrylonitrile Butadiene Styrene (ABS) TPR
Power Source	Battery Powered
Manufacturer	WORKPRO
Country of Origin	China
UPC	820909613749

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the warranty card included with your product or visit the official WORKPRO website. You may also contact your retailer for assistance. Please retain your proof of purchase for any warranty claims.