

Tresses Touch HD396-PK

Tresses Touch HD396-PK Diffuser Hair Dryer User Manual

Model: HD396-PK

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use this appliance in a bathtub or near water.
- Keep the appliance away from heat sources.
- Unplug the appliance from the electrical outlet when not in use.
- Do not use a damaged power cord or plug. If the cord is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid hazards.
- Keep out of reach of children.
- Ensure your hands are dry before plugging in or unplugging the appliance.
- Do not block the air inlet or outlet during operation.
- This appliance is equipped with an ALCI (Appliance Leakage Current Interrupter) safety plug. Test the ALCI plug before each use by pressing the 'TEST' button. The 'RESET' button should pop out. Press 'RESET' to resume operation. If the ALCI trips during use, unplug and allow it to cool before resetting.

2. PRODUCT OVERVIEW

The Tresses Touch HD396-PK is a high-speed ionic hair dryer designed for efficient and gentle hair drying. It features a powerful motor, multiple heat and speed settings, and includes two styling nozzles.

PORTABLE HAIR DRYER



Image 2.1: Tresses Touch HD396-PK Portable Hair Dryer with key dimensions. The dryer measures approximately 7.6 inches in length (barrel), 7.4 inches in height (handle to top), and 1.6 inches in width. The concentrator nozzle is 3.3 inches long and 2.5 inches high. The diffuser is 5.2 inches in diameter and 3.8 inches high.

Key features include:

- **High-Speed Motor:** 150,000 RPM brushless motor for fast drying.
- **Ionic Technology:** Produces 200 million negative ions to reduce frizz and enhance shine.
- **Temperature Control:** Three heat settings (Hot, Warm, Gentle Wind) and a cool shot button.
- **Speed Control:** Two airflow speed settings (High, Medium).
- **Lightweight Design:** Ergonomic and portable for comfortable use.
- **Attachments:** Includes a concentrator nozzle for precise styling and a diffuser for curly and wavy hair.



Image 2.2: The Tresses Touch HD396-PK hair dryer showcasing its features: Constant Temperature, Lightweight Design, Noise Reduction Technology, and Hair Caring benefits.

3. SETUP

1. **Unboxing:** Carefully remove the hair dryer and all accessories from the packaging. Ensure all components are present: hair dryer unit, concentrator nozzle, and diffuser.
2. **Attaching Nozzles:** To attach either the concentrator or diffuser, align the nozzle with the front of the hair dryer barrel and push it firmly into place until it clicks. To remove, gently pull the nozzle off.
3. **Power Connection:** Plug the ALCI safety plug into a standard electrical outlet. Before each use, press the 'TEST' button on the plug, then press 'RESET' to ensure proper function.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Speed Settings

The hair dryer features a power switch integrated with speed control.

- Slide the lower switch to 'OFF' to turn the dryer off.
- Slide the lower switch to 'LOW' for medium airflow speed.
- Slide the lower switch to 'HIGH' for maximum airflow speed.

4.2 Temperature Settings and Cool Shot

The hair dryer offers three temperature settings and a cool shot function.

- Press the upper temperature button to cycle through the heat settings.
- An indicator light will change color to show the current setting:
 - **Blue:** Gentle Wind
 - **Orange:** Warm Wind
 - **Red:** Hot Wind
- To activate the **Cool Shot**, press and hold the temperature button for 3-5 seconds. This provides a burst of cool air to set your style.

THE REVOLUTIONARY SHIFT IN HAIR DRYING



Image 4.1: Close-up of the Tresses Touch HD396-PK hair dryer's control panel, illustrating the heating settings (Red for Hot, Orange for Warm, Blue for Gentle Wind) and speed settings (High, Medium, ON/OFF).

4.3 Using Styling Nozzles

The hair dryer comes with two specialized nozzles for different styling needs:

- **Smoothing Nozzle (Concentrator):** Ideal for precise styling and smoothing straight or wavy hair. Direct the airflow to specific sections of hair while brushing.
- **Diffuser Nozzle:** Designed to enhance natural curls and waves, adding volume and reducing frizz. Use on low speed and gentle heat, gently cupping sections of hair in the diffuser.

2 STYLING NOZZLES TO Make Your Own Style

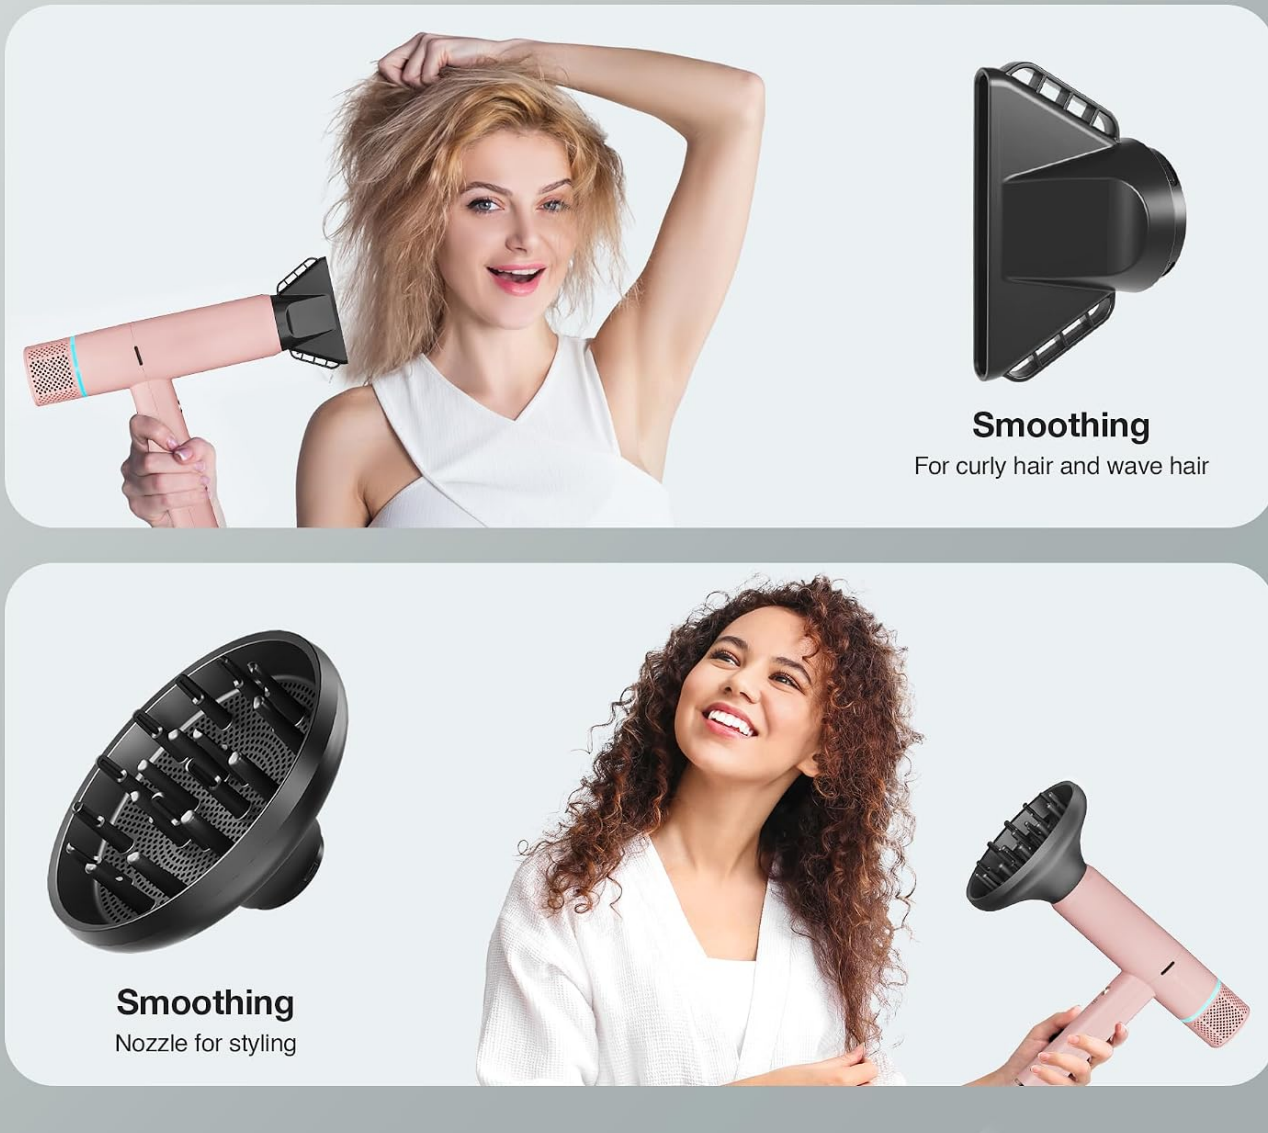


Image 4.2: The Tresses Touch HD396-PK hair dryer shown with its two styling nozzles: a smoothing nozzle for straight and wave hair, and a diffuser nozzle for curly hair.

4.4 Ionic Hair Care

The Tresses Touch HD396-PK hair dryer generates over 200 million high-concentration negative ions. These ions help to:

- Penetrate hair strands to increase smoothness and shine.
- Reduce frizz by up to 50%.
- Prevent hair from drying out, ensuring healthier-looking hair.



Image 4.3: A visual representation of how negative ions work, showing their effect on hair compared to a general hair dryer, resulting in repaired and smoother hair.

5. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the life of your hair dryer.

5.1 Cleaning the Filter Mesh

The hair dryer features a detachable filter mesh to prevent hair from entering the air duct. It is crucial to clean this filter regularly.

1. Ensure the hair dryer is unplugged from the power outlet and has cooled down completely.
2. Locate the rear filter cap. Gently twist or pull to detach the outer filter cap.
3. Remove the washable filter mesh.
4. Clean the filter mesh and filter cap using a soft brush or cloth to remove any accumulated dust, lint, or hair. You may rinse the washable components with water if necessary, ensuring they are completely dry before reassembly.

5. Reattach the filter mesh and cap by aligning them and pushing or twisting until securely in place.

Note: Long press the cool shot button for 3-5 seconds for automatic cleaning of the internal filter.



Image 5.1: An exploded view demonstrating the double safety net and removable filter components of the Tresses Touch HD396-PK hair dryer, including the unremovable filter mesh, washable filter mesh, and washable filter cap.

5.2 General Cleaning

- Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the appliance in water or any other liquid.

6. TROUBLESHOOTING

If you encounter any issues with your Tresses Touch HD396-PK hair dryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power supply; ALCI tripped; Power switch not engaged.	Ensure plug is fully inserted. Press 'RESET' on the ALCI plug. Check power switch position.
Low airflow or overheating.	Blocked air inlet/outlet; Dirty filter.	Unplug the dryer and allow it to cool. Clean the filter mesh as described in Section 5.1. Ensure air vents are clear.
Unusual noise or smell.	Internal malfunction; Foreign object in air path.	Immediately unplug the dryer. Do not attempt to repair. Contact customer support.
ALCI plug trips frequently.	Electrical fault; Water exposure.	Ensure the dryer is not used near water. If the issue persists, discontinue use and consult a qualified electrician or contact customer support.

If the problem persists after attempting these solutions, please contact Tresses Touch customer support for assistance.

7. SPECIFICATIONS

Feature	Specification
Model Number	HD396-PK
Brand	Tresses Touch
Wattage	1600 watts
Voltage	125 volts
Motor Speed	Up to 150,000 RPM
Airflow Speed	36 m/s
Number of Temperature Settings	3 (Hot, Warm, Gentle Wind) + Cool Shot
Number of Speed Settings	2 (High, Medium)
Cord Length	6.56 ft
Product Dimensions	20.5 x 27 x 9.5 cm
Item Weight	363 g (1.21 lbs / 549g as per feature bullets)
Material	Ceramic
Special Features	ALCI Safety Plug, Ionic Technology, Noise Reduction
Included Components	Hair Dryer, Diffuser Nozzle, Smoothing Nozzle

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact Tresses Touch directly through their official website or customer service channels. Please have your model number (HD396-PK) and purchase date available when contacting support.

9. LEGAL DISCLAIMER

Actual product packaging and materials may contain more and different information than what is shown in this manual. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question