

WIITHINK WTB-795S-Black

WIITHINK Cassette Tape Player Recorder Boombox User Manual

Model: WTB-795S-Black (White Variant)



1. PRODUCT OVERVIEW

The WIITHINK Cassette Tape Player Recorder Boombox is a versatile audio device combining vintage appeal with modern functionality. It allows you to enjoy classic cassette tapes, listen to AM/FM/SW radio, stream music via Bluetooth, and play/record audio to USB drives and SD cards. Its portable design and dual power options make it suitable for various environments.

Key Features:

- **Cassette Player & Recorder:** Play your favorite cassette tapes and record audio from the built-in microphone, external sources, or radio directly to cassette.
- **Bluetooth Connectivity:** Wirelessly stream audio from your smartphone, tablet, or other Bluetooth-enabled devices.
- **USB/SD Player & Recorder:** Play MP3, WAV, AAC, WMA files from USB flash drives and SD cards. Easily convert cassette audio to MP3 format on USB/SD.
- **AM/FM/SW Radio:** Enjoy a wide range of radio stations with excellent reception thanks to the long antenna and DSP upgrade chip.
- **Premium 10W Sound:** Equipped with dual 5W speakers for clear, powerful, and full sound quality.
- **AC/DC Dual Power Supply:** Operates on AC power (adapter included) or battery power (batteries not included) for true portability.
- **3.5mm Headphone Jack:** For private listening.

ALL-IN-ONE Cassette Tape Player

- Cassette Player & Recorder
- Bluetooth
- USB Player & Recorder
- AM/FM/SW Radio
- Earphone Jack



Image: The WIITHINK boombox highlighting its all-in-one capabilities including cassette, Bluetooth, USB, radio, and earphone jack.

2. SETUP GUIDE

2.1 Powering On

Your WIITHINK boombox can be powered by either AC electricity or batteries.

- **AC Power:** Connect the included AC power cable to the AC input jack on the back of the unit and plug the other end into a standard wall outlet.
- **Battery Power:** For portable use, open the battery compartment on the back. Insert 4 x D-cell batteries (not included) or 2 x 18650 button-top rechargeable lithium-ion batteries (not included). Ensure correct polarity (+/-). Flat-top 18650 batteries are not compatible.

Portable Retro Cassette Player

Rechargeable/Battery/ AC Powered



Weight : 1.5kg / 3.3lb

133mm (5.2 in)

98mm (3.9 in)

308mm (12.1 in)

D Batteries x4
(not included)



US AC Power
(included)

Rechargeable Batteries x2
(not included)



Note:

The 18650 battery compartment **can only accommodate button top battery models**, flat top battery models cannot be connected to power.

Image: Rear view of the boombox illustrating its dimensions and the battery compartments for D-cell and 18650 batteries, along with the AC power input.



Image: A detailed diagram showing the battery types (D-cell and 18650 button-top) and the AC power connection for the boombox.

3. OPERATING INSTRUCTIONS

3.1 Cassette Playback and Recording

1. **To Play a Cassette:** Press the 'PUSH' button to open the cassette door. Insert a cassette tape with the open edge facing upwards. Close the door. Select 'TAPE' mode using the function switch. Press the 'PLAY' button to begin playback. Use 'STOP', 'FF' (Fast Forward), and 'REW' (Rewind) buttons as needed.
2. **To Record to Cassette:**
 - **From Built-in Microphone:** Insert a blank cassette. Select 'TAPE' mode. Press the 'RECORD' button (red button) along with 'PLAY' simultaneously. The unit will start recording from its internal microphone.
 - **From Radio:** Tune to your desired radio station. Insert a blank cassette. Press 'RECORD' and 'PLAY' simultaneously. The radio broadcast will be recorded onto the cassette.
 - **From External Source (e.g., AUX-in):** Connect an external audio device to the AUX-in port (if available, refer to specifications). Select 'AUX' mode. Insert a blank cassette. Press 'RECORD' and 'PLAY' simultaneously. Play audio from your external device.

Cassette Player & Recorder



Image: A person holding a cassette tape, with the WIITHINK boombox in the foreground showing its open cassette compartment, ready for tape insertion.

3.2 AM/FM/SW Radio

1. Extend the telescopic antenna for optimal reception.
2. Set the function switch to 'RADIO'.
3. Select the desired band: AM, FM, or SW (Shortwave) using the band selector switch.
4. Rotate the 'TUNING' knob to find your desired radio station.



Image: An elderly man smiling while the WIITHINK boombox with its extended antenna is visible on a table, indicating its radio functionality.

3.3 Bluetooth Connectivity

1. Set the function switch to 'BT' (Bluetooth) mode. The unit will enter pairing mode, indicated by an audible prompt or flashing indicator.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'WIITHINK' or a similar name from the list of devices.

4. Once paired, you will hear a confirmation sound. You can now play audio from your device through the boombox.



Image: The WIITHINK boombox on a table, with a hand holding a smartphone displaying a music player interface, illustrating Bluetooth music streaming.

3.4 USB/SD Playback and Recording

1. **To Play from USB/SD:** Insert a USB flash drive into the USB port or an SD card into the SD card slot. Set the function switch to 'USB/SD' mode. The unit will automatically detect and begin playing compatible audio files (MP3, WAV, AAC, WMA).
2. **To Record to USB/SD (MP3 Conversion):**
 - Insert a USB flash drive or SD card.
 - Select the source you wish to record from (Cassette, Radio, or Microphone).
 - Press and hold the 'RECORD' button on the MP3 player section. The unit will start recording the audio source directly to the USB/SD card in MP3 format.
 - Recordings are typically saved in a directory named 'AB_REC' with filenames like AUX00xx.MP3 (for external/cassette/radio) or MIC00xx.MP3 (for microphone).

USB Player & Recorder

Combining classic cassette playback with modern USB technology. record every beautiful moment in life.



Image: The WIITHINK boombox on a wooden surface, with a USB flash drive inserted into its port, demonstrating its USB playback and recording capability.

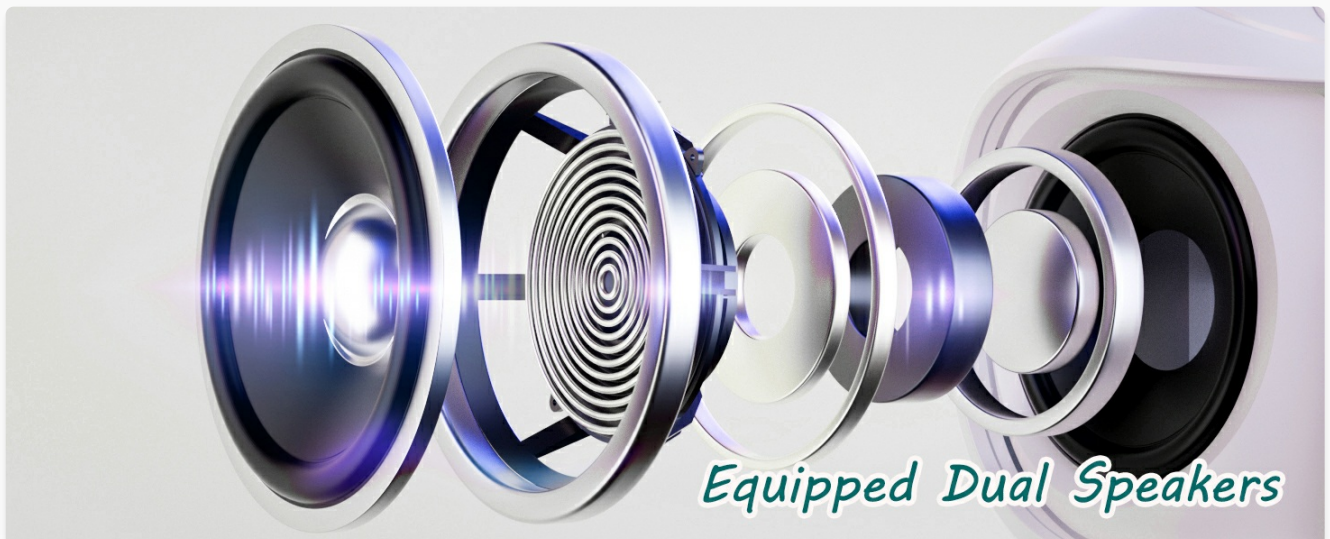 


Image: A diagram illustrating various recording options: Tape to USB, USB to Tape, and Radio to Tape, highlighting the versatility of the boombox's recording functions.

3.5 Headphone Use

To enjoy private listening, plug your 3.5mm headphones into the headphone jack located on the unit. The internal speakers will automatically mute when headphones are connected.

Earphone Jack

Enjoy your personal listening time



Image: A young woman wearing headphones, smiling and looking upwards, with the WIITHINK boombox visible on a table, demonstrating the use of the earphone jack for personal listening.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Cassette Head Cleaning:** Regularly clean the cassette tape heads, pinch roller, and capstan with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and prevent tape damage.
- **Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cable not connected properly; Batteries drained or inserted incorrectly.	Check AC cable connection; Replace batteries or ensure correct polarity.
Poor radio reception	Antenna not extended; Weak signal area.	Fully extend the telescopic antenna; Reposition the unit for better signal.
Cassette playback distorted or muffled	Tape heads are dirty; Worn out tape.	Clean tape heads, pinch roller, and capstan; Try a different tape.
Bluetooth not pairing	Unit not in pairing mode; Device too far; Already paired with another device.	Ensure unit is in BT mode; Move device closer; Disconnect from other devices.
USB/SD not playing	Incorrect file format; USB/SD card not inserted correctly or corrupted.	Ensure files are compatible (MP3, WAV, AAC, WMA); Reinsert USB/SD; Try a different card/drive.
Recording quality is poor	Source volume too low; Dirty tape heads (for cassette recording); Microphone too far from source.	Increase source volume; Clean tape heads; Position microphone closer to sound source.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	WIITHINK
Model Number	WTB-795S-Black
Colour	White
Connectivity Technology	Bluetooth, USB
Compatible Devices	MP3 Player, Smartphone
Supported Audio Formats	Cassette, MP3, WAV, AAC, WMA
Speaker Type	Stereo
Wattage	10 watts (2 x 5W)
Speaker Surround Sound Channel Configuration	2.0
Power Source	Corded Electric / Battery Powered

Feature	Specification
Product Dimensions (L x W x H)	27.94 x 12.7 x 5.08 cm (10.99 x 5 x 2 inches)
Item Weight	1.51 kg (3.33 lbs)
Batteries Required	No (for AC operation); Yes (for battery operation - 4x D-cell or 2x 18650 button-top)

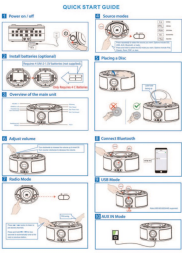 

7. WARRANTY AND SUPPORT



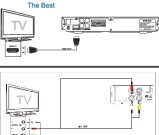 
This product comes with a standard manufacturer's warranty. For specific warranty details, duration, and terms, please refer to the documentation included with your purchase or visit the official WIITHINK website. If you encounter any issues or require technical assistance, please contact WIITHINK customer support through their official channels. You can typically find contact information on the product packaging, the WIITHINK brand store on Amazon, or their official website.

WIITHINK Store Link: <https://www.amazon.ca/stores/WIITHINKCDPlayer/page/58D472AC-5AC0-4762-9B43-106A71731F34>

© 2025 WIITHINK. All rights reserved.

Related Documents - WTB-795S-Black

	<p>Quick Start Guide for WTB-791 CD Radio Boombox</p> <p>A quick start guide for the WTB-791 CD Radio Boombox, detailing power on/off, battery installation, unit overview, source modes, placing a disc, adjusting volume, radio mode, Bluetooth connection, USB mode, and AUX IN mode.</p>
	<p>WISCENT WTB-791 Portable CD Boombox Instruction Manual</p> <p>User manual for the WISCENT WTB-791 Portable CD Boombox, covering setup, operation, features like FM radio, CD playback, Bluetooth, AUX, and USB. Includes technical specifications and warranty information.</p>

<p>EN</p> <p>User's Guide</p>	<p>Shenzhen Wanaka WTB-797 Portable CD Player User Manual</p> <p>This user manual provides comprehensive instructions for the Shenzhen Wanaka WTB-797 portable CD player with Bluetooth. Learn how to operate the device, connect various audio sources, utilize its features, and troubleshoot common issues.</p>
<p> RP315 Record Player HQ Black Ref. n. 100105</p> <p></p> <p>INSTRUCTION MANUAL GEBRUIKSAANWIJZING BEDIJNINGSAANLEIDING MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS</p> <p>91.0</p>	<p>Audizio RP315 Record Player HQ Black Instruction Manual</p> <p>Comprehensive instruction manual for the Audizio RP315 Record Player HQ Black, covering setup, operation, Bluetooth connectivity, and technical specifications. Learn how to use your turntable safely and effectively.</p>
<p>WTB-978 Blu-ray Disc™ Player WISCENT</p> <p>1. CONNECT TO THE TV</p> <p>The Best</p> <p></p> <p>2. USE THE REMOTE CONTROL</p> <p>Insert the remote control batteries.</p> <ol style="list-style-type: none">1. Remove the battery compartment cover. Insert two AAA-size batteries. Make sure the batteries match the diagram inside the compartment.2. Push the cover until you hear a "click".3. When using the remote control, point it at the main unit's remote sensor as shown. <p>Always support your!</p>	<p>WISCENT WTB-978 Blu-ray Disc Player Quick Start Guide</p> <p>Learn how to connect and operate your WISCENT WTB-978 Blu-ray Disc Player with this comprehensive quick start guide. Includes remote control functions and setup instructions.</p>