

MOMAX BR10

MOMAX Key Finder Tracker Tag BR10 User Manual

Model: BR10

1. INTRODUCTION

The MOMAX Key Finder Tracker Tag BR10 is an Apple MFi Certified smart Bluetooth tracking device designed to help you locate your valuable items. It integrates with Apple's Find My network, allowing you to track items like keys, wallets, luggage, and backpacks using your iOS devices.

Key Features:

- **Apple Find My Network Integration:** Track your items in real-time using the Find My app on your iPhone, iPad, or Mac (iOS 17+ required for sharing).
- **Loud Ring Alert:** Trigger an 80dB sound alert from the tracker within a 65ft (20m) range to quickly locate nearby items.
- **Lost Mode:** Receive notifications if your item is out of range and leverage the global Apple Find My network for long-distance tracking.
- **Replaceable Battery:** Features a CR2032 battery with up to 12 months of life, easily replaceable by the user.
- **Personalization:** Includes DIY stickers for customizing your tracker.
- **Privacy and Security:** Location data is encrypted and anonymous, ensuring your privacy.



Image: MOMAX Key Finder Tracker Tag shown with keys and an iPhone displaying the Find My app interface.

2. SETUP

2.1. Battery Installation

The MOMAX Key Finder Tracker Tag uses a replaceable CR2032 coin cell battery. The battery is typically pre-installed, but you may need to replace it after approximately 12 months of use.

1. Locate the small groove on the back cover of the tracker.
2. Use a lid opener or a similar flat tool to align with the groove.
3. Rotate the lid opener counter-clockwise to open the back cover.
4. Remove the old CR2032 battery (if replacing).
5. Insert a new CR2032 battery with the positive (+) side facing up.
6. Align the back cover and rotate clockwise until it is securely closed.



Privacy protection



DIY stickers



Up to one year



Shared with Family
(iOS 17)



CR2032 Replaceable
battery



Max 32 at the same
time



Siri



Image: Detailed view of hands replacing the CR2032 battery in the MOMAX Key Finder Tracker Tag.

2.2. Connecting to Apple Find My

Follow these steps to connect your MOMAX Key Finder Tracker Tag to your iPhone, iPad, or Mac using the Find My app.

1. Ensure Bluetooth is enabled on your iOS device.
2. Open the **Find My** app.
3. Navigate to the **Items** tab.
4. Tap **Add Item**, then select **Other Supported Item**.
5. The app will search for nearby items. Once "MOMAX BR10" appears, tap **Connect**.
6. Name your item and choose an emoji to represent it.
7. Read and agree to the terms and conditions.
8. Tap **Finish** to complete the setup.

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step process of connecting the MOMAX Key Finder Tracker Tag to an iPhone using the Apple Find My application.

3. OPERATING INSTRUCTIONS

3.1. Locating Your Item

To find your item, open the Find My app on your iOS device. The app will display the last known location of your MOMAX Tracker Tag on a map.

Tracking via Map Miles Away



Image: An iPhone showing the Find My map interface, indicating the location of a MOMAX Tracker Tag.

3.2. Playing a Sound Alert

If your item is nearby (within approximately 65 feet or 20 meters), you can make the tracker play a loud sound to help you pinpoint its exact location.

1. In the Find My app, select your MOMAX Tracker Tag.
2. Tap the **Play Sound** option. The tracker will emit an 80dB sound.
3. Tap **Stop Sound** once you have located your item.

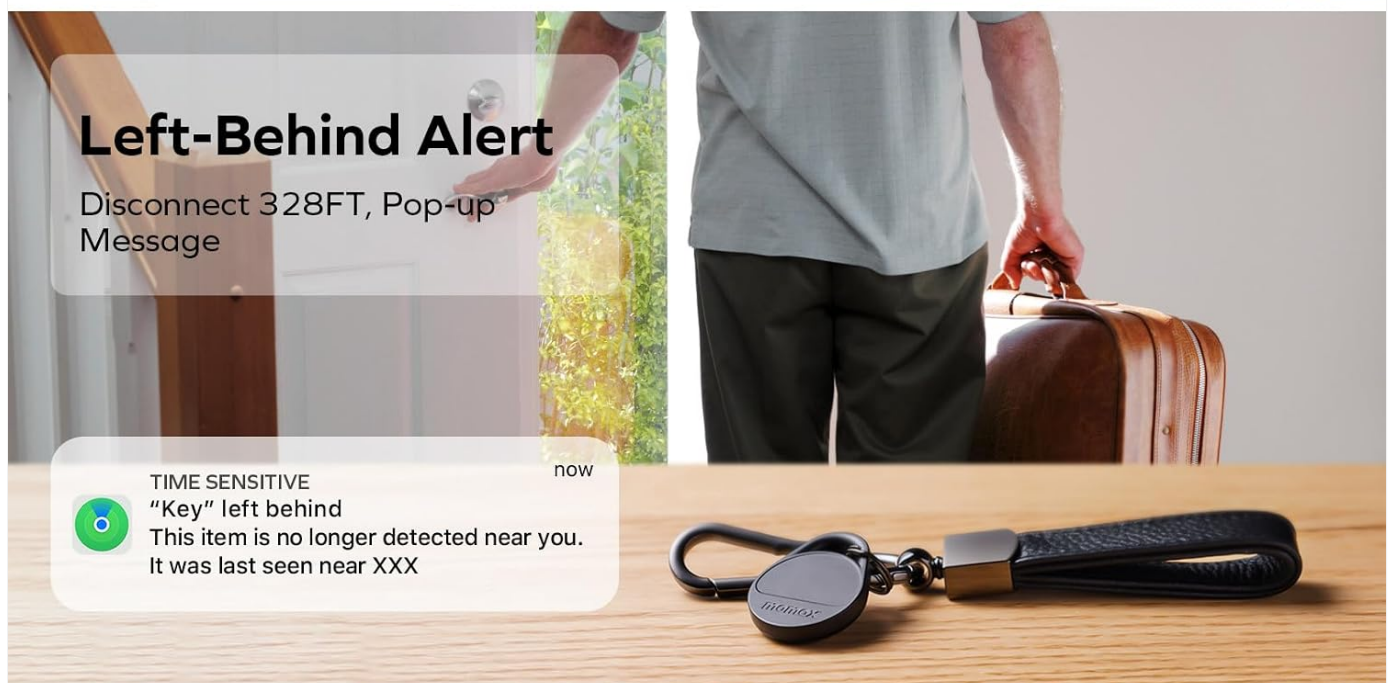
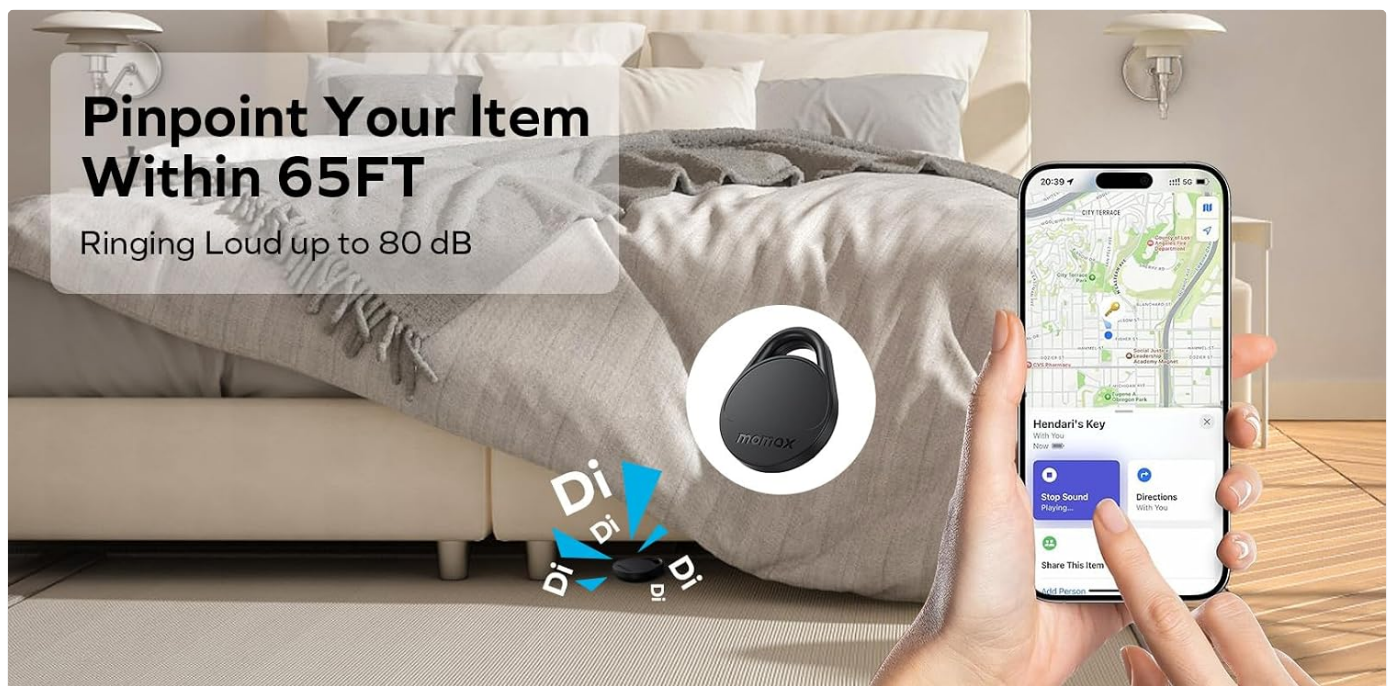


Image: A MOMAX Tracker Tag is shown under a bed, indicating its sound alert feature, alongside an iPhone displaying the 'Play Sound' option in the Find My app.

3.3. Using Lost Mode

If your item is lost and out of Bluetooth range, you can enable Lost Mode in the Find My app.

1. In the Find My app, select your MOMAX Tracker Tag.
2. Scroll down and enable **Lost Mode**.
3. You can enter a phone number and a message that will be displayed to anyone who finds your item and scans it.
4. You will receive a notification when your item's location is updated by another Apple device on the Find My network.

3.4. Sharing Your Item

With iOS 17 or later, you can share access to your MOMAX Tracker Tag with up to 5 other Apple users. This allows multiple people to track the same item.

1. In the Find My app, select your MOMAX Tracker Tag.
2. Scroll down to **Share This Item** and tap **Add Person**.

3. Select the contacts you wish to share with.

4. MAINTENANCE

4.1. Battery Replacement

Refer to section 2.1 for detailed instructions on how to replace the CR2032 battery. It is recommended to check the battery status periodically within the Find My app.

4.2. Personalizing with DIY Stickers

The MOMAX Key Finder Tracker Tag comes with 10 DIY stickers, allowing you to personalize your tracker and easily identify it among multiple tags.

1. Choose a sticker that best represents the item you are tracking (e.g., keys, luggage, wallet).
2. Peel the chosen sticker from the sheet.
3. Carefully apply the sticker to the smooth surface of your MOMAX Tracker Tag.



Replace Battery



Align the lid opener with the groove on the back, rotate counterclockwise, open the back cover

Image: A MOMAX Key Finder Tracker Tag shown with a sheet of DIY stickers and an example of a personalized tag attached to a

keychain.

Your browser does not support the video tag.

Video: This video demonstrates how to apply the DIY personalized stickers to the MOMAX Key Finder Tracker Tag.

5. TROUBLESHOOTING

5.1. Cannot Search for Item Tags

If you are experiencing issues with your iOS device not being able to find your MOMAX Tracker Tag, try the following steps:

- 1. Reset Item Finder:**
 - a. Take out the battery from the tracker.
 - b. Put the battery back in. The tracker should emit a "Di" sound.
 - c. Repeat the operation of taking out and putting in the battery 5 times. After the 5th time, a "Di Di" sound will be emitted when installing the battery, indicating a successful reset.
- 2. Restart Your Phone:** After resetting the item finder, restart your iOS device.
3. Attempt to connect the tracker again following the steps in section 2.2.

Your browser does not support the video tag.

Video: This video provides solutions for common issues, specifically demonstrating how to reset the MOMAX Key Finder Tracker Tag if it cannot be found by your device.

6. SPECIFICATIONS

Brand	MOMAX
Model Number	BR10
Material	Plastic
Product Dimensions	1.6"L x 1.26"W x 0.35"Th
Item Weight	0.04 Kilograms
Battery Type	1 CR2032 battery (included)
Battery Life	Up to 12 months
Compatible Devices	iPhone, iPad, Mac (iOS 17+ for sharing)
Control Method	App, Voice (Siri)
Range (Sound Alert)	Up to 65 Feet (20m)

7. WARRANTY AND SUPPORT

The MOMAX Key Finder Tracker Tag BR10 comes with a **1 Year Manufacturer Warranty**. For technical support, troubleshooting assistance, or warranty claims, please contact MOMAX customer service through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question