

HP 714J3B#629

HP Envy 6110e All-in-One Color Inkjet Printer User Manual

Model: 714J3B#629 | Brand: HP

1. INTRODUCTION

Welcome to the user manual for your HP Envy 6110e All-in-One Printer. This document provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your device. The HP Envy 6110e is designed for versatile use, offering high-quality color inkjet printing, scanning, and copying functionalities, making it ideal for home and small office environments. It supports wireless connectivity and is compatible with HP Instant Ink for convenient ink delivery.

2. SAFETY INFORMATION

Please read all safety instructions before using your printer to prevent damage or injury. Keep the printer away from water and excessive heat. Do not block ventilation openings. Use only the power adapter supplied with the printer. Do not attempt to service the printer yourself; refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Before you begin, ensure all items are present in the box:

- HP Envy 6110e All-in-One Printer
- HP Setup Ink Cartridges (Black and Tri-color)
- Power Cord
- Setup Guide
- Regulatory Flyer

4. SETUP

4.1 Unpacking and Placement

Carefully remove the printer from its packaging. Remove all tape and packing materials from the exterior and interior of the printer. Place the printer on a stable, flat surface with adequate space for ventilation and paper trays.



Image: Front view of the HP Envy 6110e printer, showing its compact design.

4.2 Power Connection

Connect the power cord to the back of the printer and then to a wall outlet. Press the Power button to turn on the printer.

4.3 Ink Cartridge Installation

Open the ink cartridge access door. Wait for the carriage to stop moving. Insert the black and tri-color cartridges into their respective slots until they click into place. Close the access door.

4.4 Loading Paper

Pull out the input tray. Slide the paper width guides outward. Load a stack of plain white paper into the tray, print-side down. Adjust the paper width guides inward until they rest against the edges of the paper. Push the input tray back into the printer.



Image: The HP Envy 6110e printer with its paper input tray extended, ready for paper loading.

4.5 Software Installation and Network Connection

Download the HP Smart app from your device's app store or visit hpsmart.com. Follow the on-screen instructions in the app to connect your printer to your Wi-Fi network and complete the setup process. The app will guide you through driver installation and printer registration.



Image: A close-up view of the HP Envy 6110e's control panel, showing the touch screen display with menu, copy, and scan options.

5. OPERATING INSTRUCTIONS

5.1 Printing from a Computer or Mobile Device

Ensure your printer is connected to the same network as your computer or mobile device. Open the document or photo you wish to print. Select the print option from the application. Choose your HP Envy 6110e printer from the list of available printers. Adjust print settings (e.g., paper size, quality, color/grayscale, duplex) as needed and click Print.

5.2 Copying Documents

Place the original document face-down on the scanner glass or face-up in the automatic document feeder (if available). On the printer's control panel, select the 'Copy' option. Choose between color or black & white copy and adjust the number of copies. Press the Start Copy button.



Image: The HP Envy 6110e's control panel with its illuminated touch buttons for various functions.

5.3 Scanning Documents or Photos

Place the original document face-down on the scanner glass. Open the HP Smart app on your computer or mobile device. Select the 'Scan' option. Choose your scan settings (e.g., resolution, file type, destination). Click Scan to begin the process. The scanned image will be saved to your specified location.



Image: Top view of the HP Envy 6110e printer with the scanner lid open, revealing the scanner glass.

5.4 Duplex Printing (Two-Sided)

When printing from your computer, select the print option. In the print dialog box, look for a 'Two-sided' or 'Duplex' printing option. Select 'Long-edge binding' or 'Short-edge binding' depending on your document orientation. Confirm your settings and print.

6. MAINTENANCE

6.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, the printer will notify you. Purchase genuine HP replacement cartridges. Open the ink cartridge access door, wait for the carriage to stop, press down on the old cartridge to release it, and pull it out. Remove the new cartridge from its packaging, remove the protective tape, and insert it into the correct slot until it clicks. Close the access door.

6.2 Cleaning the Printer

Regularly clean the exterior of the printer with a soft, lint-free cloth. For the scanner glass, use a glass cleaner applied to a cloth (not directly to the glass) to avoid streaks. Do not use abrasive cleaners. You can also perform printhead cleaning and alignment from the printer's control panel or the HP Smart app if print quality issues arise.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your HP Envy 6110e printer.

- **Printer Not Responding:** Check power connections, ensure the printer is turned on, and verify network connectivity. Restart both the printer and your computer/router.
- **Print Quality Issues:** Perform a printhead cleaning and alignment from the printer's maintenance menu or HP Smart app. Check ink levels and replace low cartridges. Ensure you are using appropriate paper for your print settings.
- **Paper Jams:** Carefully open all access doors and remove any jammed paper. Ensure paper is loaded correctly and not overfilled in the tray.
- **Connectivity Problems:** Ensure your Wi-Fi network is active and the printer is within range. Reconnect the printer to the network via the HP Smart app if necessary.
- **Scanner Not Working:** Ensure the scanner lid is fully closed. Check connections if using a USB cable. Restart the printer and scanning application.

For more detailed troubleshooting, refer to the HP support website or the HP Smart app.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions	41P x 17l x 48,5H centimeters
Controller Type	Application
Maximum Media Size	A4
Included Components	User manual, cable or plug
Print Media	Glossy photo paper
Scanner Type	Flatbed
Max Sheet Feeding Capacity	100
Max Copy Speed (Black & White)	30 Pages per minute
Display Type	LCD
Compatible Devices	Standard
Max Color Print Resolution	4800 x 1200 dots per inch
Sheet Size	A4 Centimeters
Max Black & White Print Resolution	1200 x 1200 dots per inch
Color Depth	Input color depth: 24Bit
Duplex Printing	Yes
Max Copies per Series	99
Screen Size	5 Inches
Connections	USB Wi-Fi

Special Features	Secure
Battery Composition	Lithium-ion
Item Model Number	714J3B#629
Date First Available on Amazon.com.be	October 2, 2024
Battery(ies)	1 AAAA - included
No Longer Produced by Manufacturer	No
Language	German (Manual content is in English)
Manufacturer	HP
Brand	HP
Connectivity Technology	USB
Print Technology	Inkjet
Color	White
Model Name	714J3B#629
Printer Output	Color
Max Print Speed (Color)	15 Pages per minute
Max Monochrome Print Speed	30 Pages per minute
Item Weight	4.6 Kilograms

9. WARRANTY AND SUPPORT

Your HP Envy 6110e printer comes with **a three-year warranty against manufacturing defects**. For technical support, driver downloads, and additional resources, please visit the official HP support website. You can also find helpful information and troubleshooting tips within the HP Smart app.

For further assistance, please contact HP Customer Support with your printer's model number (714J3B#629) and serial number ready.