

[Manuals.plus](#) /

› [BEBEMOKO](#) /

› BEBEMOKO Microwave Egg Cooker User Manual

BEBEMOKO B0DKDQFMSR

BEBEMOKO Microwave Egg Cooker User Manual

Model: B0DKDQFMSR

INTRODUCTION

Thank you for choosing the BEBEMOKO Microwave Egg Cooker. This manual provides essential information for the safe and effective use of your new egg cooker. Please read it thoroughly before first use and retain it for future reference.



Image: The BEBEMOKO Microwave Egg Cooker in its closed position, showcasing its compact and simple design.

PRODUCT SPECIFICATIONS

Brand	BEBEMOKO
Model	B0DKDQFMSR
Material	Plastic
Color	White
Product Dimensions	6.5 x 4.53 x 1.18 inches (16.5 x 11.5 x 3 cm)
Item Weight	1.28 ounces (0.08 lbs)



Image: The BEBEMOKO Microwave Egg Cooker shown with its approximate dimensions: 6.4 inches (16.5 cm) in length and 4.5 inches (11.5 cm) in width.

SAFETY PRECAUTIONS

- Always ensure the egg cooker is clean before and after each use.
- Do not overfill the egg compartments.
- Use caution when removing the egg cooker from the microwave as it will be hot. Use oven mitts or a towel.
- Allow the cooker to cool slightly before opening the lid to prevent steam burns.
- This product is designed for microwave use only. Do not use in conventional ovens, on stovetops, or under a broiler.
- Keep out of reach of children.

SETUP AND FIRST USE

Before using your BEBEMOKO Microwave Egg Cooker for the first time, wash it thoroughly with warm, soapy water. Rinse well and dry completely.

1. Open the egg cooker by lifting the lid.
2. Place one egg into each designated compartment.
3. Add a small amount of water (approximately 1-2 tablespoons) to each compartment, or as desired for your preferred egg consistency.
4. Close the lid securely.

OPERATING INSTRUCTIONS

The BEBEMOKO Microwave Egg Cooker is designed for quick and easy egg preparation. Cooking times may vary depending on your microwave's wattage and desired egg consistency.

Basic Egg Cooking Steps:

1. Prepare the egg cooker as described in the "Setup and First Use" section.
2. Place the closed egg cooker into your microwave.
3. Microwave on high power for approximately 30-60 seconds for soft-boiled eggs, or 60-90 seconds for harder consistency. Adjust time as needed.
4. Carefully remove the hot egg cooker from the microwave using protective mitts.
5. Allow to cool for 10-15 seconds before opening the lid to release steam.
6. Serve the cooked eggs.



Image: The BEBEMOKO Microwave Egg Cooker open, positioned next to a plate with two perfectly cooked poached eggs and fresh tomatoes, demonstrating a ready breakfast.



Image: The BEBEMOKO Microwave Egg Cooker with its lid open, revealing two sunny-side-up eggs cooked directly within its compartments, ready for serving.

MAINTENANCE AND CARE

Proper care will extend the life of your BEBEMOKO Microwave Egg Cooker.

- **Cleaning:** The egg cooker is dishwasher safe. For best results, wash immediately after use to prevent egg residue from drying. Alternatively, wash by hand with warm, soapy water and a soft sponge.
- **Storage:** Store in a clean, dry place when not in use.
- **Material Care:** Avoid using abrasive cleaners or scouring pads, as these can scratch the plastic surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs are undercooked.	Insufficient cooking time or low microwave power.	Increase microwave cooking time by 10-15 second increments until desired consistency is achieved. Check your microwave's wattage.
Eggs are overcooked/rubbery.	Excessive cooking time or high microwave power.	Decrease microwave cooking time by 10-15 second increments.
Egg sticks to the cooker.	Not enough water added, or cooker not properly cleaned.	Ensure a small amount of water is added to each compartment. Clean the cooker thoroughly after each use. A light spray of cooking oil can also help.

WARRANTY AND SUPPORT

For warranty information or product support, please contact BEBEMOKO customer service through the retailer where the product was purchased or visit the official BEBEMOKO store on Amazon:

[Visit the BEBEMOKO Store on Amazon](#)

Please have your product model number (B0DKDQFMSR) available when contacting support.